BLADE OS™

Application Guide

RackSwitch™ G8000

Version 5.1

Part Number: BMD00136_rev 1, November 2009

BLADE NETWORK TECHNOLOGIES

2350 Mission College Blvd.
Suite 600
Santa Clara, CA 95054
www.bladenetwork.net

Copyright © 2010 Blade Network Technologies, Inc., 2350 Mission College Blvd., Suite 600, Santa Clara, California, 95054, USA. All rights reserved. Part Number: BMD00136.

This document is protected by copyright and distributed under licenses restricting its use, copying, distribution, and decompilation. No part of this document may be reproduced in any form by any means without prior written authorization of Blade Network Technologies, Inc. Documentation is provided “as is” without warranty of any kind, either express or implied, including any kind of implied or express warranty of non-infringement or the implied warranties of merchantability or fitness for a particular purpose.

U.S. Government End Users: This document is provided with a “commercial item” as defined by FAR 2.101 (Oct. 1995) and contains “commercial technical data” and “commercial software documentation” as those terms are used in FAR 12.211-12.212 (Oct. 1995). Government End Users are authorized to use this documentation only in accordance with those rights and restrictions set forth herein, consistent with FAR 12.211- 12.212 (Oct. 1995), DFARS 227.7202 (JUN 1995) and DFARS 252.227-7015 (Nov. 1995).

BLADE Network Technologies, Inc. reserves the right to change any products described herein at any time, and without notice. BLADE Network Technologies, Inc. assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by BLADE Network Technologies, Inc. The use and purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of BLADE Network Technologies, Inc.

BLADE Network Technologies, the BLADE logo, BLADEHarmony, BNT, NMotion, RackSwitch, Rackonomics, RackSwitch Solution Partner, ServerMobility, SmartConnect and VMready are trademarks of BLADE Network Technologies. All other names or marks are property of their respective owners.

Originated in the USA.

Contents

Preface ■ 11

Who Should Use This Guide ■ 11
What You'll Find in This Guide ■ 11
Typographic Conventions ■ 13
How to Get Help ■ 14

Chapter 1: Accessing the Switch ■ 15

Configuring an IP Interface ■ 15
Using Telnet ■ 17
- BOOTP Relay Agent ■ 17
- DHCP Relay Agent ■ 18

Using the Browser-Based Interface ■ 19
- Configuring BBI access via HTTP ■ 19
- Configuring BBI access via HTTPS ■ 20

Using SNMP ■ 22
- SNMP v1, v2 ■ 22
- SNMP v3.0 ■ 22
- Configuring SNMP Trap Hosts ■ 24

Securing Access to the Switch ■ 27
- RADIUS Authentication and Authorization ■ 27
- TACACS+ Authentication ■ 31
- LDAP Authentication and Authorization ■ 34
- Secure Shell ■ 36
- End User Access Control ■ 38

Chapter 2: Port-based Network Access Control ■ 41

Extensible Authentication Protocol over LAN ■ 41
- 802.1X Authentication Process ■ 42
- 802.1X Port States ■ 44

Supported RADIUS Attributes ■ 45
Configuration Guidelines ■ 46

Chapter 3: VLANs ■ 47
Overview ■ 47
VLANs and Port VLAN ID Numbers ■ 48
VLAN Numbers ■ 48
PVID Numbers ■ 48
VLAN Tagging ■ 50
VLAN Topologies and Design Considerations ■ 54
VLAN Configuration Rules ■ 54
Multiple VLANs with Tagging Adapters ■ 55
VLAN Configuration Example ■ 57
Protocol-Based VLANs ■ 58
Port-Based vs. Protocol-Based VLANs ■ 59
PVLAN Priority Levels ■ 59
PVLAN Tagging ■ 59
PVLAN Configuration Guidelines ■ 60
Configuring PVLAN ■ 60
Private VLANs ■ 61
Private VLAN Ports ■ 62
Configuration Guidelines ■ 62
Configuration Example ■ 63

Chapter 4: Ports and Trunking ■ 65
Overview ■ 65
Statistical Load Distribution ■ 65
Built-In Fault Tolerance ■ 66
Before You Configure Static Trunks ■ 66
Static Trunk Group Configuration Rules ■ 67
Port Trunking Example ■ 68
Configurable Trunk Hash Algorithm ■ 69
Link Aggregation Control Protocol ■ 70
LACP Configuration Guidelines ■ 72
Configuring LACP ■ 72

Chapter 5: Spanning Tree Group ■ 73
STG Overview ■ 73
Bridge Protocol Data Units (BPDUs) ■ 74
BDPU Overview ■ 74
Determining the Path for Forwarding BPDUs ■ 75
Spanning Tree Group Guidelines ■ 76
Adding a VLAN to a Spanning Tree Group ■ 76
Creating a VLAN ■ 76
Rules for VLAN Tagged Ports ■ 77
Adding and Removing Ports from STGs ■ 77
Multiple Spanning Trees ■ 78
Default Spanning Tree Configuration ■ 78
Why Do We Need Multiple Spanning Trees? ■ 78
Spanning Tree with ISLs ■ 80
Multiple Spanning Tree Group Protocol ■ 81
MSTP Region ■ 81
Common Internal Spanning Tree ■ 81
MSTP Configuration Guidelines ■ 82
Port Fast Forwarding ■ 84
Fast Uplink Convergence ■ 84
Hot Links ■ 85
Forward Delay ■ 85
Pre-emption ■ 85
FDB Update ■ 85
Configuration Guidelines ■ 86
Configuring Hot Links ■ 86

Chapter 6: Link Layer Discovery Protocol ■ 87
LLDP Overview ■ 87
Enabling or Disabling LLDP ■ 88
Global LLDP Setting ■ 88
Transmit and Receive Control ■ 88
LLDP Transmit Features ■ 89
Scheduled Interval ■ 89
Minimum Interval ■ 89
Time-to-Live for Transmitted Information ■ 90
Trap Notifications ■ 90
Changing the LLDP Transmit State ■ 91
Types of Information Transmitted ■ 91

LLDP Receive Features ■ 93
Types of Information Received ■ 93
Viewing Remote Device Information ■ 93
Time-to-Live for Received Information ■ 94
LLDP Example Configuration ■ 95

Chapter 7: Quality of Service ■ 97
QoS Overview ■ 97
Using ACL Filters ■ 99
Summary of Packet Classifiers ■ 99
Summary of ACL Actions ■ 101
ACL Port Mirroring ■ 101
ACL Order of Precedence ■ 101
ACL Groups ■ 102
Assigning ACLs to a Port ■ 103
ACL Metering and Re-Marking ■ 104
Viewing ACL Statistics ■ 105
ACL Configuration Examples ■ 105
Using Storm Control Filters ■ 106
Broadcast Storms ■ 106
Configuring Storm Control ■ 106
Using DSCP Values to Provide QoS ■ 108
Differentiated Services Concepts ■ 108
Per-Hop Behavior ■ 109
QoS Levels ■ 110
DSCP Re-Marking and Mapping ■ 111
Using 802.1p Priorities to Provide QoS ■ 112
Queuing and Scheduling ■ 113

Chapter 8: Basic IP Routing ■ 115
IP Routing Benefits ■ 115
Routing Between IP Subnets ■ 115
Example of Subnet Routing ■ 117
Using VLANs to Segregate Broadcast Domains ■ 118
Configuration Example ■ 118
ECMP Static Routes ■ 121
OSPF Integration ■ 121
ECMP Route Hashing ■ 121
Configuring ECMP Static Routes ■ 121

Dynamic Host Configuration Protocol ■ 122
DHCP Relay Agent ■ 123

Chapter 9: Routing Information Protocol ■ 125
Distance Vector Protocol ■ 125
Stability ■ 125
Routing Updates ■ 126
RIPv1 ■ 126
RIPv2 ■ 126
RIPv2 in RIPv1 compatibility mode ■ 126
RIP Features ■ 127
RIP Configuration Example ■ 128

Chapter 10: Border Gateway Protocol ■ 131
Internal Routing Versus External Routing ■ 131
Forming BGP Peer Routers ■ 133
What is a Route Map? ■ 133
Incoming and Outgoing Route Maps ■ 134
Precedence ■ 135
Configuration Overview ■ 135
Aggregating Routes ■ 137
Redistributing Routes ■ 137
BGP Attributes ■ 138
Selecting Route Paths in BGP ■ 139
BGP Failover Configuration ■ 140
Default Redistribution and Route Aggregation Example ■ 142

Chapter 11: OSPF ■ 145
OSPF Overview ■ 145
Types of OSPF Areas ■ 146
Types of OSPF Routing Devices ■ 147
Neighbors and Adjacencies ■ 148
The Link-State Database ■ 148
The Shortest Path First Tree ■ 149
Internal Versus External Routing ■ 149
OSPF Implementation in BLADE OS ■ 150
Configurable Parameters ■ 150
Defining Areas ■ 151
Interface Cost ■ 153

Electing the Designated Router and Backup ■ 153
Summarizing Routes ■ 153
Default Routes ■ 154
Virtual Links ■ 155
Router ID ■ 156
Authentication ■ 156
Host Routes for Load Balancing ■ 159
OSPF Features Not Supported in This Release ■ 159
OSPF Configuration Examples ■ 160
Example 1: Simple OSPF Domain ■ 161
Example 2: Virtual Links ■ 163
Example 3: Summarizing Routes ■ 167
Verifying OSPF Configuration ■ 169

Chapter 12: IPv6 Host Management ■ 171
IPv6 Address Format ■ 171
IPv6 Address Types ■ 172
IPv6 Address Autoconfiguration ■ 173
IPv6 Interfaces ■ 174
Neighbor Discovery ■ 175
Supported Applications ■ 176
Unsupported Features ■ 177
Configuration Guidelines ■ 178
IPv6 Configuration Examples ■ 179

Chapter 13: IGMP ■ 181
IGMP Snooping ■ 181
FastLeave ■ 182
IGMPv3 Snooping ■ 183
IGMP Snooping Configuration Example ■ 184
Static Multicast Router ■ 185
IGMP Relay ■ 186
Configuration Guidelines ■ 186
Configure IGMP Relay ■ 187
IGMP Filtering ■ 188

Chapter 14: High Availability ■ 191
Layer 2 Failover ■ 192
Uplink Failure Detection Migration ■ 192
Monitoring Trunk Links ■ 192
Setting the Failover Limit ■ 193
Manually Monitoring Port Links ■ 193
L2 Failover with Other Features ■ 194
Configuration Guidelines ■ 195
Configuring Layer 2 Failover ■ 195
VRRP Overview ■ 196
VRRP Components ■ 196
VRRP Operation ■ 197
Selecting the Master VRRP Router ■ 198
Failover Methods ■ 198
Active-Active Redundancy ■ 199
Virtual Router Group ■ 199
BLADE OS Extensions to VRRP ■ 200
Virtual Router Deployment Considerations ■ 201
High Availability Configurations ■ 202
Active-Active Configuration ■ 202

Appendix A: Monitoring Ports ■ 207
Port Mirroring Behavior ■ 208
Configuring Port Mirroring ■ 208

Index ■ 209

Preface

The RackSwitch G8000 *Application Guide* describes how to configure and use the software on the RackSwitch G8000 switch. For documentation about installing the switch physically, see the *Installation Guide* for your switch.

Who Should Use This Guide

This *Application Guide* is intended for network installers and system administrators engaged in configuring and maintaining a network. The administrator should be familiar with Ethernet concepts, IP addressing, Spanning Tree Protocol, and SNMP configuration parameters.

What You'll Find in This Guide

This guide will help you plan, implement, and administer BLADE OS software. Where possible, each section provides feature overviews, usage examples, and configuration instructions.

- Chapter 1, "Accessing the Switch," describes how to access the switch to perform administration tasks. This chapter also discusses different methods to manage the switch for remote administrators using specific IP addresses, authentication, and Secure Shell (SSH).
- Chapter 2, "Port-based Network Access Control," describes how to authenticate devices attached to a LAN port that has point-to-point connection characteristics. It prevents access to ports that fail authentication and authorization. This feature provides security for switch ports.
- Chapter 3, "VLANs," describes how to configure Virtual Local Area Networks (VLANs) for creating separate network segments, including how to use VLAN tagging for devices that use multiple VLANs. This chapter also describes Private VLANs.
- Chapter 4, "Ports and Trunking," describes how to group multiple physical ports together to aggregate the bandwidth between large-scale network devices.
- Chapter 5, "Spanning Tree Group," discusses how Spanning Trees configure the network so that the switch uses the most efficient path when multiple paths exist.

- Chapter 6, “Link Layer Discovery Protocol,” describes how Link Layer Discovery Protocol helps neighboring network devices learn about each others’ ports and capabilities.
- Chapter 7, “Quality of Service,” discusses Quality of Service features, including IP filtering using Access Control Lists, Differentiated Services, and IEEE 802.1p priority values.
- Chapter 8, “Basic IP Routing,” describes how to configure the switch for IP routing using IP subnets, and DHCP.
- Chapter 9, “Routing Information Protocol,” describes how the BLADE OS software implements standard Routing Information Protocol (RIP) for exchanging TCP/IP route information with other routers.
- Chapter 10, “Border Gateway Protocol,” describes Border Gateway Protocol (BGP) concepts and features supported in BLADE OS.
- Chapter 11, “OSPF,” describes key Open Shortest Path First (OSPF) concepts and their implemented in BLADE OS, and provides examples of how to configure your switch for OSPF support.
- Chapter 12, “IPv6 Host Management,” describes how to configure the switch for IPv6 host management.
- Chapter 13, “IGMP,” describes how the BLADE OS software implements IGMP Snooping to handle multicast traffic efficiently.
- Chapter 14, “High Availability,” describes how to ensure that network resources remain available if one switch is removed for service.
- Appendix A, “Monitoring Ports,” discusses the main tool for troubleshooting your switch—monitoring ports.

Typographic Conventions

The following table describes the typographic styles used in this book.

Table 1 Typographic Conventions

Typeface or Symbol	Meaning	Example
`AaBbCc123`	This type is used for names of commands, files, and directories used within the text.	View the `readme.txt` file.
	It also depicts on-screen computer output and prompts.	`Main#`
`AaBbCc123`	This bold type appears in command examples. It shows text that must be typed in exactly as shown.	`Main#` **`sys`**
<*AaBbCc123*>	This italicized type appears in command examples as a parameter place holder. Replace the indicated text with the appropriate real name or value when using the command. Do not type the brackets.	To establish a Telnet session, enter: `host#` **`telnet`** <*IP address*>
	This also shows book titles, special terms, or words to be emphasized.	Read your *User's Guide* thoroughly.
[ ]	Command items shown inside brackets are optional and can be used or excluded as the situation demands. Do not type the brackets.	`host#` **`ls`** [**`-a`**]

How to Get Help

If you need help, service, or technical assistance, call BLADE Network Technologies Technical Support:

US toll free calls: 1-800-414-5268

International calls: 1-408-834-7871

You also can visit our web site at the following address:

`http://www.bladenetwork.net`

Click the **Support** tab.

The warranty card received with your product provides details for contacting a customer support representative. If you are unable to locate this information, please contact your reseller. Before you call, prepare the following information:

- Serial number of the switch unit
- Software release version number
- Brief description of the problem and the steps you have already taken
- Technical support dump information (`# show tech-support`)

CHAPTER 1

Accessing the Switch

The Blade OS software provides means for accessing, configuring, and viewing information and statistics about the RackSwitch G8000. This chapter discusses different methods of accessing the switch and ways to secure the switch for remote administrators:

- "Configuring an IP Interface" on page 15
- "Using Telnet" on page 17
- "Using the Browser-Based Interface" on page 19
- "Using SNMP" on page 22
- "Securing Access to the Switch" on page 27
  - "RADIUS Authentication and Authorization" on page 27
  - "TACACS+ Authentication" on page 31
  - "End User Access Control" on page 38

Configuring an IP Interface

To manage the switch using Telnet, SNMP, or a Web browser, you must configure an IP interface.

Following are the factory default settings for IP interface 1:

IP address: 192.168.1.211
Mask: 255.255.255.0)
DHCP: `enabled`

When DHCP is enabled, a DHCP server configured in the local network for the switch configures the interface. If the switch fails to renew the address obtained through DHCP, it uses the factory configuration address.

If you manually configure a static IP address, DHCP is disabled. If you manually enable DHCP, the interface will be configured by the DHCP server.

To access the switch, the following IP parameters must be configured:

- IP address
- Subnet mask
- Default gateway address

1. Log on to the switch.
2. Enter IP interface mode.

```
RS G8000> enable
RS G8000# configure terminal
RS G8000 (config)# interface ip 1
```

3. Configure an IP interface, subnet mask, and VLAN assignment. Enable the interface.

```
RS G8000 (config-ip-if)# ip address 10.10.10.2          (example IP address)
RS G8000 (config-ip-if)# ip netmask 255.255.255.0
RS G8000 (config-ip-if)# vlan 1
RS G8000 (config-ip-if)# enable
RS G8000 (config-ip-if)# exit
```

4. Configure the default gateway. Enable the gateway.

```
RS G8000 (config)# ip gateway address 10.10.10.1      (example gateway address)
RS G8000 (config)# ip gateway enable
```

Once you configure the IP address for your switch and you have an existing network connection, you can use the Telnet program from an external management station to access and control the switch.

The G8000 supports a command-line interface (CLI) that you can use to configure and control the switch over the network using the Telnet program. You can use the CLI to perform many basic network management functions. In addition, you can configure the switch for management using an SNMP-based network management system or a Web browser.

For more information about using the CLI, refer to the RackSwitch G8000 *Command Reference*.

Using Telnet

A Telnet connection offers the convenience of accessing the switch from any workstation connected to an interface port. Telnet access provides the same options for user access and administrator access as those available through the console port.

To configure the switch for Telnet access, the switch must have an IP address. The switch can get its IP address in one of two ways:

- Dynamically, from a DHCP server on your network (available only for IP interface 1)
- Manually, when you configure the switch IP address

Once you have configured the switch with an IP address and gateway, you can access the switch from any workstation connected to the management network. Telnet access provides the same options for user and administrator access as those available through the console port.

By default, Telnet access is enabled. Use the following command to disable/enable Telnet access:

```
RS G8000 (config)# [no] access telnet enable
```

To establish a Telnet connection to the switch, you can run the Telnet program on your workstation and issue the Telnet command, followed by the switch IP address:

```
telnet <switch IP address>
```

BOOTP Relay Agent

BOOTP Relay Agent Overview

The G8000 can function as a Bootstrap Protocol relay agent, enabling the switch to forward a client request for an IP address up to two BOOTP servers with IP addresses that have been configured on the switch.

When a switch receives a BOOTP request from a BOOTP client requesting an IP address, the switch acts as a proxy for the client. The request is then forwarded as a UDP Unicast MAC layer message to two BOOTP servers whose IP addresses are configured on the switch. The servers respond to the switch with a Unicast reply that contains the default gateway and IP address for the client. The switch then forwards this reply back to the client.

BOOTP Relay Agent Configuration

To enable the G8000 to be the BOOTP forwarder, you need to configure the BOOTP server IP addresses on the switch, and enable BOOTP relay on the interface(s) on which the BOOTP requests are received.

Generally, you should configure the command on the switch IP interface that is closest to the client, so that the BOOTP server knows from which IP subnet the newly allocated IP address should come.

Use the following commands to configure the switch as a BOOTP relay agent:

```
>> # ip bootp-relay server1 <IP address>
>> # ip bootp-relay server2 <IP address>
>> # ip bootp-relay enable
```

Use the following command to enable the Relay functionality on an IP interface:

```
>> # interface ip <interface number>
>> (config-ip-if)# relay
```

DHCP Relay Agent

DHCP Relay Agent Overview

DHCP is described in RFC 2131, and the DHCP relay agent supported on the G8000 is described in RFC 1542. DHCP uses UDP as its transport protocol. The client sends messages to the server on port 67 and the server sends messages to the client on port 68.

DHCP defines the methods through which clients can be assigned an IP address for a finite lease period and allowing reassignment of the IP address to another client later. Additionally, DHCP provides the mechanism for a client to gather other IP configuration parameters it needs to operate in the TCP/IP network.

In the DHCP environment, the switch acts as a relay agent. The DHCP relay feature enables the switch to forward a client request for an IP address to two BOOTP servers with IP addresses that have been configured on the switch.

When a switch receives a UDP broadcast on port 67 from a DHCP client requesting an IP address, the switch acts as a proxy for the client, replacing the client source IP (SIP) and destination IP (DIP) addresses. The request is then forwarded as a UDP Unicast MAC layer message to two BOOTP servers whose IP addresses are configured on the switch. The servers respond as a a UDP Unicast message back to the switch, with the default gateway and IP address for the client. The destination IP address in the server response represents the interface address on the switch that received the client request. This interface address tells the switch on which VLAN to send the server response to the client.

DHCP Relay Agent Configuration

To enable the G8000 to be the BOOTP forwarder, you need to configure the DHCP/BOOTP server IP addresses on the switch. Generally, you should configure the switch IP interface on the client side to match the client's subnet, and configure VLANs to separate clients and server subnets. The DHCP server knows from which IP subnet the newly allocated IP address should come.

In G8000 implementation, there is no need for primary or secondary servers. The client request is forwarded to the BOOTP servers configured on the switch. The use of two servers provide failover redundancy. However, no health checking is supported.

Use the following commands to configure the switch as a DHCP relay agent:

```
>> # ip bootp-relay server1 <IP address>
>> # ip bootp-relay server2 <IP address>
>> # ip bootp-relay enable
```

Additionally, DHCP Relay functionality can be assigned on a per interface basis. Use the following command to enable the Relay functionality:

```
>> # interface ip <interface number>
>> (config-ip-if)# relay
```

Using the Browser-Based Interface

The Browser-Based Interface (BBI) is a Web-based management interface for interactive switch access through your Web browser.

The BBI provides access to the common configuration, management and operation features of the switch through your Web browser. For more information, refer to the RackSwitch G8000 *BBI Quick Guide*.

Configuring BBI access via HTTP

By default, BBI access via HTTP is `enabled`. Use the following command to disable/enable BBI access on the switch via HTTP:

```
RS G8000 (config)# access http enable
```

The default HTTP web server port to access the BBI is port 80. However, you can change the default Web server port with the following command:

```
RS G8000 (config)# access http port <TCP port number>
```

For workstation access to your switch via the BBI, open a Web browser window and type in the URL using the IP interface address of the switch, such as:
`http://10.10.10.1`

Configuring BBI access via HTTPS

The BBI can also be accessed via a secure HTTPS connection over interface ports.

1. Enable HTTPS

   By default, BBI access via HTTPS is disabled on the switch. To enable BBI Access via HTTPS, use the following command:

   ```
   >> # access https enable
   ```

2. Set the HTTPS server port number (optional)

   To change the HTTPS Web server port number from the default port 443, use the following command:

   ```
   >> # access https port <x>
   ```

3. Use the `apply` and `save` commands to activate and store the configuration changes.

4. Generate the HTTPS certificate.

   Accessing the BBI via HTTPS requires that you generate a certificate to be used during the key exchange. A default certificate is created the first time HTTPS is enabled, but you can create a new certificate defining the information you want to be used in the various fields.

   ```
   >> access https generate-certificate
   Country Name (2 letter code) []:  <country code>
   State or Province Name (full name) []:  <state>
   Locality Name (eg, city) []:  <city>
   Organization Name (eg, company) []:  <company>
   Organizational Unit Name (eg, section) []:  <org. unit>
   Common Name (eg, YOUR name) []:  <name>
   Email (eg, email address) []:  <email address>
   Confirm generating certificate? [y/n]: y
   Generating certificate. Please wait (approx 30 seconds)
   restarting SSL agent
   ```

5. Save the HTTPS certificate.

   The certificate is valid only until the switch is rebooted. In order to save the certificate so that it is retained beyond reboot or power cycles, use the following command:

   ```
   >> # access https save-certificate
   ```

When a client (e.g. web browser) connects to the switch, the client is asked to accept the certificate and verify that the fields match what is expected. Once BBI access is granted to the client, the BBI can be used as described in the RackSwitch G8000 *BBI Quick Guide*.

The BBI is organized at a high level as follows:

Context buttons – These buttons allow you to select the type of action you wish to perform. The *Configuration* button provides access to the configuration elements for the entire switch. The *Statistics* button provides access to the switch statistics and state information. The *Dashboard* button allows you to display settings and operating status of a variety of switch features.

Navigation Window – This window provides a menu list of switch features and functions, as follows:

- **System** – Access the configuration elements for the entire switch.
- **Switch Ports** – Configure each of the physical ports on the switch.
- **Port-Based Port Mirroring** – Configure port mirroring.
- **Layer 2 Management –** Configure Layer 2 features, such as VLANs and Spanning Tree
- **Layer 3 Management –** Configure Layer 3 features, such as IP interfaces and gateway.
- **QoS –** Configure Quality of Service (QoS) features for the switch.
- **Access Control –** Configure Access Control Lists to filter IP packets.

Using SNMP

Blade OS provides SNMP v1.0 and SNMP v3.0 support for access through any network management software, such as IBM Director or HP-OpenView.

SNMP v1, v2

To access the SNMP agent on the G8000, the read and write community strings on the SNMP manager should be configured to match those on the switch. The default read community string on the switch is `public` and the default write community string is `private`.

The read and write community strings on the switch can be changed using the following commands on the CLI:

```
RS G8000 (config)# snmp-server read-community <1-32 characters>
```

and

```
RS G8000 (config)# snmp-server write-community <1-32 characters>
```

The SNMP manager should be able to reach any one of the IP interfaces on the switch.

SNMP v3.0

SNMPv3 is an enhanced version of the Simple Network Management Protocol, approved by the Internet Engineering Steering Group in March, 2002. SNMP v3.0 contains additional security and authentication features that provide data origin authentication, data integrity checks, timeliness indicators and encryption to protect against threats such as masquerade, modification of information, message stream modification and disclosure.

SNMPv3 ensures that the client can use SNMPv3 to query the MIBs, mainly for security.

For more information on SNMP MIBs and the commands used to configure SNMP on the switch, see the RackSwitch G8000 *Command Reference*.

Default Configuration

The G8000 has two SNMP v3 users by default. Both of the following users have access to all the MIBs supported by the switch:

1) username 1: **`adminmd5`** `(password adminmd5)`. Authentication used is MD5.

2) username 2: **`adminsha`** `(password adminsha)`. Authentication used is SHA.

To configure an SNMP user name, enter the following command:

```
RS G8000 (config)# snmp-server user <1-16> name <1-32>
```

User Configuration:

Users can be configured to use the authentication/privacy options. The G8000 supports two authentication algorithms: MD5 and SHA, as specified in the following command:

```
snmp-server user <1-16> authentication-protocol md5|sha
```

1. To configure a user with name 'admin,' authentication type MD5, and authentication password of 'admin,' privacy option DES with privacy password of 'admin,' use the following CLI commands.

```
RS G8000 (config)# snmp-server user 5 name admin
RS G8000 (config)# snmp-server user 5 authentication-protocol md5
                   authentication-password
Changing authentication password; validation required:
Enter current admin password:                          <admin. password>
Enter new authentication password:                     <auth. password>
Re-enter new authentication password:                  <auth. password>
New authentication password accepted.

RS G8000 (config)# snmp-server user 5 privacy-protocol des
                   privacy-password
Changing privacy password; validation required:
Enter current admin password:                          <admin. password>
Enter new privacy password:                            <privacy password>
Re-enter new privacy password:                         <privacy password>
New privacy password accepted.
```

2. Configure a user access group, along with the views the group may access. Use the access table to configure the group's access level.

```
RS G8000 (config)# snmp-server access 5 name admingrp
RS G8000 (config)# snmp-server access 5 level authpriv
RS G8000 (config)# snmp-server access 5 read-view iso
RS G8000 (config)# snmp-server access 5 write-view iso
RS G8000 (config)# snmp-server access 5 notify-view iso
```

Because the read view, write view, and notify view are all set to "iso," the user type has access to all private and public MIBs.

3. Assign the user to the user group. Use the group table to link the user to a particular access group.

```
RS G8000 (config)# snmp-server group 5 user-name admin
RS G8000 (config)# snmp-server group 5 group-name admingrp
```

Configuring SNMP Trap Hosts

SNMPv1 Trap Host Configuration

1. Configure a user with no authentication and password.

```
RS G8000 (config)# snmp-server user 10 name v1trap
```

2. Configure an access group and group table entries for the user.

```
RS G8000 (config)# snmp-server group 10 security snmpv1
RS G8000 (config)# snmp-server group 10 user-name v1trap
RS G8000 (config)# snmp-server group 10 group-name v1trap
RS G8000 (config)# snmp-server access 10 name v1trap
RS G8000 (config)# snmp-server access 10 security snmpv1
RS G8000 (config)# snmp-server access 10 notify-view iso
```

3. Configure an entry in the notify table.

```
RS G8000 (config)# snmp-server notify 10 name v1trap
RS G8000 (config)# snmp-server notify 10 tag v1trap
```

4. Specify the IP address and other trap parameters in the targetAddr and targetParam tables.

```
RS G8000 (config)# snmp-server target-address 10 name v1trap
                    address 100.10.2.1
RS G8000 (config)# snmp-server target-address 10 taglist v1trap
RS G8000 (config)# snmp-server target-address 10 parameters-name
                   v1param
RS G8000 (config)# snmp-server target-parameters 10 name v1param
RS G8000 (config)# snmp-server target-parameters 10 message snmpv1
RS G8000 (config)# snmp-server target-parameters 10 user-name v1trap
RS G8000 (config)# snmp-server target-parameters 10 security snmpv1
```

5. Use the community table to specify which community string is used in the trap.

```
RS G8000 (config)# snmp-server community 10 index v1trap
RS G8000 (config)# snmp-server community 10 user-name v1trap
```

SNMPv2 Trap Host Configuration

The SNMPv2 trap host configuration is similar to the SNMPv1 trap host configuration. Wherever you specify the model, use `snmpv2` instead of `snmpv1`.

```
RS G8000 (config)# snmp-server user 10 name v2trap

RS G8000 (config)# snmp-server group 10 security snmpv2
RS G8000 (config)# snmp-server group 10 user-name v2trap
RS G8000 (config)# snmp-server group 10 group-name v2trap
RS G8000 (config)# snmp-server access 10 name v2trap
RS G8000 (config)# snmp-server access 10 security snmpv2
RS G8000 (config)# snmp-server access 10 notify-view iso

RS G8000 (config)# snmp-server notify 10 name v2trap
RS G8000 (config)# snmp-server notify 10 tag v2trap

RS G8000 (config)# snmp-server target-address 10 name v2trap
                    address 100.10.2.1
RS G8000 (config)# snmp-server target-address 10 taglist v2trap
RS G8000 (config)# snmp-server target-address 10 parameters-name
                  v2param
RS G8000 (config)# snmp-server target-parameters 10 name v2param
RS G8000 (config)# snmp-server target-parameters 10 message snmpv2c
RS G8000 (config)# snmp-server target-parameters 10 user-name v2trap
RS G8000 (config)# snmp-server target-parameters 10 security snmpv2

RS G8000 (config)# snmp-server community 10 index v2trap
RS G8000 (config)# snmp-server community 10 user-name v2trap
```

SNMPv3 Trap Host Configuration

To configure a user for SNMPv3 traps, you can choose to send the traps with both privacy and authentication, with authentication only, or without privacy or authentication.

This is configured in the access table using the following commands:

```
RS G8000 (config)# snmp-server access <1-32> level
```

```
RS G8000 (config)# snmp-server target-parameters <1-16>
```

Configure the user in the user table accordingly.

It is not necessary to configure the community table for SNMPv3 traps because the community string is not used by SNMPv3.

The following example shows how to configure a SNMPv3 user `v3trap` with authentication only:

```
RS G8000 (config)# snmp-server user 11 name v3trap
RS G8000 (config)# snmp-server user 11 authentication-protocol md5
                   authentication-password
Changing authentication password; validation required:
Enter current admin password:                          <admin. password>
Enter new authentication password:                     <auth. password>
Re-enter new authentication password:                  <auth. password>
New authentication password accepted.

RS G8000 (config)# snmp-server group 11 user-name v3trap
RS G8000 (config)# snmp-server group 11 group-name v3trap
RS G8000 (config)# snmp-server access 11 name v3trap
RS G8000 (config)# snmp-server access 11 level authNoPriv
RS G8000 (config)# snmp-server access 11 notify-view iso

RS G8000 (config)# snmp-server notify 11 name v3trap
RS G8000 (config)# snmp-server notify 11 tag v3trap

RS G8000 (config)# snmp-server target-address 11 name v2trap
                    address 100.10.2.1
RS G8000 (config)# snmp-server target-address 11 taglist v3trap
RS G8000 (config)# snmp-server target-address 11 parameters-name
                    v3param

RS G8000 (config)# snmp-server target-parameters 11 name v3param
RS G8000 (config)# snmp-server target-parameters 11 user-name v3trap
RS G8000 (config)# snmp-server target-parameters 11 level authNoPriv
```

Securing Access to the Switch

Secure switch management is needed for environments that perform significant management functions across the Internet.

The following features are addressed in this section:

- "RADIUS Authentication and Authorization" on page 27
- "TACACS+ Authentication" on page 31
- "LDAP Authentication and Authorization" on page 34
- "Secure Shell" on page 36
- "End User Access Control" on page 38

RADIUS Authentication and Authorization

Blade OS supports the RADIUS (Remote Authentication Dial-in User Service) method to authenticate and authorize remote administrators for managing the switch. This method is based on a client/server model. The Remote Access Server (RAS)—the switch—is a client to the back-end database server. A remote user (the remote administrator) interacts only with the RAS, not the back-end server and database.

RADIUS authentication consists of the following components:

- A protocol with a frame format that utilizes UDP over IP (based on RFC 2138 and 2866)
- A centralized server that stores all the user authorization information
- A client, in this case, the switch

The G8000—acting as the RADIUS client—communicates to the RADIUS server to authenticate and authorize a remote administrator using the protocol definitions specified in RFC 2138 and 2866. Transactions between the client and the RADIUS server are authenticated using a shared key that is not sent over the network. In addition, the remote administrator passwords are sent encrypted between the RADIUS client (the switch) and the back-end RADIUS server.

How RADIUS Authentication Works

1. Remote administrator connects to the switch and provides user name and password.
2. Using Authentication/Authorization protocol, the switch sends request to authentication server.
3. Authentication server checks the request against the user ID database.
4. Using RADIUS protocol, the authentication server instructs the switch to grant or deny administrative access.

Configuring RADIUS

Use the following procedure to configure RADIUS authentication on your switch.

1. Configure the Primary and Secondary RADIUS servers, and enable RADIUS authentication.

```
RS G8000 (config)# radius-server primary-host 10.10.1.1
RS G8000 (config)# radius-server secondary-host 10.10.1.2
RS G8000 (config)# radius-server enable
```

2. Configure the RADIUS secret and enable the feature.

```
RS G8000 (config)# radius-server primary-host 10.10.1.1
                   key <1-32 character secret>
RS G8000 (config)# radius-server secondary-host 10.10.1.2
                   key <1-32 character secret>
```

3. If desired, you may change the default UDP port number used to listen to RADIUS.

   The well-known port for RADIUS is 1812.

```
RS G8000 (config)# radius-server port <UDP port number>
```

4. Configure the number retry attempts for contacting the RADIUS server, and the timeout period.

```
RS G8000 (config)# radius-server retransmit 3
RS G8000 (config)# radius-server timeout 5
```

RADIUS Authentication Features in Blade OS

Blade OS supports the following RADIUS authentication features:

- Supports RADIUS client on the switch, based on the protocol definitions in RFC 2138 and RFC 2866.
- Allows RADIUS secret password up to 32 bytes and less than 16 octets.
- Supports *secondary authentication server* so that when the primary authentication server is unreachable, the switch can send client authentication requests to the secondary authentication server. Use the following command to show the currently active RADIUS authentication server:

```
RS G8000 (config)# show radius-server
```

- Supports user-configurable RADIUS server retry and time-out values:
  - Time-out value = 1-10 seconds
  - Retries = 1-3

  The switch will time out if it does not receive a response from the RADIUS server in 1-3 retries. The switch will also automatically retry connecting to the RADIUS server before it declares the server down.
- Supports user-configurable RADIUS application port.
  The default is 1812/UDP-based on RFC 2138. Port 1645 is also supported.
- Allows network administrator to define privileges for one or more specific users to access the switch at the RADIUS user database.

Switch User Accounts

The user accounts listed in Table 2 can be defined in the RADIUS server dictionary file.

Table 2 User Access Levels

User Account	Description and Tasks Performed	Password
User	The User has no direct responsibility for switch management. He/she can view all switch status information and statistics but cannot make any configuration changes to the switch.	`user`

Table 2 User Access Levels

User Account	Description and Tasks Performed	Password
Operator	The Operator manages all functions of the switch. The Operator can reset ports.	`oper`
Administrator	The super-user Administrator has complete access to all commands, information, and configuration commands on the switch, including the ability to change both the user and operator passwords.	`admin`

RADIUS Attributes for G8000 User Privileges

When the user logs in, the switch authenticates his/her level of access by sending the RADIUS access request, that is, the client authentication request, to the RADIUS authentication server.

If the remote user is successfully authenticated by the authentication server, the switch will verify the *privileges* of the remote user and authorize the appropriate access. The administrator has an option to allow *secure backdoor* access via Telnet/SSH/BBI. Secure backdoor provides switch access when the RADIUS servers cannot be reached. You always can access the switch via the console port, by using `noradius` and the administrator password, whether secure backdoor is enabled or not.

Note – To obtain the RADIUS backdoor password for your G8000, contact Technical Support.

All user privileges, other than those assigned to the Administrator, have to be defined in the RADIUS dictionary. RADIUS attribute 6 which is built into all RADIUS servers defines the administrator. The file name of the dictionary is RADIUS vendor-dependent. The following RADIUS attributes are defined for G8000 user privileges levels:

Table 3 Blade OS-proprietary Attributes for RADIUS

User Name/Access	User-Service-Type	Value
User	*Vendor-supplied*	255
Operator	*Vendor-supplied*	252
Admin	*Vendor-supplied*	6

TACACS+ Authentication

Blade OS supports authentication and authorization with networks using the Cisco Systems TACACS+ protocol. The G8000 functions as the Network Access Server (NAS) by interacting with the remote client and initiating authentication and authorization sessions with the TACACS+ access server. The remote user is defined as someone requiring management access to the G8000 through a data port.

TACACS+ offers the following advantages over RADIUS:

- TACACS+ uses TCP-based connection-oriented transport; whereas RADIUS is UDP-based. TCP offers a connection-oriented transport, while UDP offers best-effort delivery. RADIUS requires additional programmable variables such as re-transmit attempts and time-outs to compensate for best-effort transport, but it lacks the level of built-in support that a TCP transport offers.
- TACACS+ offers full packet encryption whereas RADIUS offers password-only encryption in authentication requests.
- TACACS+ separates authentication, authorization and accounting.

How TACACS+ Authentication Works

TACACS+ works much in the same way as RADIUS authentication as described on page 27.

1. Remote administrator connects to the switch and provides user name and password.
2. Using Authentication/Authorization protocol, the switch sends request to authentication server.
3. Authentication server checks the request against the user ID database.
4. Using TACACS+ protocol, the authentication server instructs the switch to grant or deny administrative access.

   During a session, if additional authorization checking is needed, the switch checks with a TACACS+ server to determine if the user is granted permission to use a particular command.

TACACS+ Authentication Features in Blade OS

Authentication is the action of determining the identity of a user, and is generally done when the user first attempts to log in to a device or gain access to its services. Blade OS supports ASCII inbound login to the device. PAP, CHAP and ARAP login methods, TACACS+ change password requests, and one-time password authentication are not supported.

Authorization

Authorization is the action of determining a user's privileges on the device, and usually takes place after authentication.

The default mapping between TACACS+ authorization levels and Blade OS management access levels is shown in Table 4. The authorization levels must be defined on the TACACS+ server.

Table 4 Default TACACS+ Authorization Levels

Blade OS User Access Level	TACACS+ level
`user`	0
`oper`	3
`admin`	6

Alternate mapping between TACACS+ authorization levels and Blade OS management access levels is shown in Table 5. Use the following command to set the alternate TACACS+ authorization levels.

```
RS G8000 (config)# tacacs-server privilege-mapping
```

Table 5 Alternate TACACS+ Authorization Levels

Blade OS User Access Level	TACACS+ level
`user`	0 - 1
`oper`	6 - 8
`admin`	14 - 15

If the remote user is successfully authenticated by the authentication server, the switch verifies the *privileges* of the remote user and authorizes the appropriate access. The administrator has an option to allow *secure backdoor* access via Telnet/SSH. Secure backdoor provides switch access when the TACACS+ servers cannot be reached. You always can access the switch via the console port, by using `notacacs` and the administrator password, whether secure backdoor is enabled or not.

Note – To obtain the TACACS+ backdoor password for your G8000, contact Technical Support.

Accounting

Accounting is the action of recording a user's activities on the device for the purposes of billing and/or security. It follows the authentication and authorization actions. If the authentication and authorization is not performed via TACACS+, there are no TACACS+ accounting messages sent out.

You can use TACACS+ to record and track software logins, configuration changes, and interactive commands.

The G8000 supports the following TACACS+ accounting attributes:

- protocol (console/Telnet/SSH/HTTP/HTTPS)
- start_time
- stop_time
- elapsed_time
- disc_cause

Note – When using the Browser-Based Interface, the TACACS+ Accounting Stop records are sent only if the **Logout** button on the browser is clicked.

Command Authorization and Logging

When TACACS+ Command Authorization is enabled, Blade OS configuration commands are sent to the TACACS+ server for authorization. Use the following command to enable TACACS+ Command Authorization:

```
RS G8000 (config)# tacacs-server command-authorization
```

When TACACS+ Command Logging is enabled, Blade OS configuration commands are logged on the TACACS+ server. Use the following command to enable TACACS+ Command Logging:

```
RS G8000 (config)# tacacs-server command-logging
```

The following examples illustrate the format of Blade OS commands sent to the TACACS+ server:

```
authorization request, cmd=shell, cmd-arg=interface ip
accounting request, cmd=shell, cmd-arg=interface ip
authorization request, cmd=shell, cmd-arg=enable
accounting request, cmd=shell, cmd-arg=enable
```

Configuring TACACS+ Authentication

1. Configure the Primary and Secondary TACACS+ servers, and enable TACACS authentication.

```
RS G8000 (config)# tacacs-server primary-host 10.10.1.1
RS G8000 (config)# tacacs-server secondary-host 10.10.1.2
RS G8000 (config)# tacacs-server enable
```

2. Configure the TACACS+ secret and second secret.

```
RS G8000 (config)# tacacs-server primary-host 10.10.1.1
                   key <1-32 character secret>
RS G8000 (config)# tacacs-server secondary-host 10.10.1.2
                   key <1-32 character secret>
```

3. If desired, you may change the default TCP port number used to listen to TACACS+.

   The well-known port for TACACS+ is 49.

```
RS G8000 (config)# tacacs-server port <TCP port number>
```

4. Configure the number of retry attempts, and the timeout period.

```
RS G8000 (config)# tacacs-server retransmit 3
RS G8000 (config)# tacacs-server timeout 5
```

LDAP Authentication and Authorization

BLADE OS supports the LDAP (Lightweight Directory Access Protocol) method to authenticate and authorize remote administrators to manage the switch. LDAP is based on a client/server model. The switch acts as a client to the LDAP server. A remote user (the remote administrator) interacts only with the switch, not the back-end server and database.

LDAP authentication consists of the following components:

- A protocol with a frame format that utilizes TCP over IP
- A centralized server that stores all the user authorization information
- A client, in this case, the switch

Each entry in the LDAP server is referenced by its Distinguished Name (DN). The DN consists of the user-account name concatenated with the LDAP domain name. If the user-account name is John, the following is an example DN:

```
uid=John,ou=people,dc=domain,dc=com
```

Configuring the LDAP Server

G8000 user groups and user accounts must reside within the same domain. On the LDAP server, configure the domain to include G8000 user groups and user accounts, as follows:

- User Accounts:

  Use the *uid* attribute to define each individual user account.

- User Groups:

  Use the *members* attribute in the *groupOfNames* object class to create the user groups. The first word of the common name for each user group must be equal to the user group names defined in the G8000, as follows:

  - admin
  - oper
  - user

Configuring LDAP Authentication on the Switch

1. Turn LDAP authentication on, then configure the Primary and Secondary LDAP servers.

```
>> # ldap-server enable
>> # ldap-server primary-host 10.10.1.1
>> # ldap-server secondary-host 10.10.1.2
```

2. Configure the domain name.

```
>> # ldap-server domain ou=people,dc=mydomain,dc=com
```

3. If desired, you may change the default TCP port number used to listen to LDAP.

   The well-known port for LDAP is 389.

```
>> # ldap-server port <1-65000>
```

4. Configure the number of retry attempts for contacting the LDAP server, and the timeout period.

```
>> # ldap-server retransmit <1-3>
>> # ldap-server timeout <4-15>
```

Secure Shell

Secure Shell (SSH) use secure tunnels to encrypt and secure messages between a remote administrator and the switch. Telnet does not provide this level of security. The Telnet method of managing a G8000 does not provide a secure connection.

SSH is a protocol that enables remote administrators to log securely into the G8000 over a network to execute management commands.

The benefits of using SSH are listed below:

- Authentication of remote administrators
- Identifying the administrator using Name/Password
- Authorization of remote administrators
- Determining the permitted actions and customizing service for individual administrators
- Encryption of management messages
- Encrypting messages between the remote administrator and switch

The Blade OS implementation of SSH supports both versions 1.0 and 2.0 and supports SSH client versions 1.5 - 2.x.

Configuring SSH Features on the Switch

Before you can use SSH commands, use the following commands to turn on SSH. SSH is disabled by default.

Use the following command to enable SSH:

```
RS G8000 (config)# ssh enable
```

SSH Encryption of Management Messages

The following encryption and authentication methods are supported for SSH:

Server Host Authentication:	Client RSA authenticates the switch at the beginning of every connection
Key Exchange:	RSA
Encryption:	3DES-CBC, DES
User Authentication:	Local password authentication

Generating RSA Host and Server Keys for SSH Access

To support the SSH server feature, two sets of RSA keys (host and server keys) are required. The host key is 1024 bits and is used to identify the G8000. The server key is 768 bits and is used to make it impossible to decipher a captured session by breaking into the G8000 at a later time.

When the SSH server is first enabled and applied, the switch automatically generates the RSA host and server keys and is stored in the Flash memory. To configure RSA host and server keys, enter the following commands to generate them manually.

```
RS G8000 (config)# ssh generate-host-key
RS G8000 (config)# ssh generate-server-key
```

When the switch reboots, it will retrieve the host and server keys from the Flash memory. If these two keys are not available in the flash and if the SSH server feature is enabled, the switch automatically generates them during the system reboot. This process may take several minutes to complete.

The switch can automatically regenerate the RSA server key. To set the interval of RSA server key autogeneration, use the following command:

```
RS G8000 (config)# ssh interval <number of hours (0-24)>
```

A value of 0 (zero) denotes that RSA server key autogeneration is disabled. When greater than 0, the switch will autogenerate the RSA server key every specified interval; however, RSA server key generation is skipped if the switch is busy doing other key or cipher generation when the timer expires.

Note – The switch will perform only one session of key/cipher generation at a time. Thus, an SSH client will not be able to log in if the switch is performing key generation at that time, or if another client has logged in immediately prior. Also, key generation will fail if an SSH client is logging in at that time.

SSH Integration with RADIUS/TACACS+ Authentication

SSH is integrated with RADIUS authentication. After the RADIUS server is enabled on the switch, all subsequent SSH authentication requests will be redirected to the specified RADIUS servers for authentication. The redirection is transparent to the SSH clients.

SSH is integrated with TACACS+ authentication. After the TACACS+ server is enabled on the switch, all subsequent SSH authentication requests will be redirected to the specified TACACS+ servers for authentication. The redirection is transparent to the SSH clients.

End User Access Control

BLADE OS allows an administrator to define end user accounts that permit end users to perform operation tasks via the switch CLI commands. Once end user accounts are configured and enabled, the switch requires username/password authentication.

For example, an administrator can assign a user, who can then log into the switch and perform operational commands (effective only until the next switch reboot).

Considerations for Configuring End User Accounts

- A maximum of 10 user IDs are supported on the switch.
- BLADE OS supports end user support for Console, Telnet, BBI, and SSHv1/v2 access to the switch.
- If RADIUS authentication is used, the user password on the Radius server will override the user password on the G8000. Also note that the password change command on the switch only modifies the use switch password and has no effect on the user password on the Radius server. Radius authentication and user password cannot be used concurrently to access the switch.
- Passwords can be up to 128 characters in length for TACACS, RADIUS, Telnet, SSH, Console, and Web access.

Strong Passwords

The administrator can require use of Strong Passwords for users to access the G8000. Strong Passwords enhance security because they make password guessing more difficult.

The following rules apply when Strong Passwords are enabled:

- Each passwords must be 8 to 14 characters
- Within the first 8 characters, the password:
  - must have at least one number or one symbol
  - must have both upper and lower case letters
  - cannot be the same as any four previously used passwords

The following are examples of strong passwords:

- 1234AbcXyz
- Super+User
- Exo1cet2

The administrator can choose the number of days allowed before each password expires. When a strong password expires, the user is allowed to log in one last time (last time) to change the password. A warning provides advance notice for users to change the password.

Use the Strong Password commands to configure Strong Passwords.

```
>> # access user strong-password enable
```

User Access Control

Use the end user access control commands to configure user IDs.

Setting Up User IDs, User Names, and Passwords

Up to 10 user IDs can be configured. Define each user name and password.

```
>> # access user 1 name <new user name>
>> # access user 1 password <new user password>
```

Defining a User's Access Level

The end user is by default assigned to the user access level (also known as class of service, or CoS). CoS for all user accounts have global access to all resources except for User CoS, which has access to view only resources that the user owns. For more information, see Table 2 on page 29.

To change the user's level, enter the class of service `cos` command, and select one of the following options:

```
>> # access user 1 level {user|oper|admin}
```

Validating a User's Configuration

```
>> # show access user uid 1
```

Enabling or Disabling a User

An end user account must be enabled before the switch recognizes and permits login under the account. Once enabled, the switch requires any user to enter both username and password.

```
>> # access user 1 enable
>> # no access user 1 enable
```

Listing Current Users

The `cur` command displays defined user accounts and whether or not each user is currently logged into the switch.

```
>> # show access user

Usernames:
  user      - Enabled - offline
  oper      - Disabled - offline
  admin     - Always Enabled - online 1 session

Current User ID table:
  1: name jane     , ena, cos user     , password valid, online
  2: name john     , ena, cos user     , password valid, online
```

Logging In to an End User Account

Once an end user account is configured and enabled, the user can login to the switch, using the username/password combination. The level of switch access is determined by the CoS established for the end user account.

CHAPTER 2

Port-based Network Access Control

Port-Based Network Access control provides a means of authenticating and authorizing devices attached to a LAN port that has point-to-point connection characteristics. It prevents access to ports that fail authentication and authorization. This feature provides security to ports of the G8000 that connect to servers.

The following topics are discussed in this section:

- "Extensible Authentication Protocol over LAN" on page 41
- "802.1X Authentication Process" on page 42
- "802.1X Port States" on page 44
- "Supported RADIUS Attributes" on page 45
- "Configuration Guidelines" on page 46

Extensible Authentication Protocol over LAN

The G8000 can provide user-level security for its ports using the IEEE 802.1X protocol, which is a more secure alternative to other methods of port-based network access control. Any device attached to an 802.1X-enabled port that fails authentication is prevented access to the network and denied services offered through that port.

The 802.1X standard describes port-based network access control using Extensible Authentication Protocol over LAN (EAPoL). EAPoL provides a means of authenticating and authorizing devices attached to a LAN port that has point-to-point connection characteristics and of preventing access to that port in cases of authentication and authorization failures.

EAPoL is a client-server protocol that has the following components:

- Supplicant or Client
  The Supplicant is a device that requests network access and provides the required credentials (user name and password) to the Authenticator and the Authenticator Server.

- Authenticator
  The Authenticator enforces authentication and controls access to the network. The Authenticator grants network access based on the information provided by the Supplicant and the response from the Authentication Server. The Authenticator acts as an intermediary between the Supplicant and the Authentication Server: requesting identity information from the client, forwarding that information to the Authentication Server for validation, relaying the server's responses to the client, and authorizing network access based on the results of the authentication exchange. The G8000 acts as an Authenticator.

- Authentication Server,
  The Authentication Server validates the credentials provided by the Supplicant to determine if the Authenticator should grant access to the network. The Authentication Server may be co-located with the Authenticator. The G8000 relies on external RADIUS servers for authentication.

Upon a successful authentication of the client by the server, the 802.1X-controlled port transitions from unauthorized to authorized state, and the client is allowed full access to services through the port. When the client sends an EAP-Logoff message to the authenticator, the port will transition from authorized to unauthorized state.

802.1X Authentication Process

The clients and authenticators communicate using Extensible Authentication Protocol (EAP), which was originally designed to run over PPP, and for which the IEEE 802.1X Standard has defined an encapsulation method over Ethernet frames, called EAP over LAN (EAPOL). Figure 1 shows a typical message exchange initiated by the client.

Figure 1 Authenticating a Port Using EAPoL

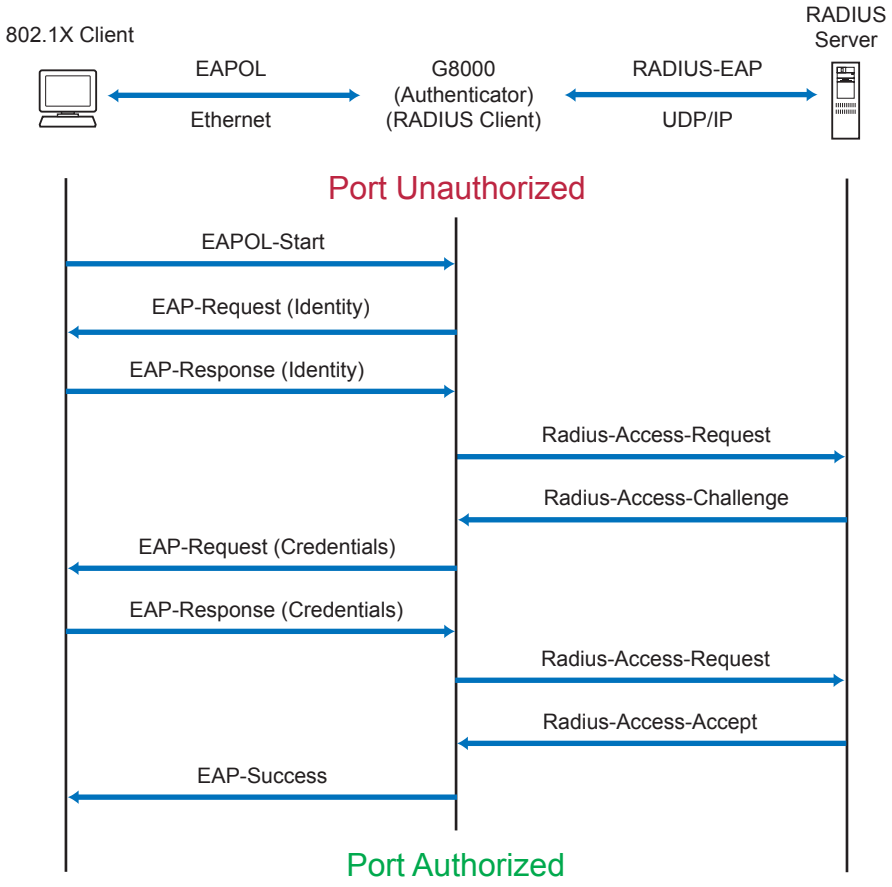

EAPoL Message Exchange

During authentication, EAPOL messages are exchanged between the client and the G8000 authenticator, while RADIUS-EAP messages are exchanged between the G8000 authenticator and the RADIUS server.

Authentication is initiated by one of the following methods:

- The G8000 authenticator sends an EAP-Request/Identity packet to the client
- Client sends an EAPOL-Start frame to the G8000 authenticator, which responds with an EAP-Request/Identity frame.

The client confirms its identity by sending an EAP-Response/Identity frame to the G8000 authenticator, which forwards the frame encapsulated in a RADIUS packet to the server.

The RADIUS authentication server chooses an EAP-supported authentication algorithm to verify the client's identity, and sends an EAP-Request packet to the client via the G8000 authenticator. The client then replies to the RADIUS server with an EAP-Response containing its credentials.

Upon a successful authentication of the client by the server, the 802.1X-controlled port transitions from unauthorized to authorized state, and the client is allowed full access to services through the controlled port. When the client later sends an EAPOL-Logoff message to the G8000 authenticator, the port transitions from authorized to unauthorized state.

If a client that does not support 802.1X connects to an 802.1X-controlled port, the G8000 authenticator requests the client's identity when it detects a change in the operational state of the port. The client does not respond to the request, and the port remains in the unauthorized state.

Note – When an 802.1X-enabled client connects to a port that is not 802.1X-controlled, the client initiates the authentication process by sending an EAPOL-Start frame. When no response is received, the client retransmits the request for a fixed number of times. If no response is received, the client assumes the port is in authorized state, and begins sending frames, even if the port is unauthorized.

802.1X Port States

The state of the port determines whether the client is granted access to the network, as follows:

- **Unauthorized**
  While in this state the port discards all ingress and egress traffic except EAP packets.
- **Authorized**
  When the client is successfully authenticated, the port transitions to the authorized state allowing all traffic to and from the client to flow normally.
- **Force Unauthorized**
  You can configure this state that denies all access to the port.
- **Force Authorized**
  You can configure this state that allows full access to the port.

Use the 802.1X global configuration commands (`dot1x`) to configure 802.1X authentication for all ports in the switch. Use the 802.1X port commands to configure a single port.

Supported RADIUS Attributes

The G8000 802.1X Authenticator relies on external RADIUS servers for authentication with EAP. Table 6 lists the RADIUS attributes that are supported as part of RADIUS-EAP authentication based on the guidelines specified in Annex D of the 802.1X standard and RFC 3580.

Table 6 Support for RADIUS Attributes

#	Attribute	Attribute Value	A-R	A-A	A-C	A-R
1	User-Name	The value of the Type-Data field from the supplicant's EAP-Response/Identity message. If the Identity is unknown (i.e. Type-Data field is zero bytes in length), this attribute will have the same value as the Calling-Station-Id.	1	0-1	0	0
4	NAS-IP-Address	IP address of the authenticator used for Radius communication.	1	0	0	0
5	NAS-Port	Port number of the authenticator port to which the supplicant is attached.	1	0	0	0
24	State	Server-specific value. This is sent unmodified back to the server in an Access-Request that is in response to an Access-Challenge.	0-1	0-1	0-1	0
30	Called-Station-ID	The MAC address of the authenticator encoded as an ASCII string in canonical format, e.g. 000D5622E3 9F.	1	0	0	0
31	Calling-Station-ID	The MAC address of the supplicant encoded as an ASCII string in canonical format, e.g. 00034B436206.	1	0	0	0
79	EAP-Message	Encapsulated EAP packets from the supplicant to the authentication server (Radius) and vice-versa. The authenticator relays the decoded packet to both devices.	1+	1+	1+	1+
80	Message-Authenticator	Always present whenever an EAP-Message attribute is also included. Used to integrity-protect a packet.	1	1	1	1
87	NAS-Port-ID	Name assigned to the authenticator port, e.g. Server1_Port3	1	0	0	0

Legend:
RADIUS Packet Types: A-R (Access-Request), A-A (Access-Accept), A-C (Access-Challenge), A-R (Access-Reject)
RADIUS Attribute Support:
0 This attribute MUST NOT be present in a packet.
0+ Zero or more instances of this attribute MAY be present in a packet.
0-1 Zero or one instance of this attribute MAY be present in a packet.
1 Exactly one instance of this attribute MUST be present in a packet.
1+ One or more of these attributes MUST be present.

Configuration Guidelines

When configuring EAPoL, consider the following guidelines:

- The 802.1X port-based authentication is currently supported only in point-to-point configurations, that is, with a single supplicant connected to an 802.1X-enabled switch port.
- When 802.1X is enabled, a port has to be in the authorized state before any other Layer 2 feature can be operationally enabled. For example, the STG state of a port is operationally disabled while the port is in the unauthorized state.
- The 802.1X supplicant capability is not supported. Therefore, none of its ports can successfully connect to an 802.1X-enabled port of another device, such as another switch, that acts as an authenticator, unless access control on the remote port is disabled or is configured in forced-authorized mode. For example, if a G8000 is connected to another G8000, and if 802.1X is enabled on both switches, the two connected ports must be configured in force-authorized mode.
- The 802.1X standard has optional provisions for supporting dynamic virtual LAN assignment via RADIUS tunnelling attributes, for example, Tunnel-Type (=VLAN), Tunnel-Medium-Type (=802), and Tunnel-Private-Group-ID (=VLAN ID).
  These attributes are not supported and might affect 802.1X operations. Other unsupported attributes include Service-Type, Session-Timeout, and Termination-Action.
- RADIUS accounting service for 802.1X-authenticated devices or users is not supported.
- Configuration changes performed using SNMP and the standard 802.1X MIB will take effect immediately.

CHAPTER 3
VLANs

This chapter describes network design and topology considerations for using Virtual Local Area Networks (VLANs). VLANs commonly are used to split up groups of network users into manageable broadcast domains, to create logical segmentation of workgroups, and to enforce security policies among logical segments. The following topics are discussed in this chapter:

- "VLANs and Port VLAN ID Numbers" on page 48
- "VLAN Tagging" on page 50
- "VLAN Topologies and Design Considerations" on page 54
  This section discusses how you can connect users and segments to a host that supports many logical segments or subnets by using the flexibility of the multiple VLAN system.
- "Protocol-Based VLANs" on page 58
- "Private VLANs" on page 61

Note – VLANs can be configured from the Command Line Interface (see "VLAN Configuration" as well as "Port Configuration" in the *Command Reference*).

Overview

Setting up virtual LANs (VLANs) is a way to segment networks to increase network flexibility without changing the physical network topology. With network segmentation, each switch port connects to a segment that is a single broadcast domain. When a switch port is configured to be a member of a VLAN, it is added to a group of ports (workgroup) that belong to one broadcast domain.

Ports are grouped into broadcast domains by assigning them to the same VLAN. Frames received in one VLAN can only be forwarded within that VLAN, and multicast, broadcast, and unknown unicast frames are flooded only to ports in the same VLAN. The G8000 supports jumbo frames up to 9,216 bytes.

VLANs and Port VLAN ID Numbers

VLAN Numbers

The G8000 supports up to 1024 VLANs per switch. Even though the maximum number of VLANs supported at any given time is 1024, each can be identified with any number between 1 and 4094. VLAN 1 is the default VLAN for all ports.

Viewing VLANs

Use the following command to display VLAN information:

```
RS G8000 (config)# show vlan

VLAN            Name            Status            Ports
----  ------------------------  ------  -------------------------
1     VLAN 1                    ena      1-48, XGE2-XGE4
                                                 po1-po104
2     VLAN 2                    dis      empty
```

PVID Numbers

Each port in the switch has a configurable default VLAN number, known as its *PVID*. By default, the PVID for all ports is set to 1, which correlates to the default VLAN ID. The PVID for each port can be configured to any VLAN number between 1 and 4094.

Viewing and Configuring PVIDs

Use the following CLI commands to view PVIDs:

- Port information:

```
RS G8000# show interface information

Alias Port Tag Edge Lrn Fld PVID      NAME                 VLAN(s)
----- ---- --- ---- --- --- ---- -------------- --------------------
   1    1   y   n    e   e     1 1              1
   2    2   y   n    e   e     1 2              1
   3    3   y   n    e   e     1 3              1
   4    4   y   n    e   e     1 4              1
   5    5   y   n    e   e     1 5              1
   6    6   y   n    e   e     1 6              1
  ... ...                      ...              ...
   44  44   n   n    e   e     1 44             1
   45  45   n   n    e   e     1 45             1
   46  46   n   n    e   e     1 46             1
   47  47   n   n    e   e     1 47             1
   48  48   n   n    e   e     1 48             1
 XGE1  49   n   n    e   e     1 49             1
 XGE2  50   n   n    e   e     1 50             1
 XGE3  51   n   n    e   e     1 51             1
 XGE4  52   n   n    e   e     1 52             1

* = PVID is tagged.
```

- Port Configuration:

```
RS G8000 (config)# interface port 7
RS G8000 (config-if)# pvid 7
```

Each port on the switch can belong to one or more VLANs, and each VLAN can have any number of switch ports in its membership. Any port that belongs to multiple VLANs, however, must have VLAN *tagging* enabled (see "VLAN Tagging" on page 50).

VLAN Tagging

Blade OS software supports IEEE 802.1Q VLAN *tagging,* providing standards-based VLAN support for Ethernet systems.

Tagging places the VLAN identifier in the frame header of a packet, allowing each port to belong to multiple VLANs. When you add a port to multiple VLANs, you also must enable tagging on that port.

Since tagging fundamentally changes the format of frames transmitted on a tagged port, you must carefully plan network designs to prevent tagged frames from being transmitted to devices that do not support 802.1Q VLAN tags, or devices where tagging is not enabled.

Important terms used with the 802.1Q tagging feature are:

- VLAN identifier (VID)—the 12-bit portion of the VLAN tag in the frame header that identifies an explicit VLAN.
- Port VLAN identifier (PVID)—a classification mechanism that associates a port with a specific VLAN. For example, a port with a PVID of 3 (PVID =3) assigns all untagged frames received on this port to VLAN 3. Any untagged frames received by the switch are classified with the PVID of the receiving port.
- Tagged frame—a frame that carries VLAN tagging information in the header. This VLAN tagging information is a 32-bit field (VLAN tag) in the frame header that identifies the frame as belonging to a specific VLAN. Untagged frames are marked (tagged) with this classification as they leave the switch through a port that is configured as a tagged port.
- Untagged frame— a frame that does not carry any VLAN tagging information in the frame header.
- Untagged member—a port that has been configured as an untagged member of a specific VLAN. When an untagged frame exits the switch through an untagged member port, the frame header remains unchanged. When a tagged frame exits the switch through an untagged member port, the tag is stripped and the tagged frame is changed to an untagged frame.
- Tagged member—a port that has been configured as a tagged member of a specific VLAN. When an untagged frame exits the switch through a tagged member port, the frame header is modified to include the 32-bit tag associated with the PVID. When a tagged frame exits the switch through a tagged member port, the frame header remains unchanged (original VID remains).

Note – If a 802.1Q tagged frame is received by a port that has VLAN-tagging disabled and the port VLAN ID (PVID) is different than the VLAN ID of the packet, then the frame is dropped at the ingress port.

Figure 2 Default VLAN settings

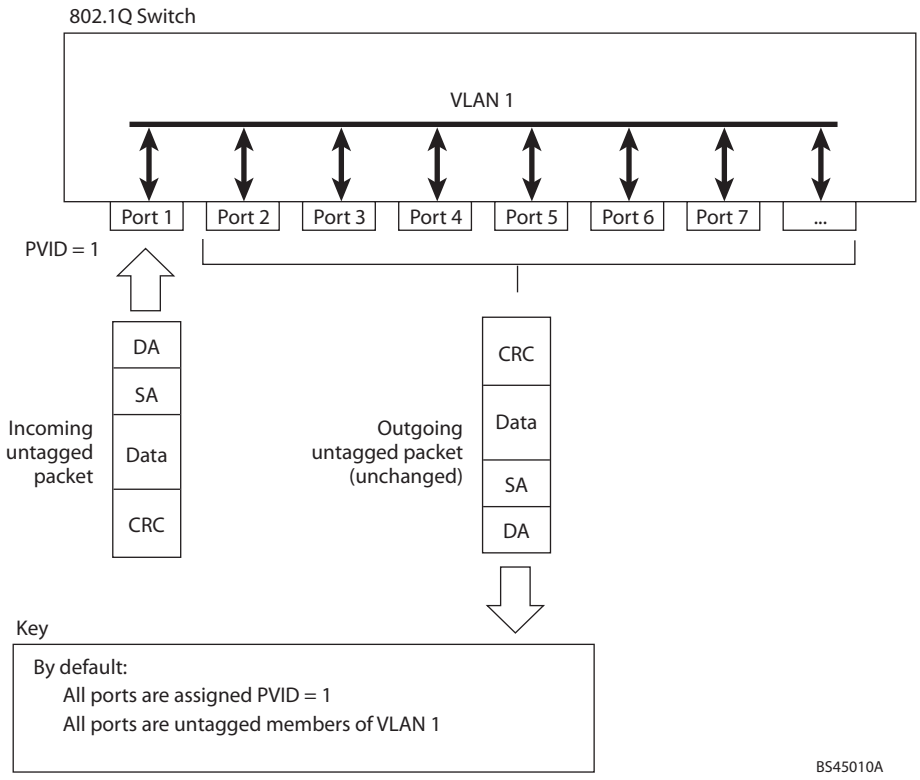

Note – The port numbers specified in these illustrations may not directly correspond to the physical port configuration of your switch model.

When a VLAN is configured, ports are added as members of the VLAN, and the ports are defined as either *tagged* or *untagged* (see Figure 3 through Figure 6).

The default configuration settings for the G8000 has all ports set as untagged members of VLAN 1 with all ports configured as PVID = 1. In the default configuration example shown in Figure 2, all incoming packets are assigned to VLAN 1 by the default port VLAN identifier (PVID =1).

Figure 3 through Figure 6 illustrate generic examples of VLAN tagging. In Figure 3, untagged incoming packets are assigned directly to VLAN 2 (PVID = 2). Port 5 is configured as a *tagged* member of VLAN 2, and port 7 is configured as an *untagged* member of VLAN 2.

Note – The port assignments in the following figures are not meant to match the G8000.

Figure 3 Port-based VLAN assignment

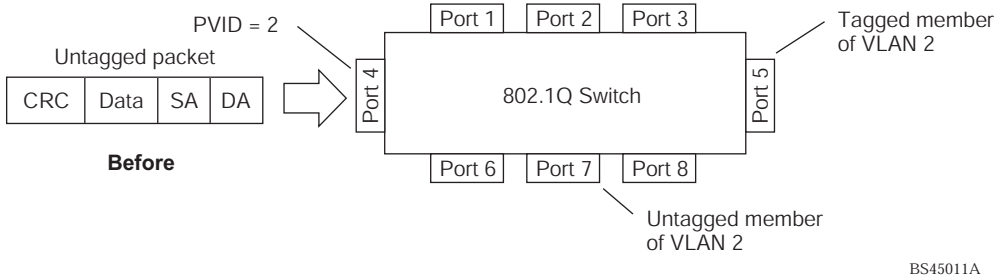

As shown in Figure 4, the untagged packet is marked (tagged) as it leaves the switch through port 5, which is configured as a tagged member of VLAN 2. The untagged packet remains unchanged as it leaves the switch through port 7, which is configured as an untagged member of VLAN 2.

Figure 4 802.1Q tagging (after port-based VLAN assignment)

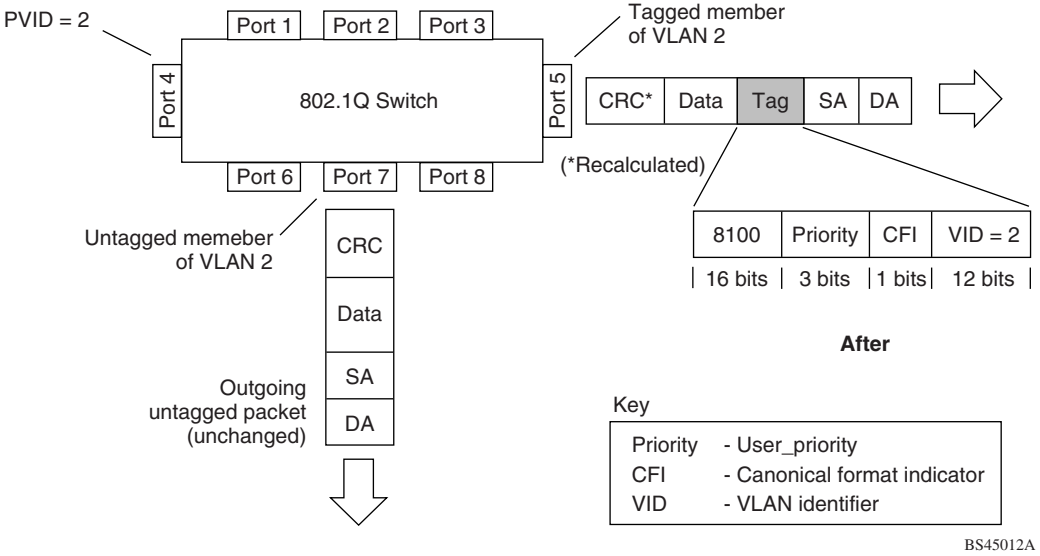

In Figure 5, tagged incoming packets are assigned directly to VLAN 2 because of the tag assignment in the packet. Port 5 is configured as a *tagged* member of VLAN 2, and port 7 is configured as an *untagged* member of VLAN 2.

Figure 5 802.1Q tag assignment

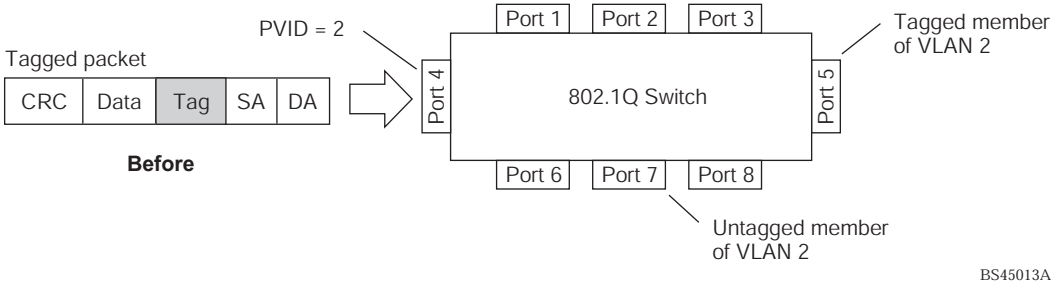

As shown in Figure 6, the tagged packet remains unchanged as it leaves the switch through port 5, which is configured as a tagged member of VLAN 2. However, the tagged packet is stripped (untagged) as it leaves the switch through port 7, which is configured as an untagged member of VLAN 2.

Figure 6 802.1Q tagging (after 802.1Q tag assignment)

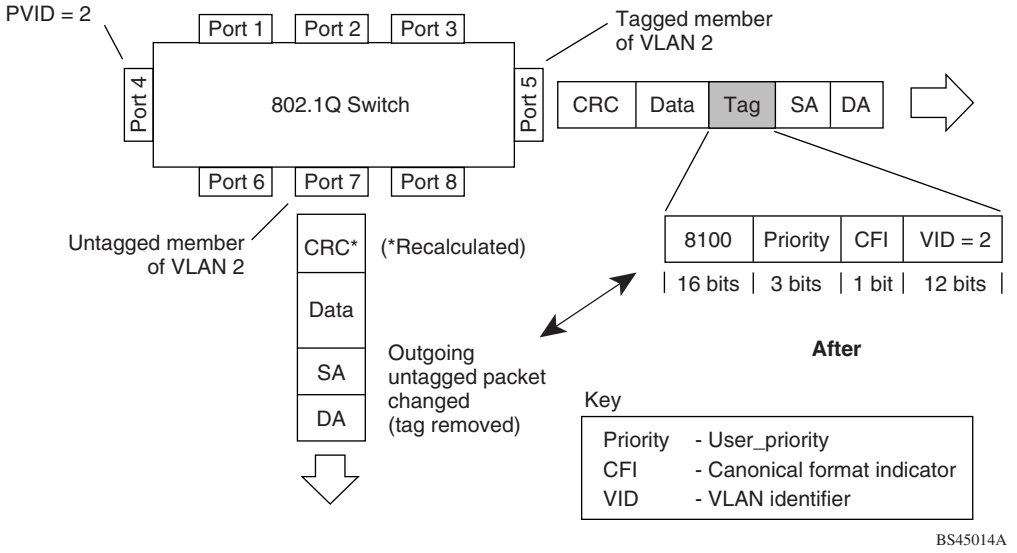

VLAN Topologies and Design Considerations

- By default, the G8000 software is configured so that tagging is disabled on all ports.
- By default, the G8000 software is configured so that all ports are members of VLAN 1.
- If you configure Spanning Tree, note that Spanning Tree Groups 2-128 may contain only one VLAN.

VLAN Configuration Rules

VLANs operate according to specific configuration rules. When creating VLANs, consider the following rules that determine how the configured VLAN reacts in any network topology:

- All ports involved in trunking and port mirroring must have the same VLAN configuration. If a port is on a trunk with a mirroring port, the VLAN configuration cannot be changed. For more information trunk groups, see “Port Trunking Example” on page 68.
- All ports that are involved in port mirroring must have memberships in the same VLANs. If a port is configured for port mirroring, the port’s VLAN membership cannot be changed. For more information on configuring port mirroring, see “Monitoring Ports” on page 207.

Multiple VLANs with Tagging Adapters

Figure 7 illustrates a network topology described in Table 7 and the configuration example on page page 57.

Figure 7 Multiple VLANs with VLAN-Tagged Gigabit Adapters

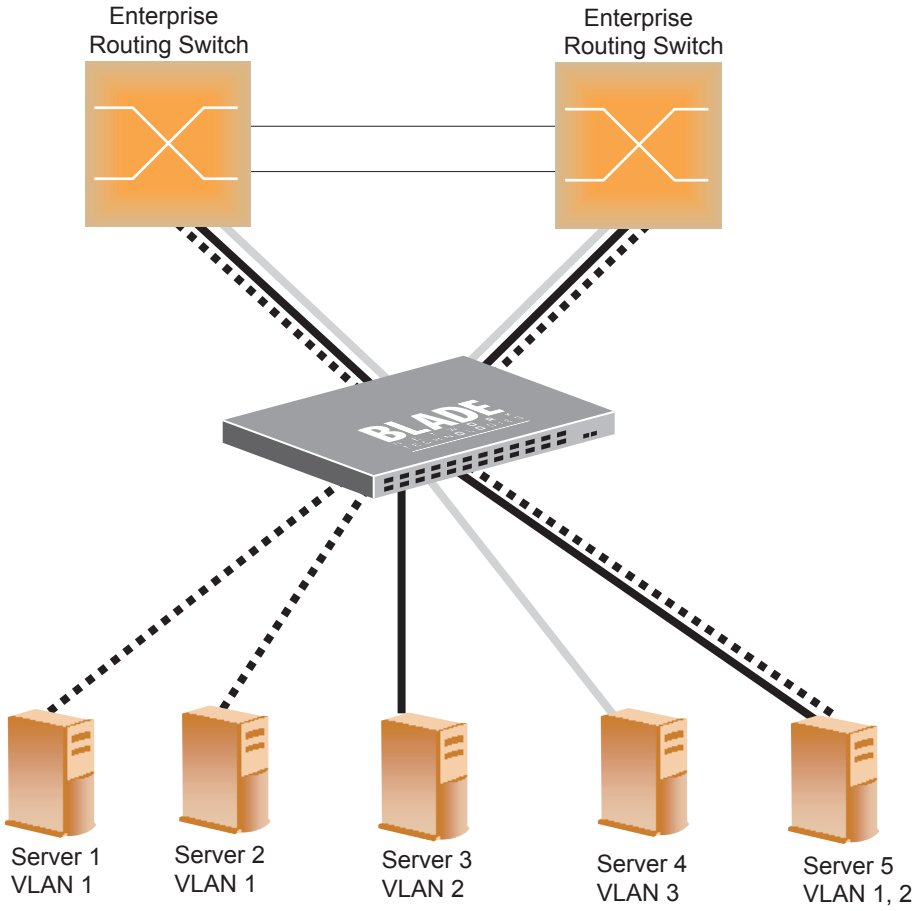

The features of this VLAN are described below:

Table 7 Multiple VLANs Example

Component	Description
G8000 switch	This switch is configured with three VLANs that represent three different IP subnets. Five ports are connected downstream to servers. Two ports are connected upstream to routing switches. Uplink ports are members of all three VLANs, with VLAN tagging enabled.
Server 1	This server is a member of VLAN 1 and has presence in only one IP subnet. The associated switch port is only a member of VLAN 1, so tagging is disabled.
Server 2	This server is a member of VLAN 1 and has presence in only one IP subnet. The associated switch port is only a member of VLAN 1, so tagging is disabled.
Server 3	This server belongs to VLAN 2, and it is logically in the same IP subnet as Server 5. The associated switch port has tagging disabled.
Server 4	A member of VLAN 3, this server can communicate only with other servers via a router. The associated switch port has tagging disabled.
Server 5	A member of VLAN 1 and VLAN 2, this server can communicate only with Server 1, Server 2, and Server 3. The associated switch port has tagging enabled.
Enterprise Routing switches	These switches must have all three VLANs (VLAN 1, 2, 3) configured. They can communicate with Server 1, Server 2, and Server 5 via VLAN 1. They can communicate with Server 3 and Server 5 via VLAN 2. They can communicate with Server 4 via VLAN 3. Tagging on switch ports is enabled.

Note – VLAN tagging is required only on ports that are connected to other switches or on ports that connect to tag-capable end-stations, such as servers with VLAN-tagging adapters.

VLAN Configuration Example

Use the following procedure to configure the example network shown in Figure 7.

1. Enable VLAN tagging on ports that support multiple VLANs.

```
RS G8000 (config)# interface port 5
RS G8000 (config-if)# tagging
RS G8000 (config-if)# exit
```

2. Enable tagging on uplink ports that support multiple VLANs.

```
RS G8000 (config)# interface port 47
RS G8000 (config-if)# tagging
RS G8000 (config-if)# exit
RS G8000 (config)# interface port 48
RS G8000 (config-if)# tagging
RS G8000 (config-if)# exit
```

3. Configure the VLANs and their member ports.

```
RS G8000 (config)# vlan 2
RS G8000 (config-vlan)# enable
RS G8000 (config-vlan)# member 3
RS G8000 (config-vlan)# member 5
RS G8000 (config-vlan)# member 47
RS G8000 (config-vlan)# member 48
RS G8000 (config-vlan)# exit
RS G8000 (config)# vlan 3
RS G8000 (config-vlan)# enable
RS G8000 (config-vlan)# member 4,47,48
RS G8000 (config-vlan)# exit
```

By default, all ports are members of VLAN 1, so configure only those ports that belong to other VLANs.

Protocol-Based VLANs

Protocol-based VLANs (PVLANs) allow you to segment network traffic according to the network protocols in use. Traffic for supported network protocols can be confined to a particular port-based VLAN. You can give different priority levels to traffic generated by different network protocols.

With PVLAN, the switch classifies incoming packets by Ethernet protocol of the packets, not by the configuration of the ingress port. When an untagged or priority-tagged frame arrives at an ingress port, the protocol information carried in the frame is used to determine a VLAN to which the frame belongs. If a frame's protocol is not recognized as a pre-defined PVLAN type, the ingress port's PVID is assigned to the frame. When a tagged frame arrives, the VLAN ID in the frame's tag is used.

Each VLAN can contain up to eight different PVLANs. You can configure separate PVLANs on different VLANs, with each PVLAN segmenting traffic for the same protocol type. For example, you can configure PVLAN 1 on VLAN 2 to segment IPv4 traffic, and PVLAN 8 on VLAN 100 to segment IPv4 traffic.

To define a PVLAN on a VLAN, configure a PVLAN number (1-8) and specify the frame type and the Ethernet type of the PVLAN protocol. You must assign at least one port to the PVLAN before it can function. Define the PVLAN frame type and Ethernet type as follows:

- Frame type—consists of one of the following values:
  - Ether2 (Ethernet II)
  - SNAP (Subnetwork Access Protocol)
  - LLC (Logical Link Control)
- Ethernet type—consists of a 4-digit (16 bit) hex value that defines the Ethernet type. You can use common Ethernet protocol values, or define your own values. Following are examples of common Ethernet protocol values:
  - IPv4 = `0800`
  - IPv6 = `86dd`
  - ARP = `0806`

Port-Based vs. Protocol-Based VLANs

Each VLAN supports both port-based and protocol-based association, as follows:

- The default VLAN configuration is port-based. All data ports are members of VLAN 1, with no PVLAN association.
- When you add ports to a PVLAN, the ports become members of both the port-based VLAN and the PVLAN. For example, if you add port 1 to PVLAN 1 on VLAN 2, the port also becomes a member of VLAN 2.
- When you delete a PVLAN, it's member ports remain members of the port-based VLAN. For example, if you delete PVLAN 1 from VLAN 2, port 1 remains a member of VLAN 2.
- When you delete a port from a VLAN, the port is deleted from all corresponding PVLANs.

PVLAN Priority Levels

You can assign each PVLAN a priority value of 0-7, used for Quality of Service (QoS). PVLAN priority takes precedence over a port's configured priority level. If no priority level is configured for the PVLAN (priority = 0), each port's priority is used (if configured).

All member ports of a PVLAN have the same PVLAN priority level.

PVLAN Tagging

When PVLAN tagging is enabled, the switch tags frames that match the PVLAN protocol. For more information about tagging, see "VLAN Tagging" on page 50.

Untagged ports must have PVLAN tagging disabled. Tagged ports can have PVLAN tagging either enabled or disabled.

PVLAN tagging has higher precedence than port-based tagging. If a port is tag enabled, and the port is a member of a PVLAN, the PVLAN tags egress frames that match the PVLAN protocol.

Use the tag list command (`protocol-vlan <x> tag-pvlan`) to define the complete list of tag-enabled ports in the PVLAN. Note that all ports not included in the PVLAN tag list will have PVLAN tagging disabled.

PVLAN Configuration Guidelines

Consider the following guidelines when you configure protocol-based VLANs:

- Each port can support up to 16 VLAN protocols.
- The G8000 can support up to 16 protocols simultaneously.
- Each PVLAN must have at least one port assigned before it can be activated.
- The same port within a port-based VLAN can belong to multiple PVLANs.
- An untagged port can be a member of multiple PVLANs.
- A port cannot be a member of different VLANs with the same protocol association.

Configuring PVLAN

Follow this procedure to configure a Protocol-based VLAN (PVLAN).

1. Configure VLAN tagging for ports.

```
RS G8000 (config)# interface port 1, 2
RS G8000 (config-if)# tagging
```

2. Create a VLAN and define the protocol type(s) supported by the VLAN.

```
RS G8000 (config)# vlan 2
RS G8000 (config-vlan)# enable
Current status: disabled
New status:     enabled
RS G8000 (config-vlan)# protocol-vlan 1 frame-type ether2 0800
```

3. Configure the priority value for the protocol.

```
RS G8000 (config-vlan)# protocol-vlan 1 priority 2
```

4. Add member ports for this PVLAN.

```
RS G8000 (config-vlan)# member 1, 2
RS G8000 (config-vlan)# exit
```

Note – If VLAN tagging is turned on and the port being added to the VLAN has a different default VLAN (PVID), you will be asked to confirm changing the PVID to the current VLAN, as shown in the example.

5. Enable the PVLAN.

```
RS G8000 (config-vlan)# protocol-vlan 1 enable
```

6. Verify PVLAN operation.

```
RS G8000 (config)# show protocol-vlan

PVLAN  Protocol  FrameType  EtherType  Priority  Status       Ports
-----  --------  ---------------------  --------  ------  -----------
1      2         ether2      0800       2         ena      1, 2

PVLAN      PVLAN-Tagged Ports
-----  --------------------------
1      1, 2
```

Private VLANs

Private VLANs provide Layer 2 isolation between the ports within the same broadcast domain. Private VLANs can control traffic within a VLAN domain, and provide port-based security for host servers.

Use Private VLANs to partition a VLAN domain into sub-domains. Each sub-domain is comprised of one primary VLAN and one or more secondary VLANs, as follows:

- Primary VLAN—carries unidirectional traffic downstream from promiscuous ports. Each Private VLAN configuration has only one primary VLAN. All ports in the Private VLAN are members of the Primary VLAN.
- Secondary VLAN—Secondary VLANs are internal to a private VLAN domain, and are defined as follows:
  - Isolated VLAN—carries unidirectional traffic upstream from the host servers toward ports in the primary VLAN and the gateway. Each Private VLAN configuration can contain only one isolated VLAN.
  - Community VLAN—carries upstream traffic from ports in the community VLAN to other ports in the same community, and to ports in the primary VLAN and the gateway. Each Private VLAN can contain multiple community VLANs.

After you define the primary VLAN and one or more secondary VLANs, you map the secondary VLAN(s) to the primary VLAN.

Private VLAN Ports

Private VLAN ports are defined as follows:

- Promiscuous—A promiscuous port is a port that belongs to the primary VLAN. The promiscuous port can communicate with all the interfaces, including ports in the secondary VLANs (Isolated VLAN and Community VLANs). Each promiscuous port can belong to only one Private VLAN.
- Isolated—An isolated port is a host port that belongs to an isolated VLAN. Each isolated port has complete layer 2 separation from other ports within the same private VLAN (including other isolated ports), except for the promiscuous ports.
  - Traffic sent to an isolated port is blocked by the Private VLAN, except the traffic from promiscuous ports.
  - Traffic received from an isolated port is forwarded only to promiscuous ports.
- Community—A community port is a host port that belongs to a community VLAN. Community ports can communicate with other ports in the same community VLAN, and with promiscuous ports. These interfaces are isolated at layer 2 from all other interfaces in other communities and from isolated ports within the Private VLAN.

Configuration Guidelines

The following guidelines apply when configuring Private VLANs:

- The default VLAN 1 cannot be a Private VLAN.
- IGMP Snooping must be disabled on isolated VLANs.
- Each secondary port's (isolated port and community ports) PVID must match its corresponding secondary VLAN ID.
- Ports within a secondary VLAN cannot be members of other VLANs.
- All VLANs that comprise the Private VLAN must belong to the same Spanning Tree Group.

Configuration Example

Follow this procedure to configure a Private VLAN.

1. Select a VLAN and define the Private VLAN type as primary.

```
RS G8000 (config)# vlan 100
RS G8000 (config-vlan)# enable
RS G8000 (config-vlan)# member 2
RS G8000 (config-vlan)# private-vlan type primary
RS G8000 (config-vlan)# private-vlan enable
RS G8000 (config-vlan)# exit
```

2. Configure a secondary VLAN and map it to the primary VLAN.

```
RS G8000 (config)# vlan 110
RS G8000 (config-vlan)# enable
RS G8000 (config-vlan)# member 3
RS G8000 (config-vlan)# member 4
RS G8000 (config-vlan)# private-vlan type isolated
RS G8000 (config-vlan)# private-vlan map 100
RS G8000 (config-vlan)# private-vlan enable
RS G8000 (config-vlan)# exit
```

3. Verify the configuration.

```
RS G8000 (config)# show private-vlan

Private-VLAN    Type       Mapped-To   Status          Ports
------------  ---------  ---------- ----------  -----------------
100             primary      110         ena         2
110             isolated     100         ena         3-4
```

CHAPTER 4

Ports and Trunking

Trunk groups can provide super-bandwidth, multi-link connections between switches or other trunk-capable devices. A trunk group is a group of ports that act together, combining their bandwidth to create a single, larger virtual link. This chapter provides configuration background and examples for trunking multiple ports together:

- ""Overview" on page 65"
- "Port Trunking Example" on page 68
- "Configurable Trunk Hash Algorithm" on page 69
- "Link Aggregation Control Protocol" on page 70

Overview

When using port trunk groups between two switches, as shown in Figure 8, you can create a virtual link between the switches, operating up to 40 Gb per second, depending on how many physical ports are combined. Each G8000 supports up to 52 static trunk groups (portchannels) and up to 52 LACP trunk groups, consisting of 1-8 ports in each group.

Trunk groups are also useful for connecting a G8000 to third-party devices that support link aggregation, such as Cisco routers and switches with EtherChannel technology (*not* ISL trunking technology) and Sun's Quad Fast Ethernet Adapter. Trunk Group technology is compatible with these devices when they are configured manually.

Statistical Load Distribution

Network traffic is distributed statistically between the ports in a trunk group. The switch can use a combination of Layer 2 MAC and Layer 3 IP address information, present in each transmitted frame, to determine load distribution.

Each packet's particular MAC or IP address information results in selecting one line in the trunk group for data transmission. The more data streams feeding the trunk lines, the more evenly traffic distribution becomes.

Built-In Fault Tolerance

Since each trunk group is comprised of multiple physical links, the trunk group is inherently fault tolerant. As long as one connection between the switches is available, the trunk remains active.

Statistical load balancing is maintained whenever a port in a trunk group is lost or returned to service.

Before You Configure Static Trunks

When you create and enable a static trunk, the trunk members (switch ports) take on certain settings necessary for correct operation of the trunking feature.

Before you configure your trunk, you must consider these settings, along with specific configuration rules, as follows:

1. Read the configuration rules provided in the section, "Static Trunk Group Configuration Rules" on page 67.
2. Determine which switch ports (up to eight) are to become *trunk members* (the specific ports making up the trunk).

   Ensure that the chosen switch ports are set to `enabled`. Trunk member ports must have the same VLAN and Spanning Tree configuration.
3. Consider how the existing Spanning Tree will react to the new trunk configuration. See Chapter 5, "Spanning Tree Group" for Spanning Tree Group configuration guidelines.
4. Consider how existing VLANs will be affected by the addition of a trunk.

Static Trunk Group Configuration Rules

The trunking (portchannel) feature operates according to specific configuration rules. When creating trunks, consider the following rules that determine how a trunk group reacts in any network topology:

- All trunks must originate from one device, and lead to one destination device.
- Any physical switch port can belong to only one trunk group.
- Trunking from third-party devices must comply with Cisco® EtherChannel® technology.
- All trunk member ports must be assigned to the same VLAN configuration before the trunk can be enabled.
- When an active port is configured in a trunk, the port becomes a *trunk member* when you enable the trunk. The Spanning Tree parameters for the port then change to reflect the new trunk settings.
- All trunk members must be in the same Spanning Tree Group (STG) and can belong to only one Spanning Tree Group (STG). However if all ports are *tagged*, then all trunk ports can belong to multiple STGs.
- If you change the Spanning Tree participation of any trunk member to `enabled` or `disabled`, the Spanning Tree participation of all trunk members changes similarly.
- When a trunk is enabled, the trunk's Spanning Tree participation setting takes precedence over that of any trunk member.
- You cannot configure a trunk member as a monitor port in a port-mirroring configuration.
- Trunks cannot be monitored by a monitor port; however, trunk members can be monitored.
- All ports in static trunks must be have the same link configuration (speed, duplex, flow control).

Port Trunking Example

In the example below, three ports are trunked between two switches.

Figure 8 Port Trunk Group Configuration Example

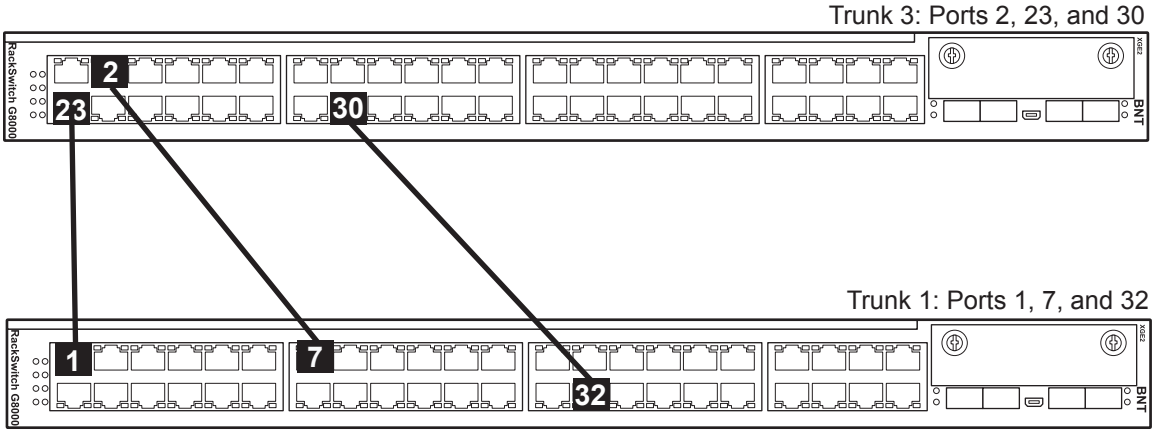

Prior to configuring each switch in the above example, you must connect to the appropriate switch's Command Line Interface (CLI) as the administrator.

Note – For details about accessing and using any of the commands described in this example, see the *Command Reference*.

1. Follow these steps on the G8000:

   (a) Define a trunk group.

```
RS G8000 (config)# portchannel 3 member 2,23,30
RS G8000 (config)# portchannel 3 enable
```

   (b) Verify the configuration.

```
# show portchannel information
```

   Examine the resulting information. If any settings are incorrect, make appropriate changes.

2. Repeat the process on the other switch.

```
RS G8000 (config)# portchannel 1 member 1,7,32
RS G8000 (config)# portchannel 1 enable

# show portchannel
```

3. Connect the switch ports that will be members in the trunk group.

   Trunk group 3 (on the G8000) is now connected to trunk group 1 (on the other switch).

Note – In this example, two G8000 switches are used. If a third-party device supporting link aggregation is used (such as Cisco routers and switches with EtherChannel technology or Sun's Quad Fast Ethernet Adapter), trunk groups on the third-party device should be configured manually. Connection problems could arise when using automatic trunk group negotiation on the third-party device.

4. Examine the trunking information on each switch.

```
# show portchannel information
PortChannel 3: Enabled
port state:
  2: STG  1 forwarding
 23: STG  1 forwarding
 30: STG  1 forwarding
```

Information about each port in each configured trunk group is displayed. Make sure that trunk groups consist of the expected ports and that each port is in the expected state.

The following restrictions apply:

- Any physical switch port can belong to only one trunk group.
- Up to eight ports can belong to the same trunk group.
- All ports in static trunks must be have the same link configuration (speed, duplex, flow control).
- Trunking from third-party devices must comply with Cisco® EtherChannel® technology.

Configurable Trunk Hash Algorithm

This feature allows you to configure parameters for the trunk hash algorithm, instead of using the default values.

Use the IP Trunk Hash commands to configure new default behavior for Layer 2 traffic and Layer 3 traffic. The trunk hash settings affect both static trunks and LACP trunks.

You can select a minimum of one or a maximum of two parameters to create one of the following configurations:

- Source MAC (SMAC):

```
RS G8000 (config)# portchannel hash source-mac-address
```

- Destination MAC (DMAC):

```
RS G8000 (config)# portchannel hash destination-mac-address
```

- Source MAC (SMAC) + Destination MAC (DMAC):

```
RS G8000 (config)# portchannel hash source-destination-mac
```

- Source IP (SIP):

```
RS G8000 (config)# portchannel hash source-ip-address
```

- Destination IP (DIP):

```
RS G8000 (config)# portchannel hash destination-ip-address
```

- Source IP (SIP) + Destination IP (DIP):

```
RS G8000 (config)# portchannel hash source-destination-ip
```

Link Aggregation Control Protocol

Link Aggregation Control Protocol (LACP) is an IEEE 802.3ad standard for grouping several physical ports into one logical port (known as a dynamic trunk group or Link Aggregation group) with any device that supports the standard. Please refer to IEEE 802.3ad-2002 for a full description of the standard.

The 802.3ad standard allows standard Ethernet links to form a single Layer 2 link using the Link Aggregation Control Protocol (LACP). Link aggregation is a method of grouping physical link segments of the same media type and speed in full duplex, and treating them as if they were part of a single, logical link segment. If a link in a LACP trunk group fails, traffic is reassigned dynamically to the remaining link(s) of the dynamic trunk group.

Note – LACP implementation in the Blade OS does not support the Churn machine, an option used to detect if the port is operable within a bounded time period between the actor and the partner. Only the Marker Responder is implemented, and there is no marker protocol generator.

A port's Link Aggregation Identifier (LAG ID) determines how the port can be aggregated. The Link Aggregation ID (LAG ID) is constructed mainly from the *system ID* and the port's *admin key*, as follows:

System ID is an integer value based on the switch's MAC address and the system priority assigned in the CLI.

Admin key
A port's Admin key is an integer value (1-65535) that you can configure in the CLI. Each switch port that participates in the same LACP trunk group must have the same *admin key* value. The Admin key is *local significant*, which means the partner switch does not need to use the same Admin key value.

For example, consider two switches, an Actor (the G8000) and a Partner (another switch), as shown in Table 8.

Table 8 Actor vs. Partner LACP configuration

Actor Switch	Partner Switch 1
Port 7 (admin key = 100)	Port 1 (admin key = 50)
Port 8 (admin key = 100)	Port 2 (admin key = 50)

In the configuration shown in Table 8, Actor switch port 7 and port 8 aggregate to form an LACP trunk group with Partner switch port 1 and port 2.

LACP automatically determines which member links can be aggregated and then aggregates them. It provides for the controlled addition and removal of physical links for the link aggregation.

Each port on the switch can have one of the following LACP modes.

- off (default)
  The user can configure this port in to a regular static trunk group.
- active
  The port is capable of forming an LACP trunk. This port sends LACPDU packets to partner system ports.
- passive
  The port is capable of forming an LACP trunk. This port only responds to the LACPDU packets sent from an LACP *active* port.

Each active LACP port transmits LACP data units (LACPDUs), while each passive LACP port listens for LACPDUs. During LACP negotiation, the admin key is exchanged. The LACP trunk group is enabled as long as the information matches at both ends of the link. If the admin key value changes for a port at either end of the link, that port's association with the LACP trunk group is lost.

When the system is initialized, all ports by default are in LACP *off* mode and are assigned unique *admin keys*. To make a group of ports aggregatable, you assign them all the same *admin key*. You must set the port's LACP mode to *active* to activate LACP negotiation. You can set other port's LACP mode to passive, to reduce the amount of LACPDU traffic at the initial trunk-forming stage.

Use the following command to check whether the ports are trunked:

```
RS G8000 # show lacp information
```

Note – If you configure LACP on ports with 802.1X network access control, make sure the ports on both sides of the connection are properly configured for both LACP and 802.1X.

LACP Configuration Guidelines

Consider the following guidelines when you configure LACP trunks:

- The range of potential LACP trunk IDs is 53-104.
- When an LACP trunk forms, the trunk ID is determined by the lowest port number in the trunk. For example, if the lowest port number is 1, then the LACP trunk ID is 53.
- Each port that is configured to participate in LACP must be set to full duplex.

Configuring LACP

Use the following procedure to configure LACP on ports 2-6 to participate in link aggregation.

1. Configure port parameters. All ports that participate in the LACP trunk group must have the same settings, including VLAN membership.
2. Select a range of ports and define the admin key. Only ports with the same admin key can form a LACP trunk group.

```
RS G8000 (config)# interface port 2-6
RS G8000 (config-if)# lacp key 100
```

3. Set the LACP mode.

```
RS G8000 (config-if)# lacp mode active
RS G8000 (config-if)# exit
```

CHAPTER 5

Spanning Tree Group

When multiple paths exist on a network, Spanning Tree Group (STG) configures the network so that a switch uses only the most efficient path. The following topics are discussed in this chapter:

- "STG Overview" on page 73
- "Bridge Protocol Data Units (BPDUs)" on page 74
- "Multiple Spanning Trees" on page 78
- "Multiple Spanning Tree Group Protocol" on page 81
- "Port Fast Forwarding" on page 84
- "Fast Uplink Convergence" on page 84
- "Hot Links" on page 85

STG Overview

Spanning Tree Group (STG) detects and eliminates logical loops in a bridged or switched network. When multiple paths exist, Spanning Tree configures the network so that a switch uses only the most efficient path. If that path fails, Spanning Tree automatically sets up another active path on the network to sustain network operations.

The RackSwitch G8000 (G8000) supports IEEE 802.1D Spanning Tree Protocol. It is compatible with PVST+ by configuring each STP Group in different STP instances.

Note – The G8000 also supports IEEE 802.1w Rapid Spanning Tree Protocol, and IEEE 802.1s Multiple Spanning Tree Protocol. For more information, see Chapter 6, "Rapid Spanning Tree Protocol/Multiple Spanning Tree Protocol."

The relationship between port, trunk groups, VLANs, and Spanning Trees is shown in Table 9.

Table 9 Ports, Trunk Groups, and VLANs

Switch Element	Belongs To
Port	Trunk group or One or more VLANs
Trunk group	One or more VLANs
VLAN (non-default)	One Spanning Tree Group

Note – Due to Spanning Tree's sequence of listening, learning, and forwarding or blocking, lengthy delays may occur. You can use Port Fast Forwarding to permit a port that participates in Spanning Tree to bypass the Listening and Learning states and enter directly into the Forwarding state. While in the Forwarding state, the port listens to the BPDUs to learn if there is a loop and, if dictated by normal STG behavior (following priorities, and so on), the port transitions into the Blocking state. This feature permits the G8000 to interoperate well within Rapid Spanning Tree networks.

Bridge Protocol Data Units (BPDUs)

BDPU Overview

To create a Spanning Tree, the switch generates a configuration Bridge Protocol Data Unit (BPDU), which it then forwards out of its ports. All switches in the Layer 2 network participating in the Spanning Tree gather information about other switches in the network through an exchange of BPDUs.

A BPDU is a 64-byte packet that is sent out at a configurable interval, which is typically set for two seconds. The BPDU is used to establish a path, much like a "hello" packet in IP routing. BPDUs contain information about the transmitting bridge and its ports, including bridge and MAC addresses, bridge priority, port priority, and path cost. If the ports are tagged, each port sends out a special BPDU containing the tagged information.

The generic action of a switch on receiving a BPDU is to compare the received BPDU to its own BPDU that it will transmit. If the received BPDU is better than its own BPDU, it will replace its BPDU with the received BPDU. Then, the switch adds its own bridge ID number and increments the path cost of the BPDU. The switch uses this information to block any necessary ports.

Determining the Path for Forwarding BPDUs

When determining which port to use for forwarding and which port to block, the RackSwitch G8000 uses information in the BPDU, including each bridge priority ID. A technique based on the "lowest root cost" is then computed to determine the most efficient path for forwarding.

Bridge Priority

The bridge priority parameter controls which bridge on the network is the STG root bridge. To make one switch become the root bridge, configure the bridge priority lower than all other switches and bridges on your network. The lower the value, the higher the bridge priority. Use the following command to configure the bridge priority (Global Configuration mode):

```
>> # spanning-tree stp <x> bridge priority
```

Port Priority

The port priority helps determine which bridge port becomes the designated port. In a network topology that has multiple bridge ports connected to a single segment, the port with the lowest port priority becomes the designated port for the segment. Use the following command to configure the port priority (Interface Port mode):

```
>> # spanning-tree stp <x> priority
```

Port Path Cost

The port path cost assigns lower values to high-bandwidth ports, such as Gigabit Ethernet, to encourage their use. The cost of a port also depends on whether the port operates at full-duplex (lower cost) or half-duplex (higher cost). For example, if a 100-Mbps (Fast Ethernet) link has a "cost" of 10 in half-duplex mode, it will have a cost of 5 in full-duplex mode. The objective is to use the fastest links so that the route with the lowest cost is chosen. A value of 0 (the default) indicates that the default cost will be computed for an auto-negotiated link or trunk speed.

Spanning Tree Group Guidelines

This section provides important information on configuring Spanning Tree Groups (STGs):

Adding a VLAN to a Spanning Tree Group

- If no VLANs exist beyond the default VLAN 1 see "Creating a VLAN" on page 76 for information on adding ports to VLANs.
- Add the VLAN to the STG using the following command:

```
>> # spanning-tree stp <STG number> vlan <VLAN number>
```

Note – To ensure proper operation with switches that use Cisco Per VLAN Spanning Tree (PVST+), you must either create a separate STG for each VLAN, or manually add all associated VLANs into a single STG.

Creating a VLAN

When you create a VLAN, that VLAN automatically belongs to STG 1, the default STG. If you want the VLAN in another STG, you must move the VLAN by assigning it to another STG.

- Move a newly created VLAN to an existing STG by following this order:
  - Create the VLAN
  - Add the VLAN to an existing STG
- VLANs must be contained *within* a single STG; a VLAN cannot span multiple STGs. By confining VLANs within a single STG, you avoid problems with spanning tree blocking ports and causing a loss of connectivity within the VLAN. When a VLAN spans multiple switches, it is recommended that the VLAN remain within the same Spanning Tree Group (have the same STG ID) across all the switches.
- If ports are tagged, all trunked ports can belong to multiple STGs.
- A port that is not a member of any VLAN cannot be added to any STG. The port must be added to a VLAN, and that VLAN added to the desired STG.

Rules for VLAN Tagged Ports

- Tagged ports can belong to more than one STG, but untagged ports can belong to only one STG.
- When a tagged port belongs to more than one STG, the egress BPDUs are tagged to distinguish the BPDUs of one STG from those of another STG.
- An untagged port cannot span multiple STGs.

Adding and Removing Ports from STGs

- When you add a port to a VLAN that belongs to an STG, the port is also added to the STG. However, if the port you are adding is an untagged port and is already a member of an STG, that port will not be added to an additional STG because an untagged port cannot belong to more that one STG.

  For example, assume that VLAN 1 belongs to STG 1. You add an untagged port, port 1, that does not belong to any STG to VLAN 1, and port 1 will become part of STG 1.

  If you add *untagged* port 5 (which is a member to STG 2) to STG 1, the switch will prompt you to change the PVID from 2 to 1:

```
"Port 5 is an UNTAGGED port and its current PVID is 2.
Confirm changing PVID from 2 to 1 [y/n]:" y
```

- When you remove a port from VLAN that belongs to an STG, that port will also be removed from the STG. However, if that port belongs to another VLAN in the same STG, the port remains in the STG.

  As an example, assume that port 1 belongs to VLAN 1, and VLAN 1 belongs to STG 1. When you remove port 1 from VLAN 1, port 1 is also removed from STG 1.

  However, if port 1 belongs to both VLAN 1 and VLAN 2 and both VLANs belong to STG 1, removing port 1 from VLAN 1 does not remove port 1 from STG 1 because VLAN 2 is still a member of STG 1.

- An STG cannot be deleted, only disabled. If you disable the STG while it still contains VLAN members, Spanning Tree will be off on all ports belonging to that VLAN.

The relationship between port, trunk groups, VLANs, and Spanning Trees is shown in Table 9.

Multiple Spanning Trees

Each RackSwitch G8000 supports a maximum of 128 Spanning Tree Groups (STGs). Multiple STGs provide multiple data paths, which can be used for load-balancing and redundancy.

You enable load balancing between two G8000s using multiple STGs by configuring each path with a different VLAN and then assigning each VLAN to a separate STG. Each STG is independent. Each STG sends its own Bridge Protocol Data Units (BPDUs), and each STG must be independently configured.

The STG, or bridge group, forms a loop-free topology that includes one or more virtual LANs (VLANs). The switch supports 128 STGs running simultaneously. The default STG 1 may contain an unlimited number of VLANs. All other STGs 2-128 may contain only one VLAN each.

Default Spanning Tree Configuration

In the default configuration, a single STG with the ID of 1 includes all ports on the switch. It is called the default STG. Although ports can be added to or deleted from the default STG, the default STG (STG 1) itself cannot be deleted from the system.

All other STGs are empty and VLANs must be added by the user. However, you cannot assign ports directly to an STG. Instead, add ports to a VLAN first and then add the VLAN to the STG.

Each STG is enabled by default, and assigned an ID number from 2 to 128.

Why Do We Need Multiple Spanning Trees?

The following examples describe why we need multiple spanning trees.

In Figure 9, VLAN 1 and VLAN 2 pass traffic between switch 1 and switch 2. If you have a single Spanning Tree Group, the switches see an apparent physical loop, and one VLAN may become blocked, affecting connectivity, even though no logical loop exists. VLAN 2 traffic is blocked unnecessarily.

Figure 9 Two VLANs on one Spanning Tree Group

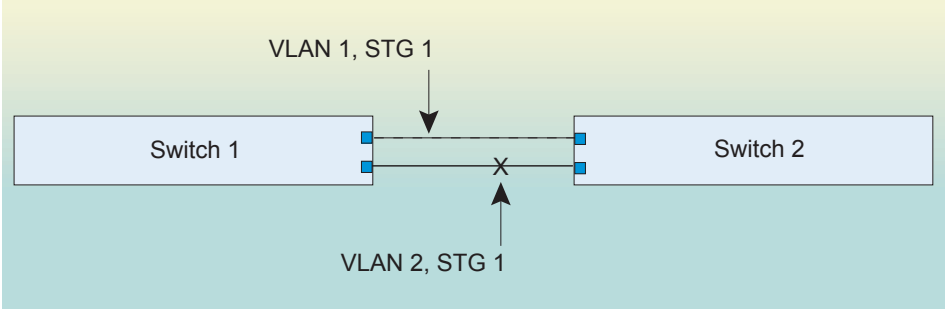

VLAN 2 traffic blocked by STG 1

In Figure 10, VLAN 1 and VLAN 2 belong to different Spanning Tree Groups. The two instances of Spanning Tree separate the topology without forming a loop. Both VLANs can forward packets between the switches without losing connectivity.

Figure 10 Two VLANs, each on a different Spanning Tree Group

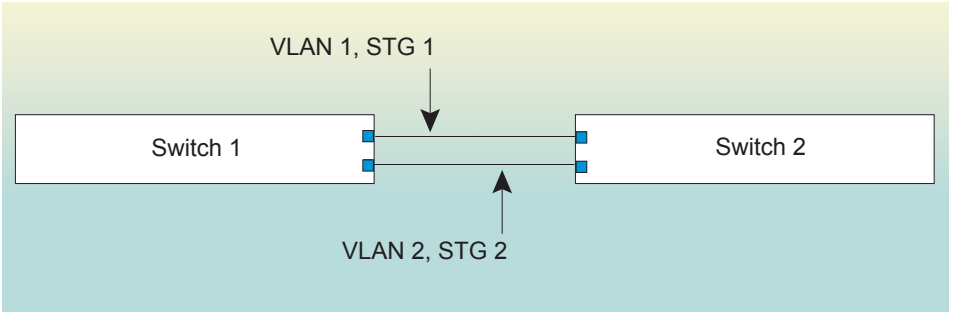

VLAN 1 passes traffic on STG 1
VLAN 2 passes traffic on STG 2

Spanning Tree with ISLs

This configuration shows how to configure Spanning Tree Protocol with Inter-Switch Links (ISLs). In normal operation, the ISL is blocked by Spanning Tree. If there is an uplink failure on one switch, the ISL becomes active, and traffic passes through the ISL to the active uplink.

Figure 11 Spanning Tree with Inter-Switch Links

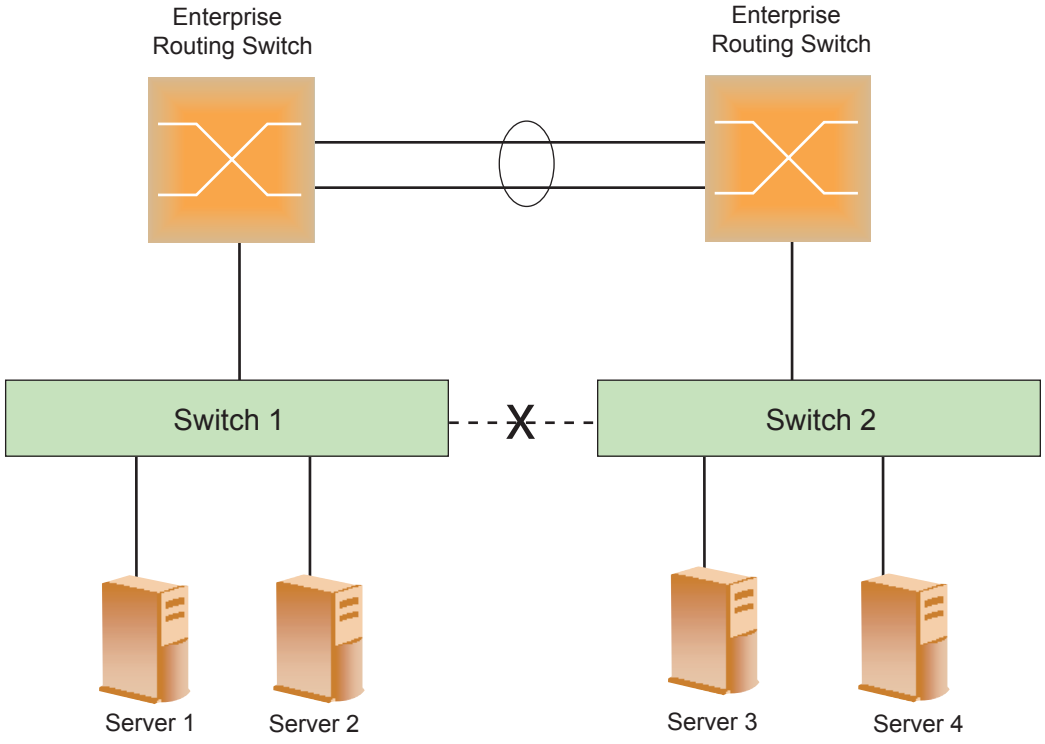

In the example illustrated in Figure 11, assume that port 50 on each switch is used for the ISL. To ensure that the ISL is blocked during normal operation, set the port path cost to a higher value than other paths in the network.

Configure the port path cost on the ISL port for both switches.

```
RS G8000 (config)# interface port 50
RS G8000 (config-if)# spanning-tree stp 1 path-cost 60000
```

Multiple Spanning Tree Group Protocol

Multiple Spanning Tree extends Rapid Spanning Tree Protocol through multiple Spanning Tree Groups, using multiple VLANs in each STG. MSTP supports up to 32 Spanning-Tree instances, that correspond to STP Groups 1-32.

In Multiple Spanning Tree Protocol (MSTP), several VLANs can be mapped to each Spanning-Tree instance. Each Spanning-Tree instance is independent of other instances. MSTP allows frames assigned to different VLANs to follow separate paths, each path based on an independent Spanning-Tree instance. This approach provides multiple forwarding paths for data traffic, enabling load-balancing, and reducing the number of Spanning-Tree instances required to support a large number of VLANs.

MSTP Region

A group of interconnected bridges that share the same attributes is called an MST region. Each bridge within the region must share the following attributes:

- Alphanumeric name
- Revision number
- VLAN-to STG mapping scheme

MSTP provides rapid re-configuration, scalability and control due to the support of regions, and multiple Spanning-Tree instances support within each region.

Common Internal Spanning Tree

The Common Internal Spanning Tree (CIST) provides a common form of Spanning Tree Protocol, with one Spanning-Tree instance that can be used throughout the MSTP region.
CIST allows the switch to interoperate with legacy equipment, including devices that run IEEE 802.1D (1998).

CIST allows the MSTP region to act as a virtual bridge to other bridges outside of the region, and provides a single Spanning-Tree instance to interact with them.

CIST port configuration includes Hello time, path-cost, and interface priority. These parameters do not affect Spanning Tree Groups 1-32. They apply only when the CIST is used.

MSTP Configuration Guidelines

This section provides important information about configuring Multiple Spanning Tree Groups:

- When MSTP is turned on, the switch automatically moves all VLANs to the CIST. When MSTP is turned off, the switch moves all VLANs from the CIST to STG 1.
- When enabling MSTP, Region Name must be configured, and a default version number of one is configured automatically. Each bridge in the region must have the same name, version number, and VLAN mapping.

Figure 12 shows how multiple Spanning Trees can provide redundancy without wasting any uplink ports. In this example, the server ports are split between two separate VLANs. Both VLANs belong to two different Multiple Spanning Tree (MSTP) groups. The Spanning Tree *priority* values are configured so that each routing switch is the root for a different MSTP instance. All of the uplinks are active, with each uplink port backing up the other.

Figure 12 Implementing Multiple Spanning Tree Groups

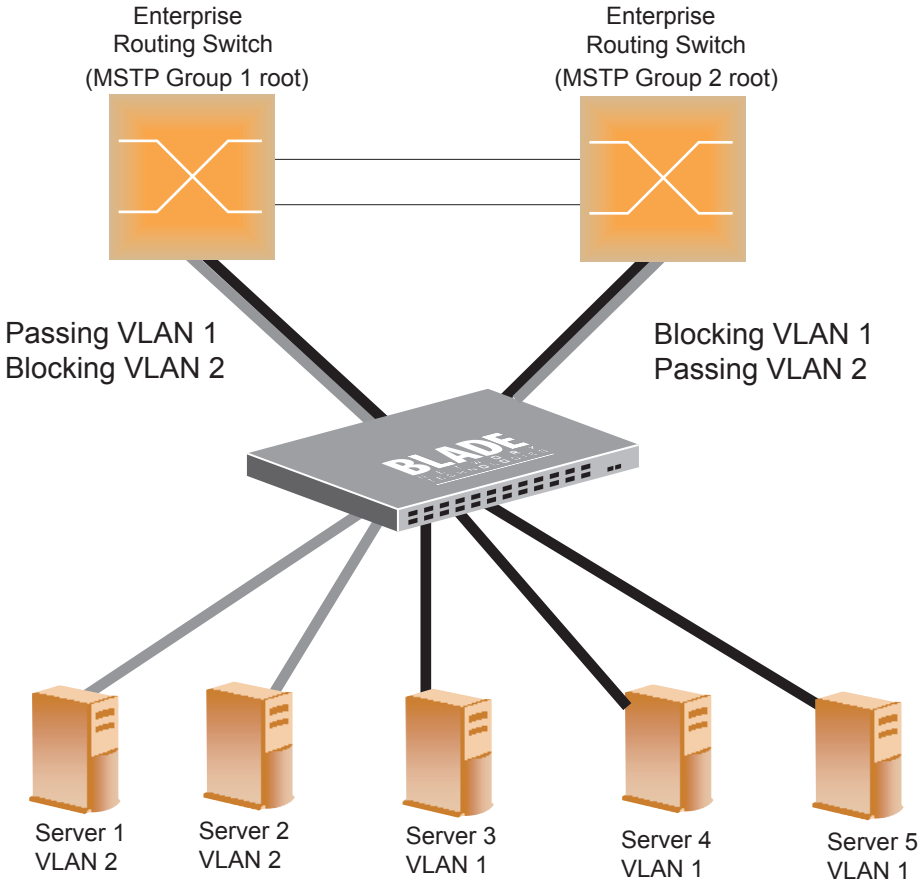

This configuration shows how to configure MSTP Groups on the switch, as shown in Figure 12.

1. Configure port membership and define the Spanning Tree groups for VLAN 1.

   Enable tagging on uplink ports that share VLANs. Port 51 and port 52 connect to the Enterprise Routing switches.

```
RS G8000 (config)# interface port 51
RS G8000 (config-if)# tagging
RS G8000 (config-if)# exit
RS G8000 (config)# interface port 52
RS G8000 (config-if)# tagging
RS G8000 (config-if)# exit
```

   Add server ports 1 and 2 to VLAN 1. Add uplink ports 51 and 52 to VLAN 1.

```
RS G8000 (config)# vlan 1
RS G8000 (config-vlan)# enable
RS G8000 (config-vlan)# member 3
RS G8000 (config-vlan)# member 4
RS G8000 (config-vlan)# member 5
RS G8000 (config-vlan)# member 51
RS G8000 (config-vlan)# member 52
RS G8000 (config-vlan)# stg 1
RS G8000 (config-vlan)# exit
```

2. Configure Multiple Spanning Tree Protocol.

   Configure the MSTP region name, set the Spanning-tree mode to **mst**, and configure the version.

```
RS G8000 (config)# spanning-tree mstp name MyRegion
RS G8000 (config)# spanning-tree mode mst
RS G8000 (config)# spanning-tree mstp version 100
```

3. Configure port membership and define the Spanning Tree groups for VLAN 2.

   Add server ports 3, 4, and 5 to VLAN 2. Add uplink ports 51 and 52 to VLAN 2. Assign VLAN 2 to Spanning Tree Group 2.

```
RS G8000 (config)# vlan 2
RS G8000 (config-vlan)# enable
RS G8000 (config-vlan)# member 1
RS G8000 (config-vlan)# member 2
RS G8000 (config-vlan)# member 51
RS G8000 (config-vlan)# member 52
RS G8000 (config-vlan)# stg 2
RS G8000 (config-vlan)# exit
```

Note – Each Spanning Tree Group (STG) is enabled by default.

Port Fast Forwarding

Port Fast Forwarding permits a port that participates in Spanning Tree to bypass the Listening and Learning states and enter directly into the Forwarding state. While in the Forwarding state, the port listens to the BPDUs to learn if there is a loop and, if dictated by normal STG behavior (following priorities, etc.), the port transitions into the Blocking state. This feature permits the G8000 to interoperate well within Rapid Spanning Tree (RSTP) networks.

Use the following CLI commands to enable Port Fast Forwarding on a port (Interface Port mode):

```
>> # spanning-tree stp <STG number> fastforward
```

Remember to apply and save your configuration changes.

Fast Uplink Convergence

Fast Uplink Convergence enables the G8000 to quickly recover from the failure of the primary link or trunk group in a Layer 2 network using Spanning Tree Protocol. Normal recovery can take as long as 50 seconds, while the backup link transitions from Blocking to Listening to Learning and then Forwarding states. With Fast Uplink Convergence enabled, the G8000 immediately places the secondary path into Forwarding state, and multicasts addresses in the forwarding database (FDB) and ARP table over the secondary link so that upstream switches can learn the new path.

Configuration Guidelines

When you enable Fast Uplink Convergence, BLADE OS automatically makes the following configuration changes:

- Sets the bridge priority to 65535 so that it does not become the root switch.
- Increases the cost of all of the interface ports by 3000, across all VLANs and Spanning Tree Groups. This ensures that traffic never flows through the G8000 to get to another switch unless there is no other path.

These changes are reversed if the feature is disabled.

Configuring Fast Uplink Convergence

Use the following CLI command to enable Fast Uplink Convergence on ports.

```
>> # spanning-tree uplinkfast
```

Hot Links

For network topologies that require Spanning Tree to be turned off, Hot Links provides basic link redundancy with fast recovery.

Hot Links consists of up to 25 triggers. A trigger consists of a pair of layer 2 interfaces, each containing an individual port, trunk, or LACP adminkey. One interface is the Master, and the other is a Backup. While the Master interface is set to the active state and forwards traffic, the Backup interface is set to the standby state and blocks traffic until the Master interface fails. If the Master interface fails, the Backup interface is set to active and forwards traffic. Once the Master interface is restored, it transitions to the standby state and blocks traffic until the Backup interface fails.

You may select a physical port, static trunk, or an LACP adminkey as a Hot Link interface.

Forward Delay

The Forward Delay timer allows Hot Links to monitor the Master and Backup interfaces for link stability before selecting one interface to transition to the active state. Before the transition occurs, the interface must maintain a stable link for the duration of the Forward Delay interval.

For example, if you set the Forward delay timer to 10 seconds, the switch will select an interface to become active only if a link remained stable for the duration of the Forward Delay period. If the link is unstable, the Forward Delay period starts again.

Pre-emption

You can configure the Master interface to resume the active state whenever it becomes available. With Hot Links preemption enabled, the Master interface transitions to the active state immediately upon recovery. The Backup interface immediately transitions to the standby state. If Forward Delay is enabled, the transition occurs when an interface has maintained link stability for the duration of the Forward Delay period.

FDB Update

Use the FDB update option to notify other devices on the network about updates to the Forwarding Database (FDB). When you enable FDB update, the switch sends multicasts of addresses in the forwarding database (FDB) over the active interface, so that other devices on the network can learn the new path. The Hot Links FBD update option uses the station update rate to determine the rate at which to send FDB packets.

Configuration Guidelines

The following configuration guidelines apply to Hot links:

- Ports that are configured as Hot Link interfaces must have STP disabled.
- When Hot Links is turned on, MSTP, RSTP, and PVRST must be turned off.
- When Hot Links is turned on, UplinkFast must be disabled.
- A port that is a member of the Master interface cannot be a member of the Backup interface. A port that is a member of one Hot Links trigger cannot be a member of another Hot Links trigger.
- An individual port that is configured as a Hot Link interface cannot be a member of a trunk.

Configuring Hot Links

Use the following CLI commands to configure Hot Links.

```
>> # hotlinks trigger 1 enable              (Enable Hot Links Trigger 1)
>> # hotlinks trigger 1 master port 1       (Add port to Master interface)
>> # hotlinks trigger 1 backup port 2       (Add port to Backup interface)
>> # hotlinks enable                        (Turn on Hot Links)
```

CHAPTER 6

Link Layer Discovery Protocol

The BLADE OS software support Link Layer Discovery Protocol (LLDP). This chapter discusses the use and configuration of LLDP on the switch:

- "LLDP Overview" on page 87
- "Enabling or Disabling LLDP" on page 88
- "LLDP Transmit Features" on page 89
- "LLDP Receive Features" on page 93
- "LLDP Example Configuration" on page 95

LLDP Overview

Link Layer Discovery Protocol (LLDP) is an IEEE 802.1AB-2005 standard for discovering and managing network devices. LLDP uses Layer 2 (the data link layer), and allows network management applications to extend their awareness of the network by discovering devices that are direct neighbors of already known devices.

With LLDP, the G8000 can advertise the presence of its ports, their major capabilities, and their current status to other LLDP stations in the same LAN. LLDP transmissions occur on ports at regular intervals or whenever there is a relevant change to their status. The switch can also receive LLDP information advertised from adjacent LLDP-capable network devices.

In addition to discovery of network resources, and notification of network changes, LLDP can help administrators quickly recognize a variety of common network configuration problems, such as unintended VLAN exclusions or mis-matched port aggregation membership.

The LLDP transmit function and receive function can be independently configured on a per-port basis. The administrator can allow any given port to transmit only, receive only, or both transmit and receive LLDP information.

The LLDP information to be distributed by the G8000 ports, and that which has been collected from other LLDP stations, is stored in the switch's Management Information Base (MIB). Network Management Systems (NMS) can use Simple Network Management Protocol (SNMP) to access this MIB information. LLDP-related MIB information is read-only.

Changes, either to the local switch LLDP information or to the remotely received LLDP information, are flagged within the MIB for convenient tracking by SNMP-based management systems.

For LLDP to provide expected benefits, all network devices that support LLDP should be consistent in their LLDP configuration.

Enabling or Disabling LLDP

Global LLDP Setting

By default, LLDP is enabled on the G8000. To turn LLDP off or on, use the following commands:

```
>> # lldp enable                          (Turn LLDP off globally)
   or
>> # no lldp enable                       (Turn LLDP on globally)
```

Transmit and Receive Control

The G8000 can also be configured to transmit or receive LLDP information on a port-by-port basis. By default, when LLDP is globally enabled on the switch, G8000 ports transmit and receive LLDP information (see the `tx_rx` option below). To change the LLDP transmit and receive state, the following commands are available:

```
>> # interface port 1                     (Select a switch port)
>> (config-if)# lldp admin-status tx_rx   (Transmit and receive LLDP)
>> (config-if# lldp admin-status tx_only  (Only transmit LLDP)
>> (config-if# lldp admin-status rx_only  (Only receive LLDP)
>> (config-if# no lldp admin-status       (Do not participate in LLDP)
```

To view the LLDP transmit and receive status, use the following commands:

```
>> # show lldp port                       (View LLDP status of all ports)
   or
>> # show interface port <n> lldp         (View status of the selected port)
```

LLDP Transmit Features

Numerous LLDP transmit options are available, including scheduled and minimum transmit interval, expiration on remote systems, SNMP trap notification, and the types of information permitted to be shared.

Scheduled Interval

The G8000 can be configured to transmit LLDP information to neighboring devices once each 5 to 32768 seconds. The scheduled interval is global; the same interval value applies to all LLDP transmit-enabled ports. However, to help balance LLDP transmissions and keep them from being sent simultaneously on all ports, each port maintains its own interval clock, based on its own initialization or reset time. This allows switch-wide LLDP transmissions to be spread out over time, though individual ports comply with the configured interval.

The global transmit interval can be configured using the following command:

```
>> # lldp refresh-interval <interval>
```

where *interval* is the number of seconds between LLDP transmissions. The range is 5 to 32768. The default is 30 seconds.

Minimum Interval

In addition to sending LLDP information at scheduled intervals, LLDP information is also sent when the G8000 detects relevant changes to its configuration or status (such as when ports are enabled or disabled). To prevent the G8000 from sending multiple LLDP packets in rapid succession when port status is in flux, a transmit delay timer can be configured.

The transmit delay timer represents the minimum time permitted between successive LLDP transmissions on a port. Any interval-driven or change-driven updates will be consolidated until the configured transmit delay expires.

The minimum transmit interval can be configured using the following command:

```
>> # lldp transmission-delay <interval>
```

where *interval* is the minimum number of seconds permitted between successive LLDP transmissions on any port. The range is 1 to one-quarter of the scheduled transmit interval (`msgtxint`), up to 8192. The default is 2 seconds.

Time-to-Live for Transmitted Information

The transmitted LLDP information is held by remote systems for a limited time. A time-to-live parameter allows the switch to determine how long the transmitted data should be held before it expires. The hold time is configured as a multiple of the configured transmission interval.

```
>> # lldp holdtime-multiplier <multiplier>
```

where *multiplier* is a value between 2 and 10. The default value is 4, meaning that remote systems will hold the port's LLDP information for 4 x the 30-second `msgtxint` value, or 120 seconds, before removing it from their MIB.

Trap Notifications

If SNMP is enabled on the G8000 (see "Using SNMP" on page 22), each port can be configured to send SNMP trap notifications whenever LLDP transmissions are sent. By default, trap notification is disabled for each port. The trap notification state can be changed using the following commands (Interface Port mode):

```
>> # lldp trap-notification                    (Send SNMP trap notifications)
   or
>> # no lldp trap-notification                 (Do not send trap notifications)
```

In addition to sending LLDP information at scheduled intervals, LLDP information is also sent when the G8000 detects relevant changes to its configuration or status (such as when ports are enabled or disabled). To prevent the G8000 from sending multiple trap notifications in rapid succession when port status is in flux, a global trap delay timer can be configured.

The trap delay timer represents the minimum time permitted between successive trap notifications on any port. Any interval-driven or change-driven trap notices from the port will be consolidated until the configured trap delay expires.

The minimum trap notification interval can be configured using the following command:

```
>> # lldp trap-notification-interval <interval>
```

where *interval* is the minimum number of seconds permitted between successive LLDP transmissions on any port. The range is 1 to 3600. The default is 5 seconds.

If SNMP trap notification is enabled, the notification messages can also appear in the system log. This is enabled by default. To change whether the SNMP trap notifications for LLDP events appear in the system log, use the following commands:

```
>> # logging log lldp                    (Add LLDP notification to Syslog)
   or
>> # no logging log lldp                 (Do not log LLDP notifications)
```

Changing the LLDP Transmit State

When the port is disabled, or when LLDP transmit is turned off for the port using the `admstat` command's `rx_only` or `disabled` options (see "Transmit and Receive Control" on page 88), a final LLDP packet is transmitted with a time-to-live value of 0. Neighbors that receive this packet will remove the LLDP information associated with the G8000 port from their MIB.

In addition, if LLDP is fully disabled on a port (using `admstat disabled`) and later re-enabled, the G8000 will temporarily delay resuming LLDP transmissions on the port in order to allow the port LLDP information to stabilize. The reinitialization delay interval can be globally configured for all ports using the following command:

```
>> # lldp reinit-delay <interval>
```

where *interval* is the number of seconds to wait before resuming LLDP transmissions. The range is between 1 and 10. The default is 2 seconds.

Types of Information Transmitted

When LLDP transmission is permitted on the port (see "Enabling or Disabling LLDP" on page 88), the port advertises the following required information in type/length/value (TLV) format:

- Chassis ID
- Port ID
- LLDP Time-to-Live

LLDP transmissions can also be configured to enable or disable inclusion of optional information, using the following command (Interface Port mode):

```
>> # [no] lldp tlv <type>
```

where *type* is an LLDP information option from Table 10:

Table 10 LLDP Optional Information Types

Type	Description
`portdesc`	Port Description
`sysname`	System Name
`sysdescr`	System Description
`syscap`	System Capabilities
`mgmtaddr`	Management Address
`portvid`	IEEE 802.1 Port VLAN ID
`portprot`	IEEE 802.1 Port and Protocol VLAN ID
`vlanname`	IEEE 802.1 VLAN Name
`protid`	IEEE 802.1 Protocol Identity
`macphy`	IEEE 802.3 MAC/PHY Configuration/Status, including the auto-negotiation, duplex, and speed status of the port.
`powermdi`	IEEE 802.3 Power via MDI, indicating the capabilities and status of devices that require or provide power over twisted-pair copper links.
`linkaggr`	IEEE 802.3 Link Aggregation status for the port.
`framesz`	IEEE 802.3 Maximum Frame Size for the port.
`all`	Select all optional LLDP information for inclusion or exclusion.

By default, all optional LLDP information is included in LLDP transmissions.

LLDP Receive Features

Types of Information Received

When the LLDP receive option is enabled on a port (see "Enabling or Disabling LLDP" on page 88), the port may receive the following information from LLDP-capable remote systems:

- Chassis Information
- Port Information
- LLDP Time-to-Live
- Port Description
- System Name
- System Description
- System Capabilities Supported/Enabled
- Remote Management Address

The G8000 stores the collected LLDP information in the MIB. Each remote LLDP-capable device is responsible for transmitting regular LLDP updates. If the received updates contain LLDP information changes (to port state, configuration, LLDP MIB structures, deletion), the switch will set a change flag within the MIB for convenient notification to SNMP-based management systems.

Viewing Remote Device Information

LLDP information collected from neighboring systems can be viewed in numerous ways:

- Using a centrally-connected LLDP analysis server
- Using an SNMP agent to examine the G8000 MIB
- Using the G8000 Browser-Based Interface (BBI)
- Using CLI or isCLI commands on the G8000

Using the CLI the following command displays remote LLDP information:

```
>> # show lldp remote-device [<index number>]
```

To view a summary of remote information, omit the *Index number* parameter. For example:

```
>> # show lldp remote-device
LLDP Remote Devices Information

LocalPort | Index | Remote Chassis ID    | Remote Port | Remote System Name
----------|-------|---------------------|-------------|--------------------
3         | 1     | 00 18 b1 33 1d 00   | 23          |
```

To view detailed information for a remote device, specify the *Index number* as found in the summary. For example, in keeping with the sample summary, to list details for the first remote device (with an `Index` value of 1), use the following command:

```
>> # show lldp remote-device 1
Local Port Alias: 3
        Remote Device Index     : 1
        Remote Device TTL       : 99
        Remote Device RxChanges : false
        Chassis Type            : Mac Address
        Chassis Id              : 00-18-b1-33-1d-00
        Port Type               : Locally Assigned
        Port Id                 : 23
        Port Description        : 7

        System Name         :
        System Description : BNT 1/10Gb Uplink Ethernet Switch Module,
                             flash image: version 5.1.0,
                             boot image: version 5.1.0.12

        System Capabilities Supported : bridge, router
        System Capabilities Enabled   : bridge, router

        Remote Management Address:
                Subtype             : IPv4
                Address             : 10.100.120.181
                Interface Subtype   : ifIndex
                Interface Number    : 128
                Object Identifier   :
```

Note – Received LLDP information can change very quickly. When using show commands, it is possible that flags for some expected events may be too short-lived to be observed in the output.

Time-to-Live for Received Information

Each remote device LLDP packet includes an expiration time. If the switch port does not receive an LLDP update from the remote device before the time-to-live clock expires, the switch will consider the remote information to be invalid, and will remove all associated information from the MIB.

Remote devices can also intentionally set their LLDP time-to-live to 0, indicating to the switch that the LLDP information is invalid and should be immediately removed.

LLDP Example Configuration

1. Turn LLDP on globally.

```
>> # lldp enable
```

2. Set the global LLDP timer features.

```
>> # lldp transmission-delay 30              (Schedule transmit every 30 seconds)
>> # lldp transmission-delay 2               (Never more often than 2 seconds)
>> # lldp holdtime-multiplier 4              (Hold on remote side for 4 intervals)
>> # lldp reinit-delay 2                     (Wait 2 seconds after reinitialization)
>> # lldp trap-notification-interval 5       (Minimum 5 seconds between traps)
```

3. Set LLDP options for each port.

```
>> # interface port <n>                      (Select a switch port)
>>(config-if)# lldp admin-status tx_rx       (Transmit and receive LLDP)
>>(config-if)# lldp trap-notification        (Enable SNMP trap notifications)
>>(config-if)# lldp tlv all                  (Transmit all optional information)
>>(config-if)# exit
```

4. Enable syslog reporting.

```
>> # logging log lldp
```

5. Apply and Save the configuration.
6. Verify the configuration settings:

```
>> # show lldp
```

7. View remote device information as needed.

```
>> # show lldp remote-device
    or
>> # show lldp remote-device <index number>
```

CHAPTER 7

Quality of Service

Quality of Service features allow you to allocate network resources to mission-critical applications at the expense of applications that are less sensitive to such factors as time delays or network congestion. You can configure your network to prioritize specific types of traffic, ensuring that each type receives the appropriate Quality of Service (QoS) level.

The following topics are discussed in this section:

- "QoS Overview" on page 97
- "Using ACL Filters" on page 99
- "Using DSCP Values to Provide QoS" on page 108
- "Using 802.1p Priorities to Provide QoS" on page 112
- "Queuing and Scheduling" on page 113

QoS Overview

QoS helps you allocate guaranteed bandwidth to the critical applications, and limit bandwidth for less critical applications. Applications such as video and voice must have a certain amount of bandwidth to work correctly; using QoS, you can provide that bandwidth when necessary. Also, you can put a high priority on applications that are sensitive to timing out or cannot tolerate delay by assigning that traffic to a high-priority queue.

By assigning QoS levels to traffic flows on your network, you can ensure that network resources are allocated where they are needed most. QoS features allow you to prioritize network traffic, thereby providing better service for selected applications.

Figure 13 shows the basic QoS model used by the RackSwitch G8000 (G8000).

Figure 13 QoS Model

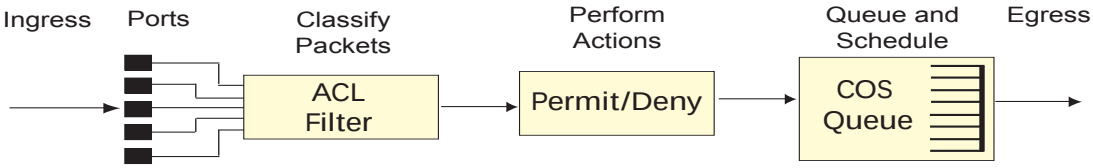

The G8000 uses the Differentiated Services (DiffServ) architecture to provide QoS functions. DiffServ is described in IETF RFC 2474 and RFC 2475.

With DiffServ, you can establish policies to direct traffic. A policy is a traffic-controlling mechanism that monitors the characteristics of the traffic, (for example, its source, destination, and protocol) and performs a controlling action on the traffic when certain characteristics are matched.

The G8000 can classify traffic by reading the DiffServ Code Point (DSCP) or IEEE 802.1p priority value, or by using filters to match specific criteria. When network traffic attributes match those specified in a traffic pattern, the policy instructs the G8000 to perform specified actions on each packet that passes through it. The packets are assigned to different Class of Service (COS) queues and scheduled for transmission.

The basic G8000 QoS model works as follows:

- Classify traffic:
  - Read DSCP
  - Read 802.1p Priority
  - Match ACL filter parameters
- Meter traffic:
  - Define bandwidth and burst parameters
  - Select actions to perform on in-profile and out-of-profile traffic
- Perform actions:
  - Drop packets
  - Pass packets
  - Mark DSCP or 802.1p Priority
  - Set COS queue (with or without re-marking)
- Queue and schedule traffic:
  - Place packets in one of two COS queues
  - Schedule transmission based on the COS queue weight

Using ACL Filters

Access Control Lists (ACLs) are filters that allow you to classify and segment traffic, so you can provide different levels of service to different traffic types. Each filter defines the conditions that must match for inclusion in the filter, and also the actions that are performed when a match is made.

Summary of Packet Classifiers

The G8000 allows you to classify packets based on various parameters, such as:

- Ethernet
  - Source MAC address
  - Destination MAC address
  - VLAN number/mask
  - Ethernet type
  - Ethernet Priority, which is the IEEE 802.1p Priority
- IPv4
  - Source IP address/mask
  - Destination address/mask
  - Type of Service value
  - IP protocol number protocol number or name as shown in Table 11:

Table 11 Well-Known Protocol Types

Number	Protocol Name
1	icmp
2	igmp
6	tcp
17	udp
89	ospf
112	vrrp

- TCP/UDP
  - TCP/UDP application source port as shown in Table 12
  - TCP/UDP application destination port as shown in Table 12
  - TCP/UDP flag value as shown in Table 13

Table 12 Well-Known Application Ports

Number	TCP/UDP Application	Number	TCP/UDP Application	Number	TCP/UDP Application
20	ftp-data	79	finger	179	bgp
21	ftp	80	http	194	irc
22	ssh	109	pop2	220	imap3
23	telnet	110	pop3	389	ldap
25	smtp	111	sunrpc	443	https
37	time	119	nntp	520	rip
42	name	123	ntp	554	rtsp
43	whois	143	imap	1645, 1812	Radius
53	domain	144	news	1813	Radius Accounting
69	tftp	161	snmp	1985	hsrp
70	gopher	162	snmptrap		

Table 13 Well-Known TCP flag values

Flag	Value
URG	0x0020
ACK	0x0010
PSH	0x0008
RST	0x0004
SYN	0x0002
FIN	0x0001

- Packet Format
  - Ethernet format (eth2, SNAP, LLC)
  - Ethernet tagging format
  - IP format (IPv4, IPv6)
- Egress port packets

Summary of ACL Actions

Actions determine how the traffic is treated. The G8000 QoS actions include the following:

- Pass or Drop
- Re-mark a new DiffServ Code Point (DSCP)
- Re-mark the 802.1p field
- Set the COS queue

ACL Port Mirroring

Packets that match an ACL can be mirrored to an interface port. The port through which packets are mirrored must be a physical port. A portchannel cannot be used as a mirror port, but the mirror port can be a member of a portchannel. If the mirror port has an ACL applied to it, it cannot be used to mirror packets for that ACL.

Use the following command to configure an ACL mirror port.

```
>> # access-control list <ACL number> mirror port <port alias or number>
```

ACL Order of Precedence

When multiple ACLs are assigned to a port, the order in which the ACLs are applied to port traffic (or whether they are applied at all) depends on the following factors:

- The precedence group in which the ACL resides;
- The ACL number;
- Whether a prior ACL in the precedence group is also matched;
- And whether the ACL action is compatible with preceding ACLs.

ACLs are automatically divided into precedence groups as follows:

Precedence Group 1 includes ACL 1–128.
Precedence Group 2 includes ACL 129–256.
Precedence Group 3 includes ACL 257–384.
Precedence Group 4 includes ACL 385–512.
Precedence Group 5 includes ACL 513–640.

The switch processes each precedence group in numeric sequence; Precedence group 1 is evaluated first, followed by precedence group 2, and so on.

Within each precedence group, ACLs that are assigned to the port are processed in numeric sequence, based on ACL number. Lower-numbered ACLs take precedence over higher-numbered ACLs. For example, ACL 1 (if assigned to the port) is evaluated first and has top priority within precedence group 1.

For each precedence group, only the first assigned ACL that matches the port traffic is considered. If multiple ACLs in the precedence group match the traffic, only the one with the lowest ACL number is considered. The others in the precedence group are ignored.

One ACL match from each precedence group is permitted, meaning that up to six ACL matches may be considered for action: one from precedence group 1, and one from precedence group 2, and so on.

Of the matching ACLs that are permitted, each configured ACL action is applied in sequence, based on ACL number, with the lowest-numbered ACL's action applied first. If any ACL action contradicts the action of a preceding ACL (one with a lower ACL number), the action of the higher-numbered ACL is ignored.

If no assigned ACL matches the port traffic, no ACL action is applied.

ACL Groups

ACLs allow you to classify packets according to a particular content in the packet header, such as the source address, destination address, source port number, destination port number, and others. Once classified, packet flows can be identified for more processing.

To assist in organizing multiple ACLs and assigning them to ports, you can place ACLs into ACL Groups, thereby defining complex traffic profiles. ACLs and ACL Groups can then be assigned on a per-port basis. Any specific ACL can be assigned to multiple ACL Groups, and any ACL or ACL Group can be assigned to multiple ports. If, as part of multiple ACL Groups, a specific ACL is assigned to a port multiple times, only one instance is used. The redundant entries are ignored.

- **Individual ACLs**

  The G8000 supports up to 640 ACLs. Each ACL defines one filter rule for matching traffic criteria. Each filter rule can also include an action (permit or deny the packet). For example:

  ACL 1:
  VLAN = 1
  SIP = 10.10.10.1 (255.255.255.0)
  Action = permit

- **Access Control List Groups**

  An Access Control List Group (ACL Group) is a collection of ACLs. For example:

ACL Group 1
ACL 1: VLAN = 1 SIP = 10.10.10.1 (255.255.255.0) Action = permit
ACL 2: VLAN = 2 SIP = 10.10.10.2 (255.255.255.0) Action = deny
ACL 3: Priority = 7 DIP = 10.10.10.3 (255.255.255.0) Action = permit

  ACL Groups organize ACLs into traffic profiles that can be more easily assigned to ports. The G8000 supports up to 640 ACL Groups.

Note – ACL Groups are used for convenience in assigning multiple ACLs to ports. ACL Groups have no effect on the ACL order of precedence. All ACLs assigned to the port (whether individually assigned or part of an ACL Group) are considered as individual ACLs for the purposes of determining their order of precedence.

Assigning ACLs to a Port

Once you configure an ACL, you must assign the ACL to a port. Each port can accept multiple ACLs. Note that higher-priority ACLs are considered first, and their action takes precedence over lower-priority ACLs.

When you assign an ACL to a port, the ACL acts only upon ingress traffic, not egress traffic.

To assign an ACL to a port, use the following command:

```
# access-control list <ACL number>
```

To assign an ACL Group to a port, use the following command:

```
# access-control group <ACL group number>
```

ACL Metering and Re-Marking

You can define a profile for the aggregate traffic flowing through the G8000 by configuring a QoS meter (if desired) and assigning ACL Groups to ports. When you add ACL Groups to a port, make sure they are ordered correctly in terms of precedence.

Actions taken by an ACL are called *In-Profile* actions. You can configure additional In-Profile and Out-of-Profile actions on a port. Data traffic can be metered, and re-marked to ensure that the traffic flow provides certain levels of service in terms of bandwidth for different types of network traffic.

Metering

QoS metering provides different levels of service to data streams through user-configurable parameters. A meter is used to measure the traffic stream against a traffic profile, which you create. Thus, creating meters yields In-Profile and Out-of-Profile traffic for each ACL, as follows:

- **In-Profile**–If there is no meter configured or if the packet conforms to the meter, the packet is classified as In-Profile.
- **Out-of-Profile**–If a meter is configured and the packet does not conform to the meter (exceeds the committed rate or maximum burst rate of the meter), the packet is classified as Out-of-Profile.

Using meters, you set a Committed Rate in Kbps (1000 bits per second in each Kbps). All traffic within this Committed Rate is In-Profile. Additionally, you set a Maximum Burst Size that specifies an allowed data burst larger than the Committed Rate for a brief period. These parameters define the In-Profile traffic.

Meters keep the sorted packets within certain parameters. You can configure a meter on an ACL, and perform actions on metered traffic, such as packet re-marking.

Re-Marking

Re-marking allows for the treatment of packets to be reset based on new network specifications or desired levels of service. You can configure the ACL to re-mark a packet as follows:

- Change the DSCP value of a packet, used to specify the service level traffic should receive.
- Change the 802.1p priority of a packet.

Viewing ACL Statistics

ACL statistics display how many packets hit (matched) each ACL. Use ACL statistics to check filter performance, and debug the ACL filters.

You must enable statistics for each ACL that you want to monitor.

```
>> # access-control list <ACL number> statistics
```

ACL Configuration Examples

ACL Example 1

Use this configuration to block traffic to a specific host. All traffic that ingresses on port 1 is denied if it is destined for the host at IP address 100.10.1.1

1. Configure an Access Control List.

```
>> # access-control list 1 ipv4 destination-ip-address 100.10.1.1
>> # access-control list 1 action deny
```

2. Add ACL 1 to port 1.

```
>> # interface port 1
>> # access-control list 1
```

ACL Example 2

Use this configuration to block traffic from a network destined for a specific host address. All traffic that ingresses in port 2 with source IP from the class 100.10.1.0/24 and destination IP 200.20.2.2 is denied.

1. Configure an Access Control List.

```
>> # access-control list 2 ipv4 source-ip-address 100.10.1.0
     255.255.255.0
>> # access-control list 2 ipv4 destination-ip-address 200.20.2.2
     255.255.255.255
>> # access-control list 1 action deny
```

2. Add ACL 2 to port 2.

```
>> # interface port 2
>> # access-control list 2
```

ACL Example 3

Use this configuration to block traffic from a network that is destined for a specific egress port. All traffic that ingresses port 1 from the network 100.10.1.0/24 and is destined for port 20 is denied.

1. Configure an Access Control List.

```
>> # access-control list 3 ipv4 source-ip-address 100.10.1.0
     255.255.255.0
>> # access-control list 3 egress-port 20
>> # access-control list 3 action deny
```

2. Add ACL 3 to port 1.

```
>> # interface port 1
>> # access-control list 3
```

Using Storm Control Filters

The G8000 provides filters that can limit the number of the following packet types transmitted by switch ports:

- Broadcast packets
- Multicast packets
- Unknown unicast packets (destination lookup failure)

Broadcast Storms

Excessive transmission of broadcast or multicast traffic can result in a broadcast storm. A broadcast storm can overwhelm your network with constant broadcast or multicast traffic, and degrade network performance. Common symptoms of a broadcast storm are slow network response times and network operations timing out.

Unicast packets whose destination MAC address is not in the Forwarding Database are *unknown unicasts*. When an unknown unicast is encountered, the switch handles it like a broadcast packet and floods it to all other ports in the VLAN (broadcast domain). A high rate of unknown unicast traffic can have the same negative effects as a broadcast storm.

Configuring Storm Control

Configure broadcast filters on each port that requires broadcast storm control. Set a threshold that defines the total number of broadcast packets transmitted, in Megabits per second. When the threshold is reached, no more packets of the specified type are transmitted.

To filter broadcast packets on a port, use the following commands:

```
RS G8000 (config)# interface port 1
RS G8000 (config-if)# broadcast-threshold <packet rate (0-2097151)>
RS G8000 (config-if)# exit
```

To filter multicast packets on a port, use the following commands:

```
RS G8000 (config)# interface port 1
RS G8000 (config-if)# multicast-threshold <packet rate (0-2097151)>
RS G8000 (config-if)# exit
```

To filter unknown unicast packets on a port, use the following commands:

```
RS G8000 (config)# interface port 1
RS G8000 (config-if)# dest-lookup-threshold <packet rate (0-2097151)>
RS G8000 (config-if)# exit
```

Using DSCP Values to Provide QoS

The six most significant bits in the TOS byte of the IP header are defined as DiffServ Code Points (DSCP). Packets are marked with a certain value depending on the type of treatment the packet must receive in the network device. DSCP is a measure of the Quality of Service (QoS) level of the packet.

Differentiated Services Concepts

To differentiate between traffic flows, packets can be classified by their DSCP value. The Differentiated Services (DS) field in the IP header is an octet, and the first six bits, called the DS Code Point (DSCP), can provide QoS functions. Each packet carries its own QoS state in the DSCP. There are 64 possible DSCP values (0-63).

Figure 14 Layer 3 IPv4 Packet

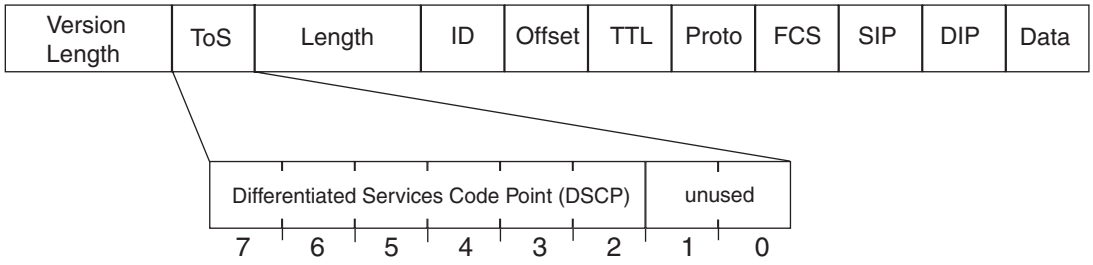

The G8000 can perform the following actions to the DSCP:

- Read the DSCP value of ingress packets
- Re-mark the DSCP value to a new value
- Map the DSCP value to an 802.1p priority

Once the DSCP value is marked, the G8000 can use it to direct traffic prioritization.

Per-Hop Behavior

The DSCP value determines the Per Hop Behavior (PHB) of each packet. The PHB is the forwarding treatment given to packets at each hop. QoS policies are built by applying a set of rules to packets, based on the DSCP value, as they hop through the network.

The G8000 default settings are based on the following standard PHBs, as defined in the IEEE standards:

- Expedited Forwarding (EF)—This PHB has the highest egress priority and lowest drop precedence level. EF traffic is forwarded ahead of all other traffic. EF PHB is described in RFC 2598.
- Assured Forwarding (AF)—This PHB contains four service levels, each with a different drop precedence, as shown below. Routers use drop precedence to determine which packets to discard last when the network becomes congested. AF PHB is described in RFC 2597.

Drop Precedence	Class 1	Class 2	Class 3	Class 4
Low	AF11 (DSCP 10)	AF21 (DSCP 18)	AF31 (DSCP 26)	AF41 (DSCP 34)
Medium	AF12 (DSCP 12)	AF22 (DSCP 20)	AF32 (DSCP 28)	AF42 (DSCP 36)
High	AF13 (DSCP 14)	AF23 (DSCP 22)	AF33 (DSCP 30)	AF43 (DSCP 38)

- Class Selector (CS)—This PHB has eight priority classes, with CS7 representing the highest priority, and CS0 representing the lowest priority, as shown below. CS PHB is described in RFC 2474.

Priority	Class Selector	DSCP
Highest	CS7	56
	CS6	48
	CS5	40
	CS4	32
	CS3	24
	CS2	16
	CS1	8
Lowest	CS0	0

QoS Levels

Table 14 shows the default service levels provided by the G8000, listed from highest to lowest importance:

Table 14 Default QoS Service Levels

Service Level	Default PHB	802.1p Priority
Critical	CS7	7
Network Control	CS6	6
Premium	EF, CS5	5
Platinum	AF41, AF42, AF43, CS4	4
Gold	AF31, AF32, AF33, CS3	3
Silver	AF21, AF22, AF23, CS2	2
Bronze	AF11, AF12, AF13, CS1	1
Standard	DF, CS0	0

DSCP Re-Marking and Mapping

DSCP Re-Marking Overview

The G8000 can re-mark the DSCP value of ingress packets to a new value, and set the 802.1p priority value, based on the DSCP value. You can view the default settings by using the command shown below.

```
>> DSCP Remark# cur
Current DSCP Remarking Configuration: OFF

  DSCP    New DSCP  New 802.1p Prio
--------  --------  ---------------
    0         0          0
    1         1          0
    2         2          0
    3         3          0
    4         4          0
    5         5          0
    6         6          0
    7         7          0
    8         8          1
    9         9          0
   10        10          1
...
   55        55          0
   56        56          7
   57        57          0
   58        58          0
   59        59          0
   60        60          0
   61        61          0
   62        62          0
   63        63          0
```

Use the following command to turn on DSCP re-marking globally.

```
>> # qos dscp re-marking
```

Then you must enable DSCP re-marking on any port that you wish to perform this function (Interface Port mode).

Note – If an ACL meter is configured for DSCP re-marking, the meter function takes precedence over QoS re-marking.

DSCP Re-Marking Configuration Example

1. Turn DSCP re-marking on globally, and define the DSCP-DSCP-802.1p mapping. You can use the default mapping.

```
>> # qos dscp re-marking
>> # qos dscp dscp-mapping <dscp value (0-63)>  <new value>
>> # qos dscp dot1p-mapping <dscp value (0-63)>  <802.1p value>
```

2. Enable DSCP re-marking on a port.

```
>> # interface port 1
>> # qos dscp-remarking
```

Using 802.1p Priorities to Provide QoS

802.1p Overview

BLADE OS provides Quality of Service functions based on the priority bits in a packet's VLAN header. (The priority bits are defined by the 802.1p standard within the IEEE 802.1q VLAN header.) The 802.1p bits, if present in the packet, specify the priority that should be given to packets during forwarding. Packets with a numerically higher (non-zero) priority are given forwarding preference over packets with lower priority bit value.

The IEEE 802.1p standard uses eight levels of priority (0-7). Priority 7 is assigned to highest priority network traffic, such as OSPF or RIP routing table updates, priorities 5-6 are assigned to delay-sensitive applications such as voice and video, and lower priorities are assigned to standard applications. A value of 0 (zero) indicates a "best effort" traffic prioritization, and this is the default when traffic priority has not been configured on your network. The G8000 can filter packets based on the 802.1p values, and it can assign or overwrite the 802.1p value in the packet.

Figure 15 Layer 2 802.1q/802.1p VLAN Tagged Packet

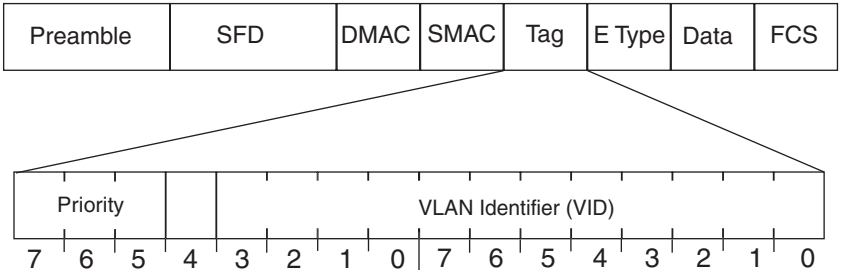

Ingress packets receive a priority value, as follows:

- **Tagged packets**—G8000 reads the 802.1p priority in the VLAN tag.
- **Untagged packets**—G8000 tags the packet and assigns an 802.1p priority, based on the port's default priority.

Egress packets are placed in a COS queue based on the priority value, and scheduled for transmission based on the scheduling weight of the COS queue.

802.1p Configuration Example

1. Configure a port's default 802.1p priority.

```
>> # interface port 1
>> # dot1p <802.1p value (0-7)>
```

2. Map the 802.1p priority value to a COS queue and set the COS queue scheduling weight.

```
>> # qos transmit-queue mapping <802.1p value> <COSq number>
>> # qos transmit-queue weight-cos <COSq number> <COSq weight (0-15)>
```

Queuing and Scheduling

The G8000 can be configured to have either 2 or 8 output Class of Service (COS) queues per port, into which each packet is placed. Each packet's 802.1p priority determines its COS queue, except when an ACL action sets the COS queue of the packet.

Each COS queue uses Weighted Round Robin (WRR) scheduling, with user configurable weight from 1 to 15. The weight of 0 (zero) indicates strict priority, which might starve the low priority queues.

You can configure the following attributes for COS queues:

- Map 802.1p priority value to a COS queue
- Define the scheduling weight of each COS queue

Use the following command to configure COS queues.

```
>> # qos transmit-queue
```

CHAPTER 8

Basic IP Routing

This chapter provides configuration background and examples for using the G8000 to perform IP routing functions. The following topics are addressed in this chapter:

- "IP Routing Benefits" on page 115
- "Routing Between IP Subnets" on page 115
- "Example of Subnet Routing" on page 117
- "ECMP Static Routes" on page 121
- "Dynamic Host Configuration Protocol" on page 122

IP Routing Benefits

The switch uses a combination of configurable IP switch interfaces and IP routing options. The switch IP routing capabilities provide the following benefits:

- Connects the server IP subnets to the rest of the backbone network.
- Provides the ability to route IP traffic between multiple Virtual Local Area Networks (VLANs) configured on the switch.

Routing Between IP Subnets

The physical layout of most corporate networks has evolved over time. Classic hub/router topologies have given way to faster switched topologies, particularly now that switches are increasingly intelligent. The G8000 is intelligent and fast enough to perform routing functions on a par with wire speed Layer 2 switching.

The combination of faster routing and switching in a single device provides another service—it allows you to build versatile topologies that account for legacy configurations.

For example, consider the following topology migration:

Figure 16 The Router Legacy Network

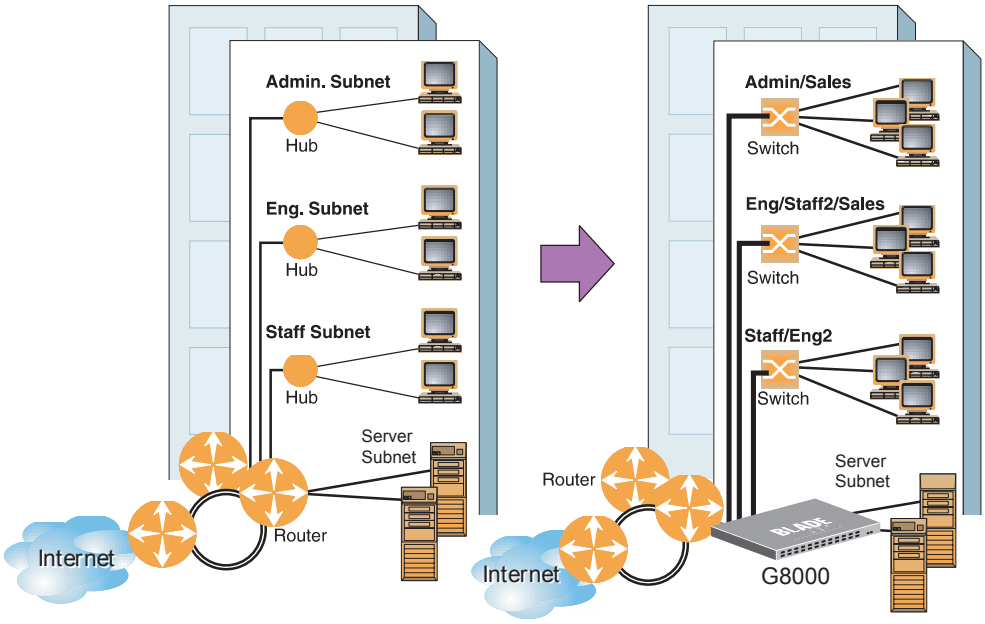

In this example, a corporate campus has migrated from a router-centric topology to a faster, more powerful, switch-based topology. As is often the case, the legacy of network growth and redesign has left the system with a mix of illogically distributed subnets.

This is a situation that switching alone cannot cure. Instead, the router is flooded with cross-subnet communication. This compromises efficiency in two ways:

- Routers can be slower than switches. The cross-subnet side trip from the switch to the router and back again adds two hops for the data, slowing throughput considerably.
- Traffic to the router increases, increasing congestion.

Even if every end-station could be moved to better logical subnets (a daunting task), competition for access to common server pools on different subnets still burdens the routers.

This problem is solved by using switches with built-in IP routing capabilities. Cross-subnet LAN traffic can now be routed within the switches with wire speed Layer 2 switching performance. This not only eases the load on the router but saves the network administrators from reconfiguring each and every end-station with new IP addresses.

Example of Subnet Routing

Consider the role of the G8000 in the following configuration example:

Figure 17 Switch-Based Routing Topology

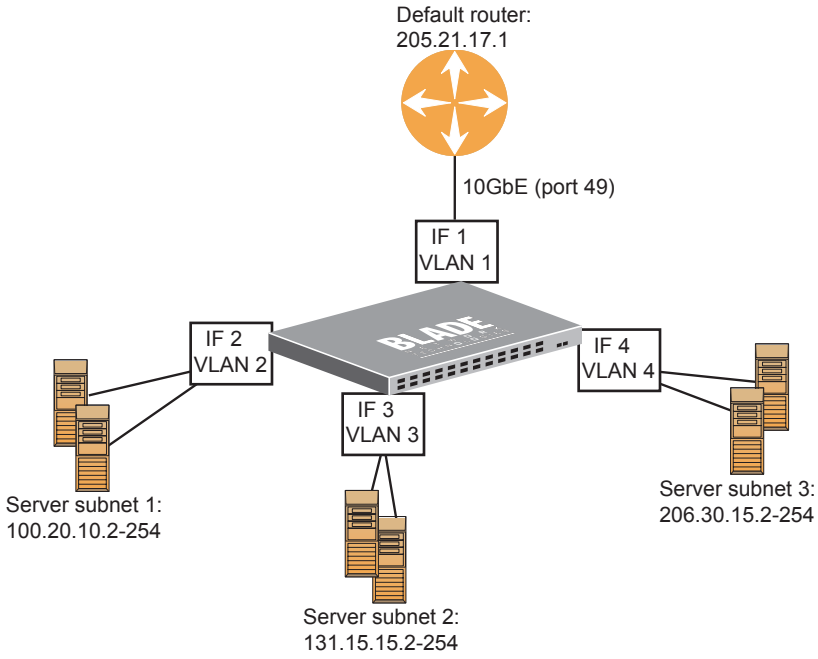

The switch connects the Gigabit Ethernet and Fast Ethernet trunks from various switched subnets throughout one building. Common servers are placed on another subnet attached to the switch. A primary and backup router are attached to the switch on yet another subnet.

Without Layer 3 IP routing on the switch, cross-subnet communication is relayed to the default gateway (in this case, the router) for the next level of routing intelligence. The router fills in the necessary address information and sends the data back to the switch, which then relays the packet to the proper destination subnet using Layer 2 switching.

With Layer 3 IP routing in place on the switch, routing between different IP subnets can be accomplished entirely within the switch. This leaves the routers free to handle inbound and outbound traffic for this group of subnets.

Using VLANs to Segregate Broadcast Domains

If you want to control the broadcasts on your network, use VLANs to create distinct broadcast domains. Create one VLAN for each server subnet, and one for the router.

Configuration Example

This section describes the steps used to configure the example topology shown in Figure 17 on page 117.

1. Assign an IP address (or document the existing one) for each router and each server.

   The following IP addresses are used:

   Table 15 Subnet Routing Example: IP Address Assignments

Subnet	Devices	IP Addresses
1	Default router	205.21.17.1
2	Web servers	100.20.10.2-254
3	Database servers	131.15.15.2-254
4	Terminal Servers	206.30.15.2-254

2. Assign an IP interface for each subnet attached to the switch.

   Since there are four IP subnets connected to the switch, four IP interfaces are needed:

   Table 16 Subnet Routing Example: IP Interface Assignments

Interface	Devices	IP Interface Address
IF 1	Default router	205.21.17.3
IF 2	Web servers	100.20.10.1
IF 3	Database servers	131.15.15.1
IF 4	Terminal Servers	206.30.15.1

3. Determine which switch ports and IP interfaces belong to which VLANs.

   The following table adds port and VLAN information:

Table 17 Subnet Routing Example: Optional VLAN Ports

Devices	IP Interface	Switch Ports	VLAN #
Default router	1	49	1
Web servers	2	1 and 2	2
Database servers	3	3 and 4	3
Terminal Servers	4	5 and 6	4

Note – To perform this configuration, you must be connected to the switch Command Line Interface (CLI) as the administrator.

4. Add the switch ports to their respective VLANs.

   The VLANs shown in Table 17 are configured as follows:

```
RS G8000 (config)# vlan 1
RS G8000 (config-vlan)# enable
RS G8000 (config-vlan)# member 49          (Add ports to VLAN 1)
RS G8000 (config-vlan)# exit
RS G8000 (config)# vlan 2
RS G8000 (config-vlan)# enable
RS G8000 (config-vlan)# member 1,2         (Add ports to VLAN 2)
RS G8000 (config-vlan)# exit
RS G8000 (config)# vlan 3
RS G8000 (config-vlan)# enable
RS G8000 (config-vlan)# member 3,4         (Add ports to VLAN 3)
RS G8000 (config-vlan)# exit
RS G8000 (config)# vlan 4
RS G8000 (config-vlan)# enable
RS G8000 (config-vlan)# member 5,6         (Add ports to VLAN 4)
RS G8000 (config-vlan)# exit
```

   Each time you add a port to a VLAN, you may get the following prompt:

```
Port 4 is an untagged port and its PVID is changed from 1 to 3.
```

5. Assign a VLAN to each IP interface.

   Now that the ports are separated into VLANs, the VLANs are assigned to the appropriate IP interface for each subnet. From Table 17 on page 119, the settings are made as follows:

```
RS G8000 (config)# interface ip 1                    (Select IP interface 1)
RS G8000 (config-ip-if)# ip address 205.21.17.3
RS G8000 (config-ip-if)# ip netmask 255.255.255.0
RS G8000 (config-ip-if)# vlan 1                      (Add VLAN 1)
RS G8000 (config-ip-if)# enable
RS G8000 (config-vlan)# exit
RS G8000 (config)# interface ip 2                    (Select IP interface 2)
RS G8000 (config-ip-if)# ip address 100.20.10.1
RS G8000 (config-ip-if)# ip netmask 255.255.255.0
RS G8000 (config-ip-if)# vlan 2                      (Add VLAN 2)
RS G8000 (config-ip-if)# enable
RS G8000 (config-ip-if)# exit
RS G8000 (config)# interface ip 3                    (Select IP interface 3)
RS G8000 (config-ip-if)# ip address 131.15.15.1
RS G8000 (config-ip-if)# ip netmask 255.255.255.0
RS G8000 (config-ip-if)# vlan 3                      (Add VLAN 3)
RS G8000 (config-ip-if)# enable
RS G8000 (config-ip-if)# exit
RS G8000 (config)# interface ip 4                    (Select IP interface 4)
RS G8000 (config-ip-if)# ip address 206.30.15.1
RS G8000 (config-ip-if)# ip netmask 255.255.255.0
RS G8000 (config-ip-if)# vlan 4                      (Add VLAN 4)
RS G8000 (config-ip-if)# enable
RS G8000 (config-ip-if)# exit
```

6. Configure the default gateway to the routers' addresses.

   The default gateway allows the switch to send outbound traffic to the router:

```
RS G8000 (config)# ip gateway address 205.21.17.1
RS G8000 (config)# ip gateway enable
```

7. Enable IP routing.

```
RS G8000 (config)# ip routing
```

8. Verify the configuration.

```
RS G8000 (config)# show vlan
RS G8000 (config)# show interface information
RS G8000 (config)# show interface ip
```

   Examine the resulting information. If any settings are incorrect, make the appropriate changes.

ECMP Static Routes

Equal-Cost Multi-Path (ECMP) is a forwarding mechanism that routes packets along multiple paths of equal cost. ECMP provides equally-distributed link load sharing across the paths. The hashing algorithm used is based on the source IP address (SIP). ECMP routes allow the switch to choose between several next hops toward a given destination. The switch performs periodic health checks (ping) on each ECMP gateway. If a gateway fails, it is removed from the routing table, and an SNMP trap is sent.

OSPF Integration

When a dynamic route is added through Open Shortest Path First (OSPF), the switch checks the route's gateway against the ECMP static routes. If the gateway matches one of the single or ECMP static route destinations, then the OSPF route is added to the list of ECMP static routes. Traffic is load-balanced across all of the available gateways. When the OSPF dynamic route times out, it is deleted from the list of ECMP static routes.

For more information about OSPF, refer to "OSPF" on page 145.

ECMP Route Hashing

You can configure the parameters used to perform ECMP route hashing, as follows:

- `sip`: Source IP address (default)
- `dipsip`: Source IP address and destination IP address

The ECMP hash setting applies to all ECMP routes.

Configuring ECMP Static Routes

To configure ECMP static routes, add the same route multiple times, each with the same destination IP address, but with a different gateway IP address. These routes become ECMP routes.

1. Add a static route (IP address, subnet mask, gateway, and interface number).

```
RS G8000 (config)# ip route 10.10.1.1 255.255.255.255 100.10.1.1 1
```

2. Add another static route with the same IP address and mask, but a different gateway address.

```
RS G8000 (config)# ip route 10.10.1.1 255.255.255.255 200.20.2.2 1
```

3. Select an ECMP hashing method (optional).

```
RS G8000 (config)# ip route ecmphash {sip|dipsip}
```

You may add up to five (5) gateways for each static route.

Use the following command to check the status of ECMP static routes:

```
RS G8000 (config)# show ip route static

Current ecmp static routes:
Destination     Mask            Gateway         If    GW Status
--------------- --------------- --------------- ---- -----------
10.10.1.1       255.255.255.255 100.10.1.1        1    up
                                200.20.2.2        1    down

10.20.2.2       255.255.255.255 10.233.3.3        1    up
10.20.2.2       255.255.255.255 10.234.4.4        1    up
10.20.2.2       255.255.255.255 10.235.5.5        1    up

ECMP health-check ping interval: 1
ECMP health-check retries number: 3
ECMP Hash Mechanism: dipsip
```

Dynamic Host Configuration Protocol

Dynamic Host Configuration Protocol (DHCP) is a transport protocol that provides a framework for automatically assigning IP addresses and configuration information to other IP hosts or clients in a large TCP/IP network. Without DHCP, the IP address must be entered manually for each network device. DHCP allows a network administrator to distribute IP addresses from a central point and automatically send a new IP address when a device is connected to a different place in the network.

The switch accepts gateway configuration parameters if they have not been configured manually. The switch ignores DHCP gateway parameters if the gateway is configured.

DHCP is an extension of another network IP management protocol, Bootstrap Protocol (BOOTP), with an additional capability of being able to allocate reusable network addresses and configuration parameters for client operation.

Built on the client/server model, DHCP allows hosts or clients on an IP network to obtain their configurations from a DHCP server, thereby reducing network administration. The most significant configuration the client receives from the server is its required IP address; (other optional parameters include the “generic” file name to be booted, the address of the default gateway, and so forth).

Note – DHCP configuration is available only for interface 1.

To enable DHCP on an IP interface, use the following commands:

```
RS G8000 (config)# interface ip 2
RS G8000 (config-ip-if)# dhcp enable
RS G8000 (config-ip-if)# exit
```

DHCP Relay Agent

DHCP is described in RFC 2131, and the DHCP relay agent supported on G8000s is described in RFC 1542. DHCP uses UDP as its transport protocol. The client sends messages to the server on port 67 and the server sends messages to the client on port 68.

DHCP defines the methods through which clients can be assigned an IP address for a finite lease period and allowing reassignment of the IP address to another client later. Additionally, DHCP provides the mechanism for a client to gather other IP configuration parameters it needs to operate in the TCP/IP network.

In the DHCP environment, the G8000 acts as a relay agent. The DHCP relay feature enables the switch to forward a client request for an IP address to two BOOTP servers with IP addresses that have been configured on the switch.

When a switch receives a UDP broadcast on port 67 from a DHCP client requesting an IP address, the switch acts as a proxy for the client, replacing the client source IP (SIP) and destination IP (DIP) addresses. The request is then forwarded as a UDP Unicast MAC layer message to two BOOTP servers whose IP addresses are configured on the switch. The servers respond as a UDP Unicast message back to the switch, with the default gateway and IP address for the client. The destination IP address in the server response represents the interface address on the switch that received the client request. This interface address tells the switch on which VLAN to send the server response to the client.

To enable the G8000 to be the BOOTP forwarder, you need to configure the DHCP/BOOTP server IP addresses on the switch. Generally, you should configure the switch IP interface on the client side to match the client's subnet, and configure VLANs to separate client and server subnets. The DHCP server knows from which IP subnet the newly allocated IP address should come.

In G8000 implementation, there is no need for primary or secondary servers. The client request is forwarded to the BOOTP servers configured on the switch. The use of two servers provide failover redundancy. However, no health checking is supported.

Use the following commands to configure the switch as a DHCP relay agent:

```
>> # ip bootp-relay server 1 <IP address>
>> # ip bootp-relay server 2 <IP address>
>> # ip bootp-relay enable
>> # show ip bootp-relay
```

Additionally, DHCP Relay functionality can be assigned on a per interface basis. Use the following command to enable the Relay functionality (Interface IP mode):

```
>> # relay
```

CHAPTER 9

Routing Information Protocol

In a routed environment, routers communicate with one another to keep track of available routes. Routers can learn about available routes dynamically using the Routing Information Protocol (RIP). BLADE OS software supports RIP version 1 (RIPv1) and RIP version 2 (RIPv2) for exchanging TCP/IP route information with other routers.

Distance Vector Protocol

RIP is known as a distance vector protocol. The vector is the network number and next hop, and the distance is the metric associated with the network number. RIP identifies network reachability based on metric, and metric is defined as hop count. One hop is considered to be the distance from one switch to the next, which typically is 1.

When a switch receives a routing update that contains a new or changed destination network entry, the switch adds 1 to the metric value indicated in the update and enters the network in the routing table. The IP address of the sender is used as the next hop.

Stability

RIP includes a number of other stability features that are common to many routing protocols. For example, RIP implements the split horizon and hold-down mechanisms to prevent incorrect routing information from being propagated.

RIP prevents routing loops from continuing indefinitely by implementing a limit on the number of hops allowed in a path from the source to a destination. The maximum number of hops in a path is 15. The network destination network is considered unreachable if increasing the metric value by 1 causes the metric to be 16 (that is infinity). This limits the maximum diameter of a RIP network to less than 16 hops.

RIP is often used in stub networks and in small autonomous systems that do not have many redundant paths.

Routing Updates

RIP sends routing-update messages at regular intervals and when the network topology changes. Each router "advertises" routing information by sending a routing information update every 30 seconds. If a router doesn't receive an update from another router for 180 seconds, those routes provided by that router are declared invalid. The routes are removed from the routing table, but they remain in the RIP routes table. After another 120 seconds without receiving an update for those routes, the routes are removed from respective regular updates.

When a router receives a routing update that includes changes to an entry, it updates its routing table to reflect the new route. The metric value for the path is increased by 1, and the sender is indicated as the next hop. RIP routers maintain only the best route (the route with the lowest metric value) to a destination.

For more information, see the Configuration section, Routing Information Protocol Configuration in the *BLADE OS Command Reference*.

RIPv1

RIP version 1 use broadcast User Datagram Protocol (UDP) data packets for the regular routing updates. The main disadvantage is that the routing updates do not carry subnet mask information. Hence, the router cannot determine whether the route is a subnet route or a host route. It is of limited usage after the introduction of RIPv2. For more information about RIPv1 and RIPv2, refer to RFC 1058 and RFC 2453.

RIPv2

RIPv2 is the most popular and preferred configuration for most networks. RIPv2 expands the amount of useful information carried in RIP messages and provides a measure of security. For a detailed explanation of RIPv2, refer to RFC 1723 and RFC 2453.

RIPv2 improves efficiency by using multicast UDP (address 224.0.0.9) data packets for regular routing updates. Subnet mask information is provided in the routing updates. A security option is added for authenticating routing updates, by using a shared password. BLADE OS supports using clear password for RIPv2.

RIPv2 in RIPv1 compatibility mode

BLADE OS allows you to configure RIPv2 in RIPv1compatibility mode, for using both RIPv2 and RIPv1 routers within a network. In this mode, the regular routing updates use broadcast UDP data packet to allow RIPv1 routers to receive those packets. With RIPv1 routers as recipients, the routing updates have to carry natural or host mask. Hence, it is not a recommended configuration for most network topologies.

Note – When using both RIPv1 and RIPv2 within a network, use a single subnet mask throughout the network.

RIP Features

BLADE OS provides the following features to support RIPv1 and RIPv2:

Poison

Simple split horizon in RIP scheme omits routes learned from one neighbor in updates sent to that neighbor. That is the most common configuration used in RIP, that is setting this Poison to DISABLE. Split horizon with poisoned reverse includes such routes in updates, but sets their metrics to 16. The disadvantage of using this feature is the increase of size in the routing updates.

Triggered Updates

Triggered updates are an attempt to speed up convergence. When Triggered Updates is enabled, whenever a router changes the metric for a route, it sends update messages almost immediately, without waiting for the regular update interval. It is recommended to enable Triggered Updates.

Multicast

RIPv2 messages use IP multicast address (224.0.0.9) for periodic broadcasts. Multicast RIPv2 announcements are not processed by RIPv1 routers. IGMP is not needed since these are inter-router messages which are not forwarded.

To configure RIPv2 in RIPv1 compatibility mode, set multicast to `disable`, and set version to `both`.

Default

The RIP router can listen and supply a default route, usually represented as 0.0.0.0 in the routing table. When a router does not have an explicit route to a destination network in its routing table, it uses the default route to forward those packets.

Metric

The metric field contains a configurable value between 1 and 15 (inclusive) which specifies the current metric for the interface. The metric value typically indicates the total number of hops to the destination. The metric value of 16 represents an unreachable destination.

Authentication

RIPv2 authentication uses plaintext password for authentication. If configured using Authentication password, then it is necessary to enter an authentication key value.

The following method is used to authenticate a RIP message:

- If the router is not configured to authenticate RIPv2 messages, then RIPv1 and unauthenticated RIPv2 messages are accepted; authenticated RIPv2 messages are discarded.
- If the router is configured to authenticate RIPv2 messages, then RIPv1 messages and RIPv2 messages which pass authentication testing are accepted; unauthenticated and failed authentication RIPv2 messages are discarded.

For maximum security, RIPv1 messages are ignored when authentication is enabled; otherwise, the routing information from authenticated messages is propagated by RIPv1 routers in an unauthenticated manner.

RIP Configuration Example

Note – An interface RIP disabled uses all the default values of the RIP, no matter how the RIP parameters are configured for that interface. RIP sends out RIP regular updates to include an UP interface, but not a DOWN interface.

1. Add VLANs for routing interfaces.

```
>> # vlan 2
>> (config-vlan)# enable
>> (config-vlan)# member 2
Port 2 is an UNTAGGED port and its current PVID is 1.
Confirm changing PVID from 1 to 2 [y/n]: y
>> (config-vlan)# exit
>> # vlan 3
>> (config-vlan)# enable
>> (config-vlan)# member 3
Port 3 is an UNTAGGED port and its current PVID is 1.
Confirm changing PVID from 1 to 3 [y/n]: y
>> (config-vlan)# exit
```

2. Add IP interfaces to VLANs.

```
>> # interface ip 2
>> (config-ip-if)# enable
>> (config-ip-if)# address 102.1.1.1
>> (config-ip-if)# vlan 2
>> (config-ip-if)# exit
>> # interface ip 3
>> (config-ip-if)# enable
>> (config-ip-if)# address 103.1.1.1
>> (config-ip-if)# vlan 3
```

3. Turn on RIP globally and enable RIP for each interface.

```
>> # router rip
>> (config-router-rip)# enable
>> (config-router-rip)# exit
>> # interface ip 2
>> (config-ip-if)# ip rip enable
>> (config-ip-if)# exit
>> # interface ip 3
>> (config-ip-if)# ip rip enable
>> (config-ip-if)# exit
```

Use the following command to check the current valid routes in the routing table of the switch:

```
>> # show ip route
```

For those RIP routes learned within the garbage collection period, that are routes phasing out of the routing table with metric 16, use the following command:

```
>> # show ip rip
```

Locally configured static routes do not appear in the RIP Routes table.

CHAPTER 10

Border Gateway Protocol

Border Gateway Protocol (BGP) is an Internet protocol that enables routers on a network to share and advertise routing information with each other about the segments of the IP address space they can access within their network and with routers on external networks. BGP allows you to decide what is the "best" route for a packet to take from your network to a destination on another network rather than simply setting a default route from your border router(s) to your upstream provider(s). BGP is defined in RFC 1771.

RackSwitch G8000s can advertise their IP interfaces and IP addresses using BGP and take BGP feeds from as many as 16 BGP router peers. This allows more resilience and flexibility in balancing traffic from the Internet.

The following topics are discussed in this section:

- "Internal Routing Versus External Routing" on page 131
- "Forming BGP Peer Routers" on page 133
- "What is a Route Map?" on page 133
- "Aggregating Routes" on page 137
- "Redistributing Routes" on page 137
- "BGP Attributes" on page 138
- "Selecting Route Paths in BGP" on page 139
- "BGP Failover Configuration" on page 140
- "Default Redistribution and Route Aggregation Example" on page 142

Internal Routing Versus External Routing

To ensure effective processing of network traffic, every router on your network needs to know how to send a packet (directly or indirectly) to any other location/destination in your network. This is referred to as *internal routing* and can be done with static routes or using active, internal dynamic routing protocols, such as RIP, RIPv2, and OSPF.

Static routes should have a higher degree of precedence than dynamic routing protocols. If the destination route is not in the route cache, then the packets are forwarded to the default gateway which may be incorrect if a dynamic routing protocol is enabled.

It is also useful to tell routers outside your network (upstream providers or *peers*) about the routes you can access in your network. External networks (those outside your own) that are under the same administrative control are referred to as *autonomous systems* (AS). Sharing of routing information between autonomous systems is known as *external routing*.

External BGP (eBGP) is used to exchange routes between different autonomous systems whereas internal BGP (iBGP) is used to exchange routes within the same autonomous system. An iBGP is a type of internal routing protocol you can use to do active routing inside your network. It also carries AS path information, which is important when you are an ISP or doing BGP transit.

The iBGP peers have to maintain reciprocal sessions to every other iBGP router in the same AS (in a full-mesh manner) in order to propagate route information throughout the AS. If the iBGP session shown between the two routers in AS 20 was not present (as indicated in Figure 18), the top router would not learn the route to AS 50, and the bottom router would not learn the route to AS 11, even though the two AS 20 routers are connected via the RackSwitch G8000.

Figure 18 iBGP and eBGP

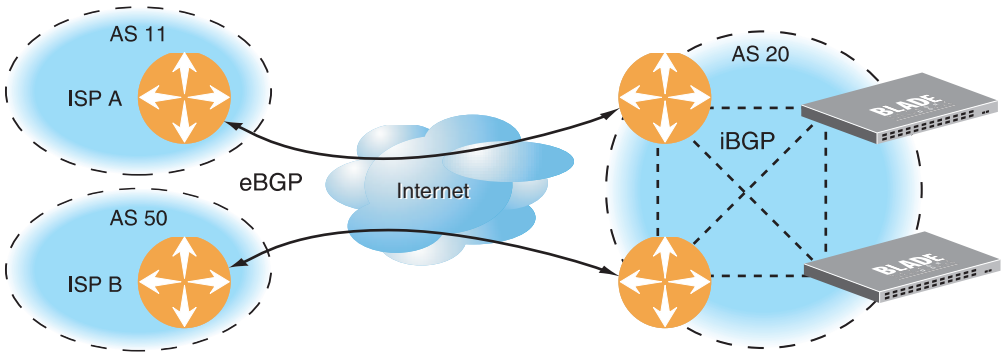

Typically, an AS has one or more *border routers*—peer routers that exchange routes with other ASs—and an internal routing scheme that enables routers in that AS to reach every other router and destination within that AS. When you *advertise* routes to border routers on other autonomous systems, you are effectively committing to carry data to the IP space represented in the route being advertised. For example, if you advertise 192.204.4.0/24, you are declaring that if another router sends you data destined for any address in 192.204.4.0/24, you know how to carry that data to its destination.

Forming BGP Peer Routers

Two BGP routers become peers or neighbors once you establish a TCP connection between them. For each new route, if a peer is interested in that route (for example, if a peer would like to receive your static routes and the new route is static), an update message is sent to that peer containing the new route. For each route removed from the route table, if the route has already been sent to a peer, an update message containing the route to withdraw is sent to that peer.

For each Internet host, you must be able to send a packet to that host, and that host has to have a path back to you. This means that whoever provides Internet connectivity to that host must have a path to you. Ultimately, this means that they must "hear a route" which covers the section of the IP space you are using; otherwise, you will not have connectivity to the host in question.

What is a Route Map?

A route map is used to control and modify routing information. Route maps define conditions for redistributing routes from one routing protocol to another or controlling routing information when injecting it in and out of BGP. Route maps are used by OSPF only for redistributing routes. For example, a route map is used to set a preference value for a specific route from a peer router and another preference value for all other routes learned via the same peer router. For example, the following command is used to define a route map:

```
>> # route-map 1                                    (Select a route map)
```

A route map allows you to match attributes, such as metric, network address, and AS number. It also allows users to overwrite the local preference metric and to append the AS number in the AS route. See "BGP Failover Configuration" on page 140.

BLADE OS allows you to configure 32 route maps. Each route map can have up to eight access lists. Each access list consists of a network filter. A network filter defines an IP address and subnet mask of the network that you want to include in the filter. Figure 19 illustrates the relationship between route maps, access lists and network filters.

Figure 19 Distributing Network Filters in Access Lists and Route Maps

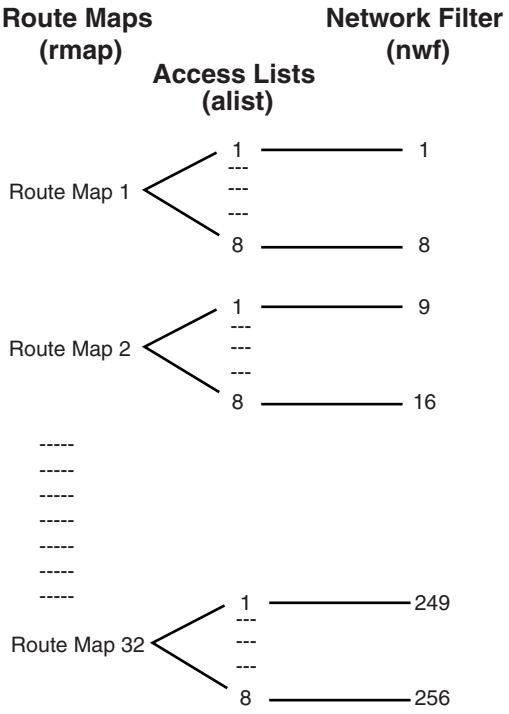

Incoming and Outgoing Route Maps

You can have two types of route maps: incoming and outgoing. A BGP peer router can be configured to support up to eight route maps in the incoming route map list and outgoing route map list.

If a route map is not configured in the incoming route map list, the router imports all BGP updates. If a route map is configured in the incoming route map list, the router ignores all unmatched incoming updates. If you set the action to **`deny`**, you must add another route map to permit all unmatched updates.

Route maps in an outgoing route map list behave similar to route maps in an incoming route map list. If a route map is not configured in the outgoing route map list, all routes are advertised or permitted. If a route map in the outgoing route map list is set to **`permit`**, matched routes are advertised and unmatched routes are ignored.

Precedence

You can set a priority to a route map by specifying a precedence value with the following command (Route Map mode):

```
>> # precedence <1-255>                    (Specify a precedence)
```

The smaller the value the higher the precedence. If two route maps have the same precedence value, the smaller number has higher precedence.

Configuration Overview

To configure route maps, you need to do the following:

1. Define a network filter.

```
>> # ip match-address 1 address <IP address> <subnet mask>
>> # ip match-address 1 enable
```

Enter a filter number from 1 to 256. Specify the IP address and subnet mask of the network that you want to match. Enable the network filter. You can distribute up to 256 network filters among 32 route maps each containing eight access lists.

2. (Optional) Define the criteria for the access list and enable it.

Specify the access list and associate the network filter number configured in Step 1.

```
>> # route-map 1
>> (config-route-map)# access-list 1 match-address 1
>> (config-route-map)# access-list 1 metric <metric value>
>> (config-route-map)# access-list 1 action deny
>> (config-route-map)# access-list 1 enable
```

Steps 2 and 3 are optional, depending on the criteria that you want to match. In Step 2, the network filter number is used to match the subnets defined in the network filter. In Step 3, the autonomous system number is used to match the subnets. Or, you can use both (Step 2 and Step 3) criteria: access list (network filter) and access path (AS filter) to configure the route maps.

3. (Optional) Configure the AS filter attributes.

```
>> (config-route-map)# as-path-list 1 as 1
>> (config-route-map)# as-path-list 1 action deny
>> (config-route-map)# as-path-list 1 enable
```

4. Set up the BGP attributes.

   If you want to overwrite the attributes that the peer router is sending, then define the following BGP attributes:

   - Specify the AS numbers that you want to prepend to a matched route and the local preference for the matched route.
   - Specify the metric [Multi Exit Discriminator (MED)] for the matched route.

```
>> (config-route-map)# as-path-preference <AS number>
>> (config-route-map)# local-preference <local preference number>
>> (config-route-map)# metric <metric value>
```

5. Enable the route map.

```
>> (config-route-map)# enable
```

6. Turn BGP on.

```
>> # router bgp
>> (config-router-bgp)# enable
```

7. Assign the route map to a peer router.

   Select the peer router and then add the route map to the incoming route map list,

```
>> (config-router-bgp)# neighbor 1 route-map in <1-32>
```

   or to the outgoing route map list.

```
>> (config-router-bgp)# neighbor 1 route-map out <1-32>
```

Aggregating Routes

Aggregation is the process of combining several different routes in such a way that a single route can be advertised, which minimizes the size of the routing table. You can configure aggregate routes in BGP either by redistributing an aggregate route into BGP or by creating an aggregate entry in the BGP routing table.

To define an aggregate route in the BGP routing table, use the following commands:

```
>> # router bgp
>> (config-router-bgp)# aggregate-address <1-16> <IP address> <IP mask>
>> (config-router-bgp)# aggregate-address <1-16> enable
```

An example of creating a BGP aggregate route is shown in "Default Redistribution and Route Aggregation Example" on page 142.

Redistributing Routes

In addition to running multiple routing protocols simultaneously, BLADE OS software can redistribute information from one routing protocol to another. For example, you can instruct the switch to use BGP to re-advertise static routes. This applies to all of the IP-based routing protocols.

You can also conditionally control the redistribution of routes between routing domains by defining a method known as route maps between the two domains. For more information on route maps, see "What is a Route Map?" on page 133. Redistributing routes is another way of providing policy control over whether to export OSPF routes, fixed routes, and static routes. For an example configuration, see "Default Redistribution and Route Aggregation Example" on page 142.

Default routes can be configured using the following methods:

- Import
- Originate—The router sends a default route to peers if it does not have any default routes in its routing table.
- Redistribute—Default routes are either configured through the default gateway or learned via other protocols and redistributed to peer routers. If the default routes are from the default gateway, enable the static routes because default routes from the default gateway are static routes. Similarly, if the routes are learned from another routing protocol, make sure you enable that protocol for redistribution.
- None

BGP Attributes

The following two BGP attributes are discussed in this section: Local preference and metric (Multi-Exit Discriminator).

Local Preference Attribute

When there are multiple paths to the same destination, the local preference attribute indicates the preferred path. The path with the higher preference is preferred (the default value of the local preference attribute is 100). Unlike the weight attribute, which is only relevant to the local router, the local preference attribute is part of the routing update and is exchanged among routers in the same AS.

The local preference attribute can be set in one of two ways:

- The following command uses the BGP default local preference method, affecting the outbound direction only.

```
>> (config_router_bgp)# local-preference
```

- The following command uses the route map local preference method, which affects both inbound and outbound directions (Route Map mode).

```
>> (config_route_map)# local-preference
```

Metric (Multi-Exit Discriminator) Attribute

This attribute is a hint to external neighbors about the preferred path into an AS when there are multiple entry points. A lower metric value is preferred over a higher metric value. The default value of the metric attribute is 0.

Unlike local preference, the metric attribute is exchanged between ASs; however, a metric attribute that comes into an AS does not leave the AS.

When an update enters the AS with a certain metric value, that value is used for decision making within the AS. When BGP sends that update to another AS, the metric is reset to 0.

Unless otherwise specified, the router compares metric attributes for paths from external neighbors that are in the same AS.

Selecting Route Paths in BGP

BGP selects only one path as the best path. It does not rely on metric attributes to determine the best path. When the same network is learned via more than one BGP peer, BGP uses its policy for selecting the best route to that network. The BGP implementation on the G8000 uses the following criteria to select a path when the same route is received from multiple peers.

1. Local fixed and static routes are preferred over learned routes.
2. With iBGP peers, routes with higher local preference values are selected.
3. In the case of multiple routes of equal preference, the route with lower AS path weight is selected.

   AS path weight = 128 x AS path length (number of autonomous systems traversed).
4. In the case of equal weight and routes learned from peers that reside in the same AS, the lower metric is selected.

Note – A route with a metric is preferred over a route without a metric.

5. The lower cost to the next hop of routes is selected.
6. In the case of equal cost, the eBGP route is preferred over iBGP.
7. If all routes are from eBGP, the route with the lower router ID is selected.

   When the path is selected, BGP puts the selected path in its routing table and propagates the path to its neighbors.

BGP Failover Configuration

Use the following example to create redundant default gateways for a G8000 at a Web Host/ISP site, eliminating the possibility, should one gateway go down, that requests will be forwarded to an upstream router unknown to the switch.

As shown in Figure 20, the switch is connected to ISP 1 and ISP 2. The customer negotiates with both ISPs to allow the switch to use their peer routers as default gateways. The ISP peer routers will then need to announce themselves as default gateways to the G8000.

Figure 20 BGP Failover Configuration Example

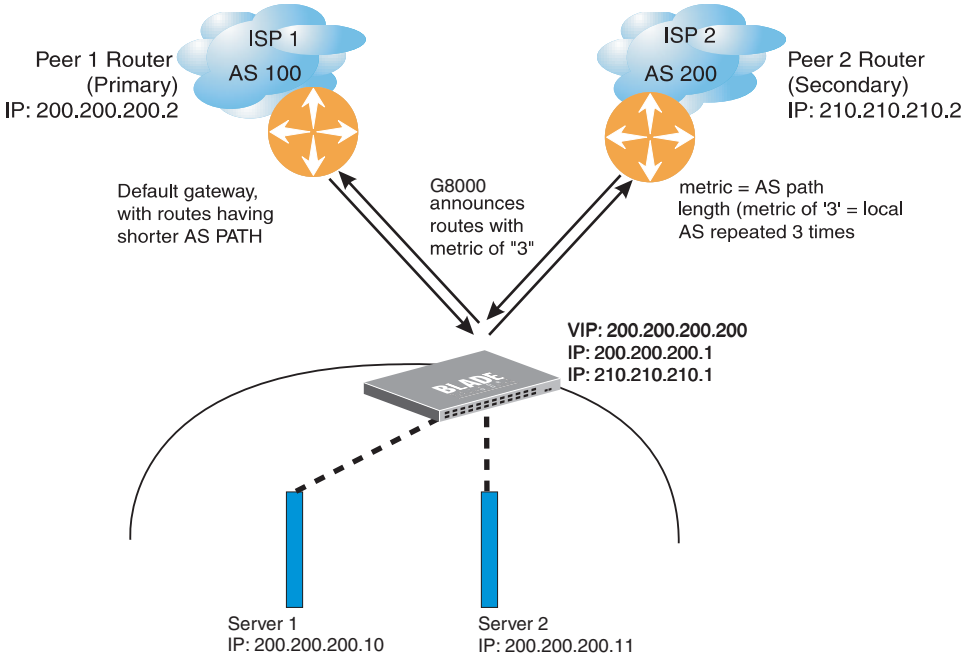

On the G8000, one peer router (the secondary one) is configured with a longer AS path than the other, so that the peer with the shorter AS path will be seen by the switch as the primary default gateway. ISP 2, the secondary peer, is configured with a metric of "3," thereby appearing to the switch to be three router *hops* away.

1. Define the VLANs.

   For simplicity, both default gateways are configured in the same VLAN in this example. The gateways could be in the same VLAN or different VLANs.

```
>> # vlan 1
>> (config-vlan)# member <port number>
```

2. Define the IP interfaces.

   The switch will need an IP interface for each default gateway to which it will be connected. Each interface must be placed in the appropriate VLAN. These interfaces will be used as the primary and secondary default gateways for the switch.

```
>> # interface ip 1
>> (config-ip-if)# ip address 200.200.200.1
>> (config-ip-if)# ip netmask 255.255.255.0
>> (config-ip-if)# enable
>> (config-ip-if)# exit
>> # interface ip 2
>> (config-ip-if)# ip address 210.210.210.1
>> (config-ip-if)# ip netmask 255.255.255.0
>> (config-ip-if)# enable
>> (config-ip-if)# exit
```

3. Enable IP forwarding.

   IP forwarding is turned on by default and is used for VLAN-to-VLAN (non-BGP) routing. Make sure IP forwarding is on if the default gateways are on different subnets or if the switch is connected to different subnets and those subnets need to communicate through the switch (which they almost always do).

```
>> # ip routing
```

Note – To help eliminate the possibility for a Denial of Service (DoS) attack, the forwarding of directed broadcasts is disabled by default.

4. Configure BGP peer router 1 and 2.

```
>> # router bgp
>> (config-router-bgp)# neighbor 1 enable
>> (config-router-bgp)# neighbor 1 remote-address 200.200.200.2
>> (config-router-bgp)# neighbor 1 remote-as 100
>> (config-router-bgp)# neighbor 2 enable
>> (config-router-bgp)# neighbor 2 remote-address 210.210.210.2
>> (config-router-bgp)# neighbor 2 remote-as 200
```

Default Redistribution and Route Aggregation Example

This example shows you how to configure the switch to redistribute information from one routing protocol to another and create an aggregate route entry in the BGP routing table to minimize the size of the routing table.

As illustrated in Figure 21, you have two peer routers: an internal and an external peer router. Configure the G8000 to redistribute the default routes from AS 200 to AS 135. At the same time, configure for route aggregation to allow you to condense the number of routes traversing from AS 135 to AS 200.

Figure 21 Route Aggregation and Default Route Redistribution

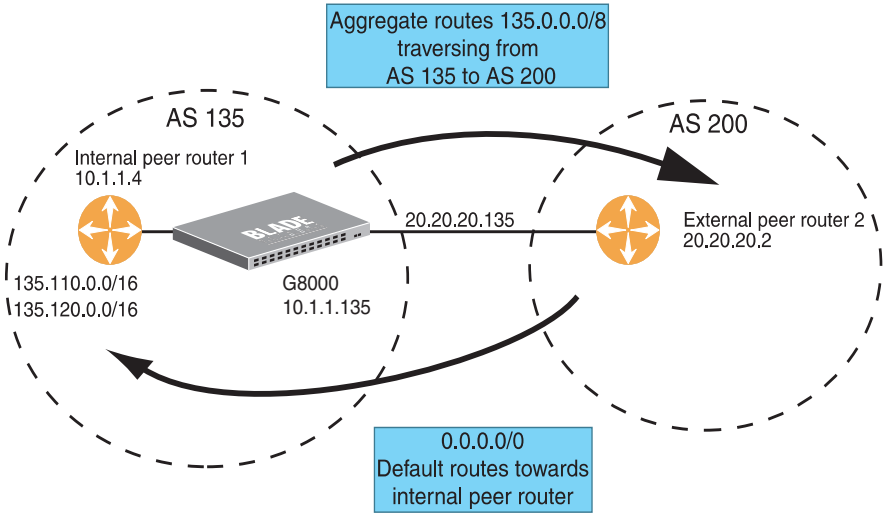

1. Configure the IP interface.
2. Configure the AS number (AS 135) and router ID number (10.1.1.135).

```
>> # router bgp
>> (config-router-bgp)# as 135
>> (config-router-bgp)# exit
>> # ip router-id 10.1.1.135
```

3. Configure internal peer router 1 and external peer router 2.

```
>> # router bgp
>> (config-router-bgp)# neighbor 1 enable
>> (config-router-bgp)# neighbor 1 remote-address 10.1.1.4
>> (config-router-bgp)# neighbor 1 remote-as 135
>> (config-router-bgp)# neighbor 2 enable
>> (config-router-bgp)# neighbor 2 remote-address 20.20.20.2
>> (config-router-bgp)# neighbor 2 remote-as 200
```

4. Configure redistribution for Peer 1.

```
>> (config-router-bgp)# neighbor 1 redistribute default-action redistribute
>> (config-router-bgp)# neighbor 1 redistribute fixed
```

5. Configure aggregation policy control.

   Configure the routes that you want aggregated.

```
>> (config-router-bgp)# aggregate-address 1 135.0.0.0 255.0.0.0
>> (config-router-bgp)# aggregate-address 1 enable
```

CHAPTER 11
OSPF

BLADE OS supports the Open Shortest Path First (OSPF) routing protocol. The BLADE OS implementation conforms to the OSPF version 2 specifications detailed in Internet RFC 1583. The following sections discuss OSPF support for the RackSwitch G8000:

- "OSPF Overview" on page 145. This section provides information on OSPF concepts, such as types of OSPF areas, types of routing devices, neighbors, adjacencies, link state database, authentication, and internal versus external routing.
- "OSPF Implementation in BLADE OS" on page 150. This section describes how OSPF is implemented in BLADE OS, such as configuration parameters, electing the designated router, summarizing routes, defining route maps and so forth.
- "OSPF Configuration Examples" on page 160. This section provides step-by-step instructions on configuring different configuration examples:
  - Creating a simple OSPF domain
  - Creating virtual links
  - Summarizing routes

OSPF Overview

OSPF is designed for routing traffic within a single IP domain called an Autonomous System (AS). The AS can be divided into smaller logical units known as *areas*.

All routing devices maintain link information in their own Link State Database (LSDB). The LSDB for all routing devices within an area is identical but is not exchanged between different areas. Only routing updates are exchanged between areas, thereby significantly reducing the overhead for maintaining routing information on a large, dynamic network.

The following sections describe key OSPF concepts.

Types of OSPF Areas

An AS can be broken into logical units known as *areas*. In any AS with multiple areas, one area must be designated as area 0, known as the *backbone*. The backbone acts as the central OSPF area. All other areas in the AS must be connected to the backbone. Areas inject summary routing information into the backbone, which then distributes it to other areas as needed.

As shown in Figure 22, OSPF defines the following types of areas:

- Stub Area—an area that is connected to only one other area. External route information is not distributed into stub areas.
- Not-So-Stubby-Area (NSSA)—similar to a stub area with additional capabilities. Routes originating from within the NSSA can be propagated to adjacent transit and backbone areas. External routes from outside the AS can be advertised within the NSSA but are not distributed into other areas.
- Transit Area—an area that allows area summary information to be exchanged between routing devices. The backbone (area 0), any area that contains a virtual link to connect two areas, and any area that is not a stub area or an NSSA are considered transit areas.

Figure 22 OSPF Area Types

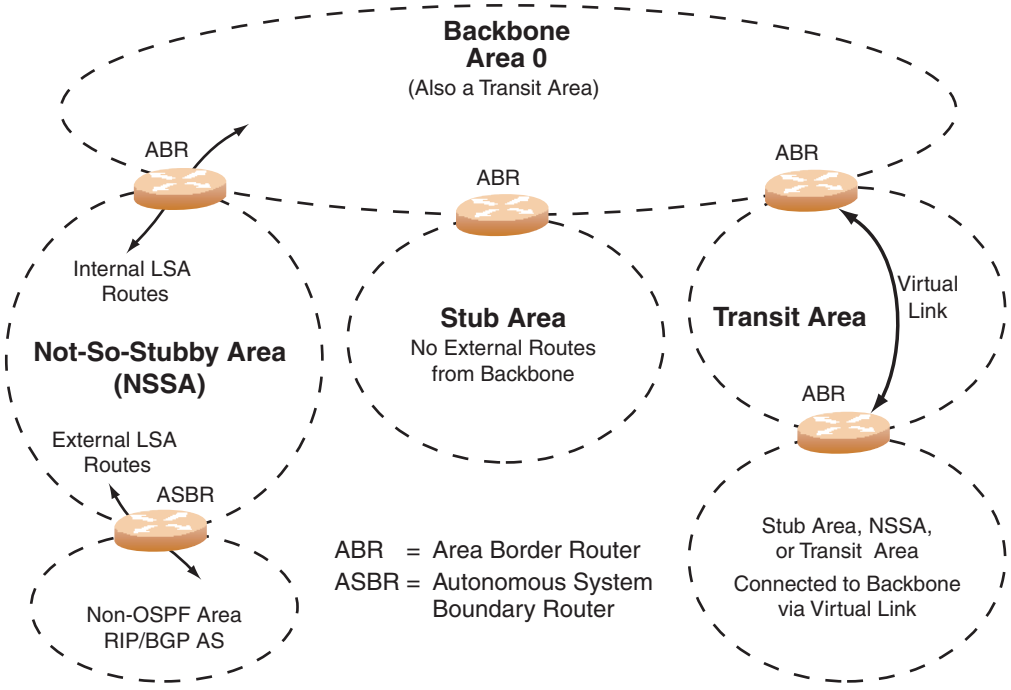

Types of OSPF Routing Devices

As shown in Figure 23, OSPF uses the following types of routing devices:

- Internal Router (IR)—a router that has all of its interfaces within the same area. IRs maintain LSDBs identical to those of other routing devices within the local area.
- Area Border Router (ABR)—a router that has interfaces in multiple areas. ABRs maintain one LSDB for each connected area and disseminate routing information between areas.
- Autonomous System Boundary Router (ASBR)—a router that acts as a gateway between the OSPF domain and non-OSPF domains, such as RIP, BGP, and static routes.

Figure 23 OSPF Domain and an Autonomous System

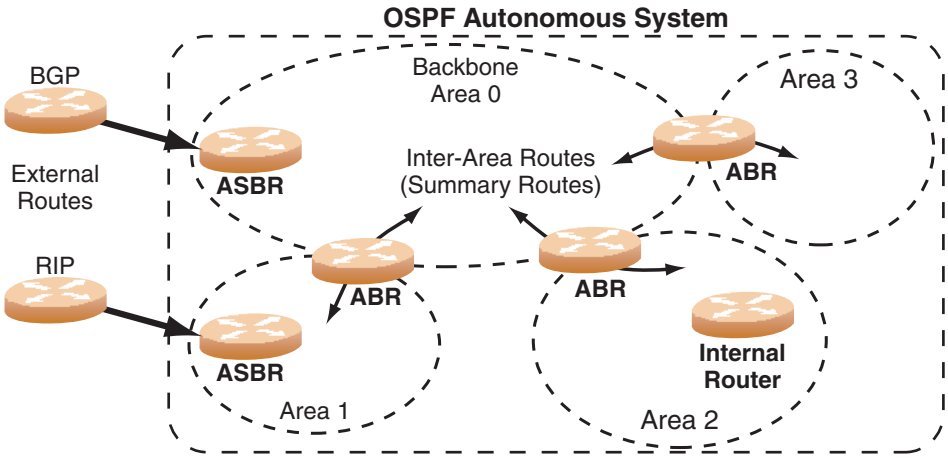

Neighbors and Adjacencies

In areas with two or more routing devices, *neighbors* and *adjacencies* are formed.

Neighbors are routing devices that maintain information about each others' health. To establish neighbor relationships, routing devices periodically send hello packets on each of their interfaces. All routing devices that share a common network segment, appear in the same area, and have the same health parameters (`hello` and `dead` intervals) and authentication parameters respond to each other's hello packets and become neighbors. Neighbors continue to send periodic hello packets to advertise their health to neighbors. In turn, they listen to hello packets to determine the health of their neighbors and to establish contact with new neighbors.

The hello process is used for electing one of the neighbors as the area's Designated Router (DR) and one as the area's Backup Designated Router (BDR). The DR is adjacent to all other neighbors and acts as the central contact for database exchanges. Each neighbor sends its database information to the DR, which relays the information to the other neighbors.

The BDR is adjacent to all other neighbors (including the DR). Each neighbor sends its database information to the BDR just as with the DR, but the BDR merely stores this data and does not distribute it. If the DR fails, the BDR will take over the task of distributing database information to the other neighbors.

The Link-State Database

OSPF is a link-state routing protocol. A *link* represents an interface (or routable path) from the routing device. By establishing an adjacency with the DR, each routing device in an OSPF area maintains an identical Link-State Database (LSDB) describing the network topology for its area.

Each routing device transmits a Link-State Advertisement (LSA) on each of its *active* interfaces. LSAs are entered into the LSDB of each routing device. OSPF uses *flooding* to distribute LSAs between routing devices. Interfaces may also be *passive*. Passive interfaces send LSAs to active interfaces, but do not receive LSAs, hello packets, or any other OSPF protocol information from active interfaces. Passive interfaces behave as stub networks, allowing OSPF routing devices to be aware of devices that do otherwise participate in OSPF (either because they do not support it, or because the administrator chooses to restrict OSPF traffic exchange or transit).

When LSAs result in changes to the routing device's LSDB, the routing device forwards the changes to the adjacent neighbors (the DR and BDR) for distribution to the other neighbors.

OSPF routing updates occur only when changes occur, instead of periodically. For each new route, if an adjacency is interested in that route (for example, if configured to receive static routes and the new route is indeed static), an update message containing the new route is sent to the adjacency. For each route removed from the route table, if the route has already been sent to an adjacency, an update message containing the route to withdraw is sent.

The Shortest Path First Tree

The routing devices use a link-state algorithm (Dijkstra's algorithm) to calculate the shortest path to all known destinations, based on the cumulative *cost* required to reach the destination.

The cost of an individual interface in OSPF is an indication of the overhead required to send packets across it. The cost is inversely proportional to the bandwidth of the interface. A lower cost indicates a higher bandwidth.

Internal Versus External Routing

To ensure effective processing of network traffic, every routing device on your network needs to know how to send a packet (directly or indirectly) to any other location/destination in your network. This is referred to as *internal routing* and can be done with static routes or using active internal routing protocols, such as OSPF, RIP, or RIPv2.

It is also useful to tell routers outside your network (upstream providers or *peers*) about the routes you have access to in your network. Sharing of routing information between autonomous systems is known as *external routing*.

Typically, an AS will have one or more border routers (peer routers that exchange routes with other OSPF networks) as well as an internal routing system enabling every router in that AS to reach every other router and destination within that AS.

When a routing device *advertises* routes to boundary routers on other autonomous systems, it is effectively committing to carry data to the IP space represented in the route being advertised. For example, if the routing device advertises 192.204.4.0/24, it is declaring that if another router sends data destined for any address in the 192.204.4.0/24 range, it will carry that data to its destination.

OSPF Implementation in BLADE OS

BLADE OS supports a single instance of OSPF and up to 4K routes on the network. The following sections describe OSPF implementation in BLADE OS:

- "Configurable Parameters" on page 150
- "Defining Areas" on page 151
- "Interface Cost" on page 153
- "Electing the Designated Router and Backup" on page 153
- "Summarizing Routes" on page 153
- "Default Routes" on page 154
- "Virtual Links" on page 155
- "Router ID" on page 156
- "Authentication" on page 156

Configurable Parameters

In BLADE OS, OSPF parameters can be configured through the Command Line Interfaces (CLI/ISCLI), Browser-Based Interface (BBI), or through SNMP. For more information, see "Accessing the Switch" on page 15."

The CLI supports the following parameters: interface output cost, interface priority, dead and hello intervals, retransmission interval, and interface transmit delay.

In addition to the above parameters, you can also specify the following:

- Shortest Path First (SPF) interval—Time interval between successive calculations of the shortest path tree using the Dijkstra's algorithm.
- Stub area metric—A stub area can be configured to send a numeric metric value such that all routes received via that stub area carry the configured metric to potentially influence routing decisions.
- Default routes—Default routes with weight metrics can be manually injected into transit areas. This helps establish a preferred route when multiple routing devices exist between two areas. It also helps route traffic to external networks.
- Passive—When enabled, the interface sends LSAs to upstream devices, but does not otherwise participate in OSPF protocol exchanges.
- Point-to-Point—For LANs that have only two OSPF routing agents (the G8000 and one other device), this option allows the switch to significantly reduce the amount of routing information it must carry and manage.

Defining Areas

If you are configuring multiple areas in your OSPF domain, one of the areas must be designated as area 0, known as the *backbone*. The backbone is the central OSPF area and is usually physically connected to all other areas. The areas inject routing information into the backbone which, in turn, disseminates the information into other areas.

Since the backbone connects the areas in your network, it must be a contiguous area. If the backbone is partitioned (possibly as a result of joining separate OSPF networks), parts of the AS will be unreachable, and you will need to configure *virtual links* to reconnect the partitioned areas (see "Virtual Links" on page 155).

Up to three OSPF areas can be connected to the G8000 with BLADE OS software. To configure an area, the OSPF number must be defined and then attached to a network interface on the switch. The full process is explained in the following sections.

An OSPF area is defined by assigning ***two*** pieces of information—an *area index* and an *area ID*. The command to define an OSPF area is as follows:

```
>> # router ospf
>> (config-router-ospf)# area <area index> areaid <n.n.n.n>
```

Note – The `area` option above is an arbitrary index used only on the switch and does not represent the actual OSPF area number. The actual OSPF area number is defined in the `area` portion of the command as explained in the following sections.

Assigning the Area Index

The `area` <*area index*> option is actually just an arbitrary index (0-2) used only by the G8000. This index number does not necessarily represent the OSPF area number, though for configuration simplicity, it should where possible.

For example, both of the following sets of commands define OSPF area 0 (the backbone) and area 1 because that information is held in the area ID portion of the command. However, the first set of commands is easier to maintain because the arbitrary area indexes agree with the area IDs:

- Area index and area ID agree

```
area 0 areaid 0.0.0.0      (Use index 0 to set area 0 in ID octet format)
area 1 areaid 0.0.0.1      (Use index 1 to set area 1 in ID octet format)
```

- Area index set to an arbitrary value

```
area 1 areaid 0.0.0.0      (Use index 1 to set area 0 in ID octet format)
area 2 areaid 0.0.0.1      (Use index 2 to set area 1 in ID octet format)
```

Using the Area ID to Assign the OSPF Area Number

The OSPF area number is defined in the `areaid` <*IP address*> option. The octet format is used in order to be compatible with two different systems of notation used by other OSPF network vendors. There are two valid ways to designate an area ID:

- Placing the area number in the last octet (0.0.0.*n*)

  Most common OSPF vendors express the area ID number as a single number. For example, the Cisco IOS-based router command "`network 1.1.1.0 0.0.0.255 area 1`" defines the area number simply as "`area 1.`" On the G8000, using the last octet in the area ID, "`area 1`" is equivalent to "`area-id 0.0.0.1`".

- Multi-octet (*IP address*)

  Some OSPF vendors express the area ID number in multi-octet format. For example, "`area 2.2.2.2`" represents OSPF area 2 and can be specified directly on the G8000 as "`area-id 2.2.2.2`".

Note – Although both types of area ID formats are supported, be sure that the area IDs are in the same format throughout an area.

Attaching an Area to a Network

Once an OSPF area has been defined, it must be associated with a network. To attach the area to a network, you must assign the OSPF area index to an IP interface that participates in the area. The format for the command is as follows:

```
>> # interface ip <interface number>
>> (config-ip-if)# ip ospf area <area index>
```

For example, the following commands could be used to configure IP interface 14 for a presence on the 10.10.10.1/24 network, to define OSPF area 1, and to attach the area to the network:

```
>> # router ospf
>> (config-router-ospf)# area 1 areaid 0.0.0.1
>> (config-router-ospf)# enable
>> (config-router-ospf)# exit

>> # interface ip 14
>> (config-ip-if)# ip address 10.10.10.1
>> (config-ip-if)# ip netmask 255.255.255.0
>> (config-ip-if)# enable
>> (config-ip-if)# ip ospf area 1
>> (config-ip-if)# ip ospf enable
```

Interface Cost

The OSPF link-state algorithm (Dijkstra's algorithm) places each routing device at the root of a tree and determines the cumulative *cost* required to reach each destination. Usually, the cost is inversely proportional to the bandwidth of the interface. Low cost indicates high bandwidth. You can manually enter the cost for the output route with the following command (Interface IP mode):

```
>> (config-ip-if)# ip ospf cost <cost value (1-65535)>
```

Electing the Designated Router and Backup

In any area with more than two routing devices, a Designated Router (DR) is elected as the central contact for database exchanges among neighbors, and a Backup Designated Router (BDR) is elected in case the DR fails.

DR and BDR elections are made through the `hello` process. The election can be influenced by assigning a priority value to the OSPF interfaces on the G8000. The command is as follows:

```
>> (config-ip-if)# ip ospf priority <priority value (0-255)>
```

A priority value of 255 is the highest, and 1 is the lowest. A priority value of 0 specifies that the interface cannot be used as a DR or BDR. In case of a tie, the routing device with the highest router ID wins. Interfaces configured as *passive* do not participate in the DR or BDR election process:

```
>> (config-ip-if)# ip ospf passive-interface
```

Summarizing Routes

Route summarization condenses routing information. Without summarization, each routing device in an OSPF network would retain a route to every subnet in the network. With summarization, routing devices can reduce some sets of routes to a single advertisement, reducing both the load on the routing device and the perceived complexity of the network. The importance of route summarization increases with network size.

Summary routes can be defined for up to 16 IP address ranges using the following command:

```
>> (config-router-ospf)# area-range <range number> address <IP address> <mask>
```

where <*range number*> is a number 1 to 16, <*IP address*> is the base IP address for the range, and <*mask*> is the IP address mask for the range. For a detailed configuration example, see "Example 3: Summarizing Routes" on page 167.

Default Routes

When an OSPF routing device encounters traffic for a destination address it does not recognize, it forwards that traffic along the *default route*. Typically, the default route leads upstream toward the backbone until it reaches the intended area or an external router.

Each G8000 acting as an ABR automatically inserts a default route into each attached area. In simple OSPF stub areas or NSSAs with only one ABR leading upstream (see Area 1 in Figure 24), any traffic for IP address destinations outside the area is forwarded to the switch's IP interface, and then into the connected transit area (usually the backbone). Since this is automatic, no further configuration is required for such areas.

Figure 24 Injecting Default Routes

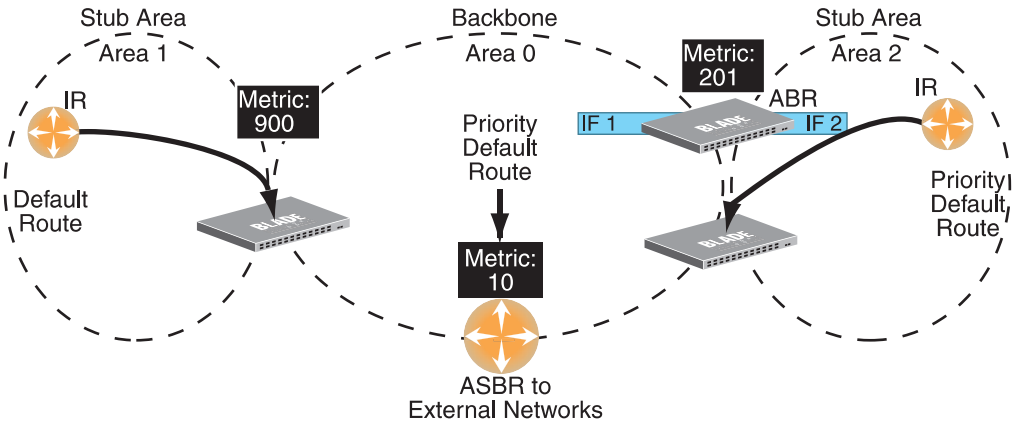

If the switch is in a transit area and has a configured default gateway, it can inject a default route into rest of the OSPF domain. Use the following command to configure the switch to inject OSPF default routes (Router OSPF mode):

```
>> # default-information <metric value> <metric type (1 or 2)>
```

In the command above, <*metric value*> sets the priority for choosing this switch for default route. The value `none` sets no default and 1 sets the highest priority for default route. Metric type determines the method for influencing routing decisions for external routes.

When the switch is configured to inject a default route, an AS-external LSA with link state ID 0.0.0.0 is propagated throughout the OSPF routing domain. This LSA is sent with the configured metric value and metric type.

The OSPF default route configuration can be removed with the command:

```
>> (config-router-ospf)# no default-information
```

Virtual Links

Usually, all areas in an OSPF AS are physically connected to the backbone. In some cases where this is not possible, you can use a *virtual link*. Virtual links are created to connect one area to the backbone through another non-backbone area (see Figure 22 on page 146).

The area which contains a virtual link must be a transit area and have full routing information. Virtual links cannot be configured inside a stub area or NSSA. The area type must be defined as `transit` using the following command:

```
>> (config-router-ospf)# area <area index> type transit
```

The virtual link must be configured on the routing devices at each endpoint of the virtual link, though they may traverse multiple routing devices. To configure a G8000 as one endpoint of a virtual link, use the following command:

```
>> (config-router-ospf)# area-virtual-link <link number> neighbor-router <router ID>
```

where <*link number*> is a value between 1 and 3, <*area index*> is the OSPF area index of the transit area, and <*router ID*> is the IP address of the virtual neighbor, the routing device at the target endpoint. Another router ID is needed when configuring a virtual link in the other direction. To provide the G8000 with a router ID, see the following section Router ID.

For a detailed configuration example on Virtual Links, see “Example 2: Virtual Links” on page 163.

Router ID

Routing devices in OSPF areas are identified by a router ID. The router ID is expressed in IP address format. The IP address of the router ID is not required to be included in any IP interface range or in any OSPF area, and may even use the G8000 loopback interface.

The router ID can be configured in one of the following two ways:

- Dynamically—OSPF protocol configures the lowest IP interface IP address as the router ID (loopback interface has priority over the IP interface). This is the default.
- Statically—Use the following command to manually configure the router ID:

```
>> # ip router-id <IP address>
```

  If there is a loopback interface, its IP address is always preferred as the router ID, instead of an IP interface address. The **ip router-id** command is the preferred method to set the router ID and it is always used in preference to the other methods.
- To modify the router ID from static to dynamic, set the router ID to 0.0.0.0, save the configuration, and reboot the G8000.
- To view the router ID, use the following command:

```
>> # show ip ospf
```

Authentication

OSPF protocol exchanges can be authenticated so that only trusted routing devices can participate. This ensures less processing on routing devices that are not listening to OSPF packets.

OSPF allows packet authentication and uses IP multicast when sending and receiving packets. Routers participate in routing domains based on pre-defined passwords. BLADE OS supports simple password (type 1 plain text passwords) and MD5 cryptographic authentication. This type of authentication allows a password to be configured per area.

Figure 25 shows authentication configured for area 0 with the password test. Simple authentication is also configured for the virtual link between area 2 and area 0. Area 1 is not configured for OSPF authentication.

Figure 25 OSPF Authentication

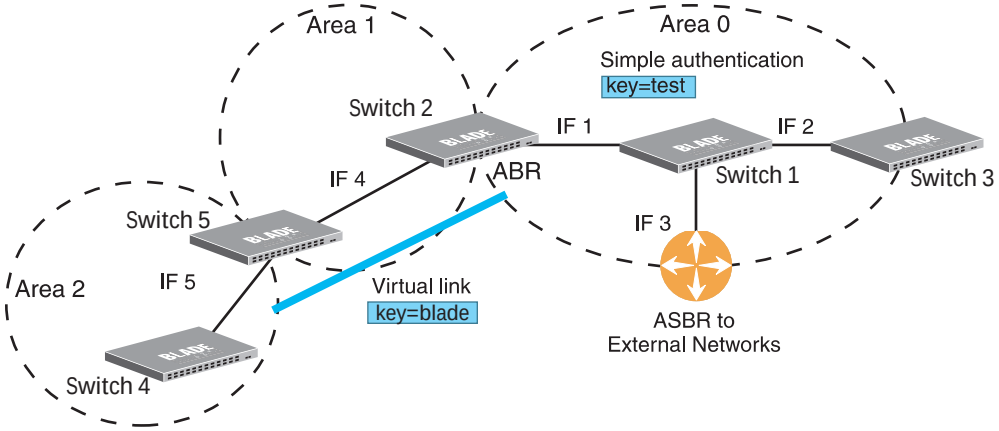

Configuring Plain Text OSPF Passwords

To configure simple plain text OSPF passwords on the switches shown in Figure 25 use the following commands:

1. Enable OSPF authentication for Area 0 on switches 1, 2, and 3.

```
>> (config-router-ospf)# area 0 authentication-type password
```

2. Configure a simple text password up to eight characters for each OSPF IP interface in Area 0 on switches 1, 2, and 3.

```
>> # interface ip 1
>> (config-ip-if)# ip ospf key test
>> (config-ip-if)# exit
>> # interface ip 2
>> (config-ip-if)# ip ospf key test
>> (config-ip-if)# exit
>> # interface ip 3
>> (config-ip-if)# ip ospf key test
>> (config-ip-if)# exit
```

3. Enable OSPF authentication for Area 2 on switch 4.

```
>> # router ospf
>> (config-router-ospf)# area 2 authentication-type password
```

4. Configure a simple text password up to eight characters for the virtual link between Area 2 and Area 0 on switches 2 and 4.

```
>> # area-virtual-link 1 key blade
```

Configuring MD5 Authentication

Use the following commands to configure MD5 authentication on the switches shown in Figure 25:

1. Enable OSPF MD5 authentication for Area 0 on switches 1, 2, and 3.

```
>> # area 0 authentication-type md5
```

2. Configure MD5 key ID for Area 0 on switches 1, 2, and 3.

```
>> # message-digest-key 1 md5-key test
```

3. Assign MD5 key ID to OSPF interfaces on switches 1, 2, and 3.

```
>> # interface ip 1
>> (config-ip-if)# ip ospf message-digest-key 1
>> (config-ip-if)# exit
>> # interface ip 2
>> (config-ip-if)# ip ospf message-digest-key 1
>> (config-ip-if)# exit
>> # interface ip 3
>> (config-ip-if)# ip ospf message-digest-key 1
>> (config-ip-if)# exit
```

4. Enable OSPF MD5 authentication for Area 2 on switch 4.

```
>> # router ospf
>> (config-router-ospf)# area 1 authentication-type md5
```

5. Configure MD5 key for the virtual link between Area 2 and Area 0 on switches 2 and 4.

```
>> (config-router-ospf)# message-digest-key 2 md5-key test
```

6. Assign MD5 key ID to OSPF virtual link on switches 2 and 4.

```
>> (config-router-ospf)# area-virtual-link 1 message-digest-key 2
```

Host Routes for Load Balancing

BLADE OS implementation of OSPF includes host routes. Host routes are used for advertising network device IP addresses to external networks, accomplishing the following goals:

- ABR Load Sharing

  As a form of load balancing, host routes can be used for dividing OSPF traffic among multiple ABRs. To accomplish this, each switch provides identical services but advertises a host route for a different IP address to the external network. If each IP address serves a different and equal portion of the external world, incoming traffic from the upstream router should be split evenly among ABRs.

- ABR Failover

  Complementing ABR load sharing, identical host routes can be configured on each ABR. These host routes can be given different costs so that a different ABR is selected as the preferred route for each server and the others are available as backups for failover purposes.

- Equal Cost Multipath (ECMP)

  With equal cost multipath, a router potentially has several available next hops towards any given destination. ECMP allows separate routes to be calculated for each IP Type of Service. All paths of equal cost to a given destination are calculated, and the next hops for all equal-cost paths are inserted into the routing table.

If redundant routes via multiple routing processes (such as OSPF, RIP, BGP, or static routes) exist on your network, the switch defaults to the OSPF-derived route.

OSPF Features Not Supported in This Release

The following OSPF features are not supported in this release:

- Summarizing external routes
- Filtering OSPF routes
- Using OSPF to forward multicast routes
- Configuring OSPF on non-broadcast multi-access networks (such as frame relay, X.25, or ATM)

OSPF Configuration Examples

A summary of the basic steps for configuring OSPF on the G8000 is listed here. Detailed instructions for each of the steps is covered in the following sections:

1. Configure IP interfaces.

   One IP interface is required for each desired network (range of IP addresses) being assigned to an OSPF area on the switch.

2. (Optional) Configure the router ID.

   The router ID is required only when configuring virtual links on the switch.

3. Enable OSPF on the switch.
4. Define the OSPF areas.
5. Configure OSPF interface parameters.

   IP interfaces are used for attaching networks to the various areas.

6. (Optional) Configure route summarization between OSPF areas.
7. (Optional) Configure virtual links.
8. (Optional) Configure host routes.

Example 1: Simple OSPF Domain

In this example, two OSPF areas are defined—one area is the backbone and the other is a stub area. A stub area does not allow advertisements of external routes, thus reducing the size of the database. Instead, a default summary route of IP address 0.0.0.0 is automatically inserted into the stub area. Any traffic for IP address destinations outside the stub area will be forwarded to the stub area's IP interface, and then into the backbone.

Figure 26 A Simple OSPF Domain

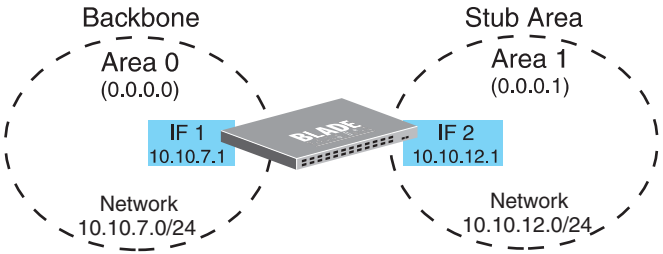

Follow this procedure to configure OSPF support as shown in Figure 26:

1. Configure IP interfaces on each network that will be attached to OSPF areas.

   In this example, two IP interfaces are needed:

   - Interface 1 for the backbone network on 10.10.7.0/24
   - Interface 2 for the stub area network on 10.10.12.0/24

```
>> # interface ip 1
>> (config-ip-if)# ip address 10.10.7.1
>> (config-ip-if)# ip netmask 255.255.255.0
>> (config-ip-if)# enable
>> (config-ip-if)# exit
>> # interface ip 2
>> (config-ip-if)# ip address 10.10.12.1
>> (config-ip-if)# ip netmask 255.255.255.0
>> (config-ip-if)# enable
>> (config-ip-if)# exit
```

2. Enable OSPF.

```
>> # router ospf
>> (config-router-ospf)# enable
```

3. Define the backbone.

   The backbone is always configured as a transit area using `areaid 0.0.0.0`.

```
>> (config-router-ospf)# area 0 area-id 0.0.0.0
>> (config-router-ospf)# area 0 type transit
>> (config-router-ospf)# area 0 enable
```

4. Define the stub area.

```
>> (config-router-ospf)# area 1 area-id 0.0.0.1
>> (config-router-ospf)# area 1 type stub
>> (config-router-ospf)# area 1 enable
>> (config-router-ospf)# exit
```

5. Attach the network interface to the backbone.

```
>> # interface ip 1
>> (config-ip-if)# ip ospf area 0
>> (config-ip-if)# ip ospf enable
>> (config-ip-if)# exit
```

6. Attach the network interface to the stub area.

```
>> # interface ip 2
>> (config-ip-if)# ip ospf area 1
>> (config-ip-if)# ip ospf enable
>> (config-ip-if)# exit
```

Example 2: Virtual Links

In the example shown in Figure 27, area 2 is not physically connected to the backbone as is usually required. Instead, area 2 will be connected to the backbone via a virtual link through area 1. The virtual link must be configured at each endpoint.

Figure 27 Configuring a Virtual Link

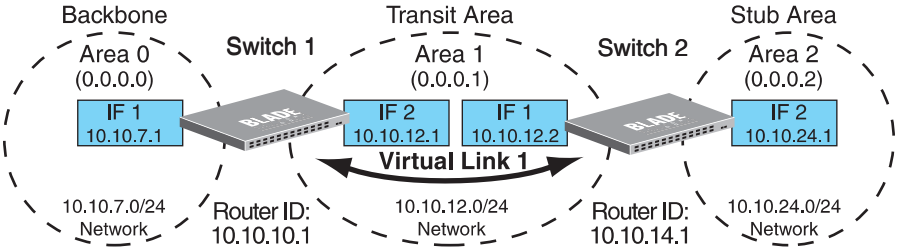

Configuring OSPF for a Virtual Link on Switch #1

1. Configure IP interfaces on each network that will be attached to the switch.

   In this example, two IP interfaces are needed:

   - Interface 1 for the backbone network on 10.10.7.0/24
   - Interface 2 for the transit area network on 10.10.12.0/24

```
>> # interface ip 1
>> (config-ip-if)# ip address 10.10.7.1
>> (config-ip-if)# ip netmask 255.255.255.0
>> (config-ip-if)# enable
>> (config-ip-if)# exit
>> # interface ip 2
>> (config-ip-if)# ip address 10.10.12.1
>> (config-ip-if)# ip netmask 255.255.255.0
>> (config-ip-if)# enable
>> (config-ip-if)# exit
```

2. Configure the router ID.

   A router ID is required when configuring virtual links. Later, when configuring the other end of the virtual link on Switch 2, the router ID specified here will be used as the target virtual neighbor (`nbr`) address.

```
>> # ip router-id 10.10.10.1
```

3. Enable OSPF.

```
>> # router ospf
>> (config-router-ospf)# enable
```

4. Define the backbone.

```
>> (config-router-ospf)# area 0 area-id 0.0.0.0
>> (config-router-ospf)# area 0 type transit
>> (config-router-ospf)# area 0 enable
```

5. Define the transit area.

   The area that contains the virtual link must be configured as a transit area.

```
>> (config-router-ospf)# area 1 area-id 0.0.0.1
>> (config-router-ospf)# area 1 type transit
>> (config-router-ospf)# area 1 enable
>> (config-router-ospf)# exit
```

6. Attach the network interface to the backbone.

```
>> # interface ip 1
>> (config-ip-if)# ip ospf area 0
>> (config-ip-if)# ip ospf enable
>> (config-ip-if)# exit
```

7. Attach the network interface to the transit area.

```
>> # interface ip 2
>> (config-ip-if)# ip ospf area 1
>> (config-ip-if)# ip ospf enable
>> (config-ip-if)# exit
```

8. Configure the virtual link.

   The `nbr` router ID configured in this step must be the same as the router ID that will be configured for Switch #2 in Step 2 on page 165.

```
>> # router ospf
>> (config-router-ospf)# area-virtual-link 1 area 1
>> (config-router-ospf)# area-virtual-link 1 neighbor-router 10.10.14.1
>> (config-router-ospf)# area-virtual-link 1 enable
```

Configuring OSPF for a Virtual Link on Switch #2

1. Configure IP interfaces on each network that will be attached to OSPF areas.

   In this example, two IP interfaces are needed:

   - Interface 1 for the transit area network on 10.10.12.0/24
   - Interface 2 for the stub area network on 10.10.24.0/24

```
>> # interface ip 1
>> (config-ip-if)# ip address 10.10.12.2
>> (config-ip-if)# ip netmask 255.255.255.0
>> (config-ip-if)# enable
>> (config-ip-if)# exit
>> # interface ip 2
>> (config-ip-if)# ip address 10.10.24.1
>> (config-ip-if)# ip netmask 255.255.255.0
>> (config-ip-if)# enable
>> (config-ip-if)# exit
```

2. Configure the router ID.

   A router ID is required when configuring virtual links. This router ID should be the same one specified as the target virtual neighbor (`nbr`) on switch 1 in Step 8 on page 164.

```
>> # ip router-id 10.10.14.1
```

3. Enable OSPF.

```
>> # router ospf
>> (config-router-ospf)# enable
```

4. Define the backbone.

   This version of BLADE OS requires that a backbone index be configured on the non-backbone end of the virtual link as follows:

```
>> (config-router-ospf)# area 0 area-id 0.0.0.0
>> (config-router-ospf)# area 0 enable
```

5. Define the transit area.

```
>> (config-router-ospf)# area 1 area-id 0.0.0.1
>> (config-router-ospf)# area 1 type transit
>> (config-router-ospf)# area 1 enable
```

6. Define the stub area.

```
>> (config-router-ospf)# area 2 area-id 0.0.0.2
>> (config-router-ospf)# area 1 type stub
>> (config-router-ospf)# area 1 enable
>> (config-router-ospf)# exit
```

7. Attach the network interface to the backbone.

```
>> # interface ip 1
>> (config-ip-if)# ip ospf area 1
>> (config-ip-if)# ip ospf enable
>> (config-ip-if)# exit
```

8. Attach the network interface to the transit area.

```
>> # interface ip 2
>> (config-ip-if)# ip ospf area 2
>> (config-ip-if)# ip ospf enable
>> (config-ip-if)# exit
```

9. Configure the virtual link.

   The `nbr` router ID configured in this step must be the same as the router ID that was configured for switch #1 in Step 2 on page 163.

```
>> # router ospf
>> (config-router-ospf)# area-virtual-link 1 area 1
>> (config-router-ospf)# area-virtual-link 1 neighbor-router 10.10.10.1
>> (config-router-ospf)# area-virtual-link 1 enable
```

Other Virtual Link Options

- You can use redundant paths by configuring multiple virtual links.
- Only the endpoints of the virtual link are configured. The virtual link path may traverse multiple routers in an area as long as there is a routable path between the endpoints.

Example 3: Summarizing Routes

By default, ABRs advertise all the network addresses from one area into another area. Route summarization can be used for consolidating advertised addresses and reducing the perceived complexity of the network.

If the network IP addresses in an area are assigned to a contiguous subnet range, you can configure the ABR to advertise a single summary route that includes all the individual IP addresses within the area.

The following example shows one summary route from area 1 (stub area) injected into area 0 (the backbone). The summary route consists of all IP addresses from 36.128.192.0 through 36.128.254.255 except for the routes in the range 36.128.200.0 through 36.128.200.255.

Figure 28 Summarizing Routes

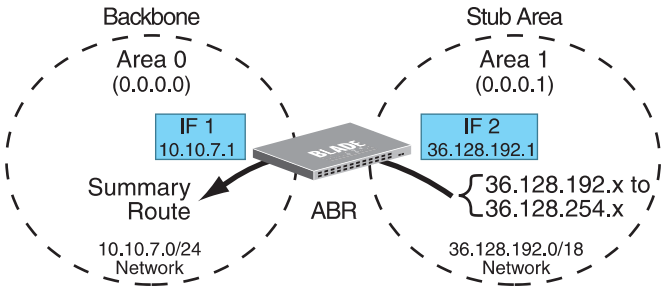

Note – You can specify a range of addresses to prevent advertising by using the hide option. In this example, routes in the range 36.128.200.0 through 36.128.200.255 are kept private.

Use the following procedure to configure OSPF support as shown in Figure 28:

1. Configure IP interfaces for each network which will be attached to OSPF areas.

```
>> # interface ip 1
>> (config-ip-if)# ip address 10.10.7.1
>> (config-ip-if)# ip netmask 255.255.255.0
>> (config-ip-if)# enable
>> (config-ip-if)# exit
>> # interface ip 2
>> (config-ip-if)# ip address 36.128.192.1
>> (config-ip-if)# ip netmask 255.255.255.0
>> (config-ip-if)# enable
>> (config-ip-if)# exit
```

2. Enable OSPF.

```
>> # router ospf
>> (config-router-ospf)# enable
```

3. Define the backbone.

```
>> (config-router-ospf)# area 0 area-id 0.0.0.0
>> (config-router-ospf)# area 0 type transit
>> (config-router-ospf)# area 0 enable
```

4. Define the stub area.

```
>> (config-router-ospf)# area 1 area-id 0.0.0.1
>> (config-router-ospf)# area 1 type stub
>> (config-router-ospf)# area 1 enable
>> (config-router-ospf)# exit
```

5. Attach the network interface to the backbone.

```
>> # interface ip 1
>> (config-ip-if)# ip ospf area 0
>> (config-ip-if)# ip ospf enable
>> (config-ip-if)# exit
```

6. Attach the network interface to the stub area.

```
>> # interface ip 2
>> (config-ip-if)# ip ospf area 1
>> (config-ip-if)# ip ospf enable
>> (config-ip-if)# exit
```

7. Configure route summarization by specifying the starting address and mask of the range of addresses to be summarized.

```
>> # router ospf
>> (config-router-ospf)# area-range 1 address 36.128.192.0 255.255.192.0
>> (config-router-ospf)# area-range 1 area 0
>> (config-router-ospf)# area-range 1 enable
```

8. Use the hide command to prevent a range of addresses from advertising to the backbone.

```
>> # router ospf
>> (config-router-ospf)# area-range 2 address 36.128.200.0 255.255.255.0
>> (config-router-ospf)# area-range 2 area 0
>> (config-router-ospf)# area-range 2 hide
>> (config-router-ospf)# exit
```

Verifying OSPF Configuration

Use the following commands to verify the OSPF configuration on your switch:

- **`show ip ospf`**
- **`show ip ospf neighbor`**
- **`show ip ospf database database-summary`**
- **`show ip ospf routes`**

Refer to the *BLADE OS Command Reference* for information on the above commands.

CHAPTER 12

IPv6 Host Management

Internet Protocol version 6 (IPv6) is a network layer protocol intended to expand the network address space. IPv6 is a robust and expandable protocol that meets the need for increased physical address space. The switch supports IPv6 host management, as defined in RFCs 2460, 2461, 2462, 2463, and 2465.

This chapter describes the basic configuration of IPv6 host management on the switch. IPv6 host management allows you to assign an IPv6 address, and manage the switch via IPv6.

IPv6 Address Format

The IPv6 address is 128 bits (16 bytes) long and is represented as a sequence of eight 16-bit hex values, separated by colons.

Each IPv6 address has two parts:

- Subnet prefix representing the network to which the interface is connected
- Local identifier, either derived from the MAC address or user-configured

The preferred format is as follows:

```
xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx
```

Example IPv6 address:

```
FEDC:BA98:7654:BA98:FEDC:1234:ABCD:5412
```

Some addresses can contain long sequences of zeros. A single contiguous sequence of zeros can be compressed to :: (two colons). For example, consider the following IPv6 address:

```
FE80:0:0:0:2AA:FF:FA:4CA2
```

The address can be compressed as follows:

```
FE80::2AA:FF:FA:4CA2
```

Unlike IPv4, a subnet mask is not used for IPv6 addresses. IPv6 uses the subnet prefix as the network identifier. The prefix is the part of the address that indicates the bits that have fixed values or are the bits of the subnet prefix. An IPv6 prefix is written in address/prefix-length notation. For example, in the following address, 64 is the network prefix:

```
21DA:D300:0000:2F3C::/64
```

IPv6 addresses can be either user-configured or automatically configured. Automatically configured addresses always have a 64-bit subnet prefix and a 64-bit interface identifier. In most implementations, the interface identifier is derived from the switch's MAC address, using a method called EUI-64.

IPv6 Address Types

IPv6 supports three types of addresses: unicast (one-to-one), multicast (one-to-many), and anycast (one-to-nearest). Multicast addresses replace the use of broadcast addresses.

Unicast Address

Unicast is a communication between a single host and a single receiver. Packets sent to a unicast address are delivered to the interface identified by that address. IPv6 defines the following types of unicast address:

- Global Unicast address: An address that can be reached and identified globally. Global Unicast addresses use the high-order bit range up to FF00, therefore all non-multicast and non-link-local addresses are considered to be global unicast. A manually configured IPv6 address must be fully specified. Autoconfigured IPv6 addresses are comprised of a prefix combined with the 64-bit EUI. RFC 4291 defines the IPv6 addressing architecture.

  The interface ID must be unique within the same subnet.

- Link-local unicast address: An address used to communicate with a neighbor on the same link. Link-local addresses use the format `FE80::EUI`

  Link-local addresses are designed to be used for addressing on a single link for purposes such as automatic address configuration, neighbor discovery, or when no routers are present.

  Routers must not forward any packets with link-local source or destination addresses to other links.

Multicast

Multicast is communication between a single host and multiple receivers. Packets are sent to all interfaces identified by that address. An interface may belong to any number of multicast groups.

A multicast address (FF00 - FFFF) is an identifier for a group interface. The multicast address most often encountered is a solicited-node multicast address using prefix `FF02::1:FF00:0000/104` with the low-order 24 bits of the unicast or anycast address.

The following well-known multicast addresses are pre-defined. The group IDs defined in this section are defined for explicit scope values, as follows:

`FF00:::::::0` through `FF0F:::::::0`

Anycast

Packets sent to an anycast address or list of addresses are delivered to the nearest interface identified by that address. Anycast is a communication between a single sender and a list of addresses.

Anycast addresses are allocated from the unicast address space, using any of the defined unicast address formats. Thus, anycast addresses are syntactically indistinguishable from unicast addresses. When a unicast address is assigned to more than one interface, thus turning it into an anycast address, the nodes to which the address is assigned must be explicitly configured to know that it is an anycast address.

IPv6 Address Autoconfiguration

IPv6 supports the following types of address autoconfiguration:

- **Stateful address configuration**

  Address configuration is based on the use of a stateful address configuration protocol, such as DHCPv6, to obtain addresses and other configuration options.

- **Stateless address configuration**

  Address configuration is based on the receipt of Router Advertisement messages that contain one or more Prefix Information options.

The switch supports stateless address configuration.

Stateless address configuration allows hosts on a link to configure themselves with link-local addresses and with addresses derived from prefixes advertised by local routers. Even if no router is present, hosts on the same link can configure themselves with link-local addresses and communicate without manual configuration.

IPv6 Interfaces

Each IPv6 interface supports multiple IPv6 addresses. You can manually configure up to two IPv6 addresses for each interface, or you can allow the switch to use stateless autoconfiguration.

You can manually configure two IPv6 addresses for each interface, as follows:

- Initial IPv6 address is a global unicast or anycast address.

```
>> # interface ip <interface number>
>> (config-ip-if)# ipv6 address <IPv6 address>
```

  Note that you cannot configure both addresses as anycast. If you configure an anycast address on the interface you must also configure a global unicast address on that interface.

- Second IPv6 address can be a unicast or anycast address.

```
>> # interface ip <interface number>
>> (config-ip-if)# ipv6 secaddr6 <IPv6 address>
```

You cannot configure an IPv4 address on an IPv6 management interface. An interface can only have either an IPv4 address or an IPv6 address configured. When changing the address version of an interface, it's old address settings are lost.

Each IPv6 interface can belong to only one VLAN. Each VLAN can support only one IPv6 interface. Each VLAN can support multiple IPv4 interfaces.

Use the following commands to configure the IPv6 gateway:

```
>> # ip gateway6 1 address <IPv6 address>
>> # ip gateway6 1 enable
```

IPv6 gateway 1 is reserved for IPv6 data interfaces. IPv6 gateway 4 is the default IPv6 management gateway.

Neighbor Discovery

Neighbor Discovery Overview

The switch uses Neighbor Discovery protocol (ND) to gather information about other router and host nodes, including the IPv6 addresses. Host nodes use ND to configure their interfaces and perform health detection. ND allows each node to determine the link-layer addresses of neighboring nodes, and to keep track of each neighbor's information. A neighboring node is a host or a router that is linked directly to the switch. The switch supports Neighbor Discovery as described in RFC 2461.

Neighbor Discover messages allow network nodes to exchange information, as follows:

- *Neighbor Solicitations* allow a node to discover information about other nodes.
- *Neighbor Advertisements* are sent in response to Neighbor Solicitations. The Neighbor Advertisement contains information required by nodes to determine the link-layer address of the sender, and the sender's role on the network.
- IPv6 hosts use *Router Solicitations* to discover IPv6 routers. When a router receives a Router Solicitation, it responds immediately to the host.
- Routers uses *Router Advertisements* to announce its presence on the network, and to provide its address prefix to neighbor devices. IPv6 hosts listen for Router Advertisements, and uses the information to build a list of default routers. Each host uses this information to perform autoconfiguration of IPv6 addresses.
- *Redirect messages* are sent by IPv6 routers to inform hosts of a better first-hop address for a specific destination. Redirect messages are only sent by routers for unicast traffic, are only unicast to originating hosts, and are only processed by hosts.

Host vs. Router

Each IPv6 interface can be configured as a router node or a host node, as follows:

- A router node's IP address is configured manually. Router nodes can send Router Advertisements.
- A host node's IP address is autoconfigured. Host nodes listen for Router Advertisements that convey information about devices on the network.

Note – All IPv6 interfaces configured on the switch can forward packets, if IP forwarding is turned on.

You can configure each IPv6 interface as either a host node or a router node. You can manually assign an IPv6 address to an interface in host mode, or the interface can be assigned an IPv6 address by an upstream router, using information from router advertisements to perform stateless auto-configuration.

To set an interface to host mode, use the following command:

```
>> # interface ip <interface number>
>> (config-ip-if)# ip6host
```

Supported Applications

The following applications have been enhanced to provide IPv6 support.

- **Ping**

  The **ping** command supports IPv6 addresses. Use the following format to ping an IPv6 address:

  ping *<host name>* | *<IPv6 address>* [*<tries (1-32)>* [*<msec delay>*]]

  To ping a link-local address (begins with FE80), provide an interface index, as follows:

  ping *<IPv6 address>*%*<Interface index>* [*<tries (1-32)>* [*<msec delay>*]]

- **Traceroute**

  The **traceroute** command supports IPv6 addresses (but not link-local addresses). Use the following format to perform a traceroute to an IPv6 address:

  traceroute *<host name>*| *<IPv6 address>* [*<max-hops (1-32)>* [*<msec delay>*]]

- **Telnet server**

  The **telnet** command supports IPv6 addresses. Use the following format to Telnet into an IPv6 interface on the switch:

  telnet *<host name>*| *<IPv6 address>* [*<port>*]

- **Telnet client**

  The **telnet** command supports IPv6 addresses, (but not link-local addresses). Use the following format to Telnet to an IPv6 address:

  telnet *<host name>*| *<IPv6 address>* [*<port>*]

- **HTTP/HTTPS**

  The HTTP/HTTPS servers support both IPv4 and IPv6 connections.

- **SSH**

  Secure Shell (SSH) connections over IPv6 are supported. The following syntax is required from the client:

  `ssh -u` *<IPv6 address>*

  Example:

  `ssh -u 2001:2:3:4:0:0:0:142`

- **TFTP**

  The TFTP commands support both IPv4 and IPv6 addresses. Link-local addresses are not supported.

- **FTP**

  The FTP commands support both IPv4 and IPv6 addresses. Link-local addresses are not supported.

- **DNS client**

  DNS commands support both IPv4 and IPv6 addresses. Link-local addresses are not supported. Use the following command to specify the type of DNS query to be sent first:

  ```
  >> # ip dns ipv6 request-version {ipv4|ipv6}
  ```

  If you set **`reqver v4`**, the DNS application sends an *A* query first, to resolve the hostname with an IPv4 address. If no *A* record is found for that hostname (no IPv4 address for that hostname) an *AAAA* query is sent to resolve the hostname with a IPv6 address.

  If you set **`reqver v6`**, the DNS application sends an *AAAA* query first, to resolve the hostname with an IPv6 address. If no *AAAA* record is found for that hostname (no IPv6 address for that hostname) an *A* query is sent to resolve the hostname with a IPv4 address.

Unsupported Features

The following IPv6 features are not supported in this release.

- Dynamic Host Control Protocol for IPv6 (DHCPv6)
- Open Shortest Path First for IPv6 (OSPFv3)
- Border Gateway Protocol for IPv6 (BGP)
- Routing Information Protocol for IPv6 (RIPng)
- Multicast Listener Discovery (MLD)

Configuration Guidelines

When you configure an interface for IPv6, consider the following guidelines:

- IPv6 only supports static routes.
- Support for subnet router anycast addresses is not available.
- A single interface can accept either IPv4 or IPv6 addresses, but not both IPv4 and IPv6 addresses.
- A single interface can accept multiple IPv6 addresses.
- A single interface can accept only one IPv4 address.
- If you change the IPv6 address of a configured interface to an IPv4 address, all IPv6 settings are deleted.
- A single VLAN can support only one IPv6 interface.
- Health checks are not supported for IPv6 gateways.
- IPv6 interfaces support Path MTU Discovery. The CPU's MTU is fixed at 1500 bytes.
- Support for jumbo frames (1,500 to 9,216byte MTUs) is limited. Any jumbo frames intended for the CPU must be fragmented by the remote node. The switch can re-assemble fragmented packets up to 9k. It can also fragment and transmit jumbo packets received from higher layers.

IPv6 Configuration Examples

This section provides steps to configure IPv6 on the switch.

IPv6 Example 1

The following example uses IPv6 host mode to autoconfigure an IPv6 address for the interface. By default, the interface is assigned to VLAN 1.

1. Enable IPv6 host mode on an interface.

```
>> # interface ip 2
>> (config-ip-if)# ip6host
>> (config-ip-if)# enable
>> (config-ip-if)# exit
```

2. Configure the IPv6 default gateway.

```
>> # ip gateway6 1 address 2001:BA98:7654:BA98:FEDC:1234:ABCD:5412
>> # ip gateway6 1 enable
```

3. Verify the interface address.

```
>> # show interface ip 2
```

IPv6 Example 2

Use the following example to manually configure IPv6 on an interface.

1. Assign an IPv6 address and prefix length to the interface.

```
>> # interface ip 3
>> (config-ip-if)# ipv6 address 2001:BA98:7654:BA98:FEDC:1234:ABCD:5214
>> (config-ip-if)# ipv6 prefixlen 64
>> (config-ip-if)# ipv6 seccaddr6 2003::1 32
>> (config-ip-if)# vlan 2
>> (config-ip-if)# enable
>> (config-ip-if)# exit
```

The secondary IPv6 address is compressed, and the prefix length is 32.

2. Configure the IPv6 default gateway.

```
>> # ip gateway6 1 address 2001:BA98:7654:BA98:FEDC:1234:ABCD:5412
>> # ip gateway6 1 enable
```

3. Configure Neighbor Discovery advertisements for the interface (optional)

```
>> # interface ip 3
>> (config-ip-if)# no ipv6 nd suppress-ra
```

4. Verify the configuration.

```
>> (config-ip-if)# show layer3
```

CHAPTER 13
IGMP

Internet Group Management Protocol (IGMP) is used by IP Multicast routers to learn about the existence of host group members on their directly attached subnet (see RFC 2236). The IP Multicast routers get this information by broadcasting IGMP Membership Queries and listening for IP hosts reporting their host group memberships. This process is used to set up a client/server relationship between an IP Multicast source that provides the data streams and the clients that want to receive the data.

The G8000 can perform IGMP Snooping, and connect to static multicast routers (Mrouters).

The following topics are discussed in this chapter:

- "IGMP Snooping" on page 181
  - "IGMPv3 Snooping" on page 183
  - "Static Multicast Router" on page 185
- "IGMP Relay" on page 186
- "IGMP Filtering" on page 188

IGMP Snooping

IGMP Snooping allows the switch to forward multicast traffic only to those ports that request it. IGMP Snooping prevents multicast traffic from being flooded to all ports. The switch learns which server hosts are interested in receiving multicast traffic, and forwards it only to ports connected to those servers.

IGMP Snooping conserves bandwidth. With IGMP Snooping, the switch learns which ports are interested in receiving multicast data, and forwards multicast data only to those ports. In this way, other ports are not burdened with unwanted multicast traffic.

The switch can sense IGMP Membership Reports from attached clients and act as a proxy to set up a dedicated path between the requesting host and a local IP Multicast router. After the pathway is established, the switch blocks the IP Multicast stream from flowing through any port that does not connect to a host member, thus conserving bandwidth.

The client-server path is set up as follows:

- An IP Multicast Router (Mrouter) sends *Membership Queries* to the switch, which forwards them to all ports in a given VLAN.
- Hosts that want to receive the multicast data stream send *Membership Reports* to the switch, which sends a proxy Membership Report to the Mrouter.
- The switch sets up a path between the Mrouter and the host, and blocks all other ports from receiving the multicast.
- Periodically, the Mrouter sends Membership Queries to ensure that the host wants to continue receiving the multicast. If a host fails to respond with a Membership Report, the Mrouter stops sending the multicast to that path.
- The host can send a *Leave Report* to the switch, which sends a proxy Leave Report to the Mrouter. The multicast path is terminated immediately.

The G8000 supports the following IGMP capacities:

- IGMP version 1, 2, and 3
- 8 VLANs
- 52 Mrouters
- 1000 multicast groups

Note – Unknown multicast traffic is sent to all ports if the flood option is disabled. To enable or disable IGMP flood, use the following command:

```
RS G8000 (config)# [no] ip igmp snoop flood
```

FastLeave

In normal IGMP operation, when the switch receives an IGMPv2 Leave message, it sends a Group-Specific Query to determine if any other devices in the same group (and on the same port) are still interested in the specified multicast group traffic. The switch removes the affiliated port from that particular group, if the following conditions apply:

- If the switch does not receive an IGMP Membership Report within the query-response-interval.
- If no multicast routers have been learned on that port.

With FastLeave enabled on the VLAN, a port can be removed immediately from the port list of the group entry when the IGMP Leave message is received, unless a multicast router was learned on the port.

Enable FastLeave only on VLANs that have only one host connected to each physical port. To enable FastLeave, use the following command:

```
RS G8000 (config)# ip igmp fastleave <VLAN number (1-4094)>
```

IGMPv3 Snooping

IGMPv3 includes new membership report messages to extend IGMP functionality. The switch provides snooping capability for all types of IGMP version 3 (IGMPv3) Membership Reports.

IGMPv3 supports Source-Specific Multicast (SSM). SSM identifies session traffic by both source and group addresses.

The IGMPv3 implementation keeps records on the multicast hosts present in the network. If a host is already registered, when it sends an IS_INC/TO_INC/IS_EXC/TO_EXC report, the switch overwrites the existing (port-host-group) registration with the new registration; the registrations of other hosts on the same group, same port are not changed. IS_INCLUDE/TO_INCLUDE reports with no source are not registered.

The switch supports the following IGMPv3 filter modes:

- INCLUDE mode: The host requests membership to a multicast group and provides a list of IP addresses from which it wants to receive traffic.
- EXCLUDE mode: The host requests membership to a multicast group and provides a list of IP addresses from which it *does not* want to receive traffic. This indicates that the host wants to receive traffic only from sources that are not part of the Exclude list. To disable snooping on EXCLUDE mode reports, use the following command:

  ```
  RS G8000 (config)# no ip igmp snoop igmpv3 exclude
  ```

By default, the switch snoops the first eight sources listed in the IGMPv3 Group Record. Use the following command to change the number of snooping sources:

```
RS G8000 (config)# ip igmp snoop igmpv3 sources <1-64>
```

IGMPv3 Snooping is compatible with IGMPv1 and IGMPv2 Snooping. You can disable snooping on version 1 and version 2 reports, using the following command:

```
RS G8000 (config)# no ip igmp snoop igmpv3 v1v2
```

IGMP Snooping Configuration Example

This section provides steps to configure IGMP Snooping on the switch.

Configure IGMP Snooping

1. Configure port and VLAN membership on the switch.
2. Enable IGMP Snooping.

```
RS G8000 (config)# ip igmp snoop enable
```

3. Add VLANs to IGMP Snooping.

```
RS G8000 (config)# ip igmp snoop vlan 1
```

4. Enable IGMPv3 Snooping (optional).

```
RS G8000 (config)# ip igmp snoop igmpv3 enable
```

5. View dynamic IGMP information.

```
RS G8000# show ip igmp groups

Note: Local groups (224.0.0.x) are not snooped/relayed and will not appear.
     Source          Group        VLAN    Port   Version   Mode  Expires  Fwd
 --------------- --------------- ------- ------ --------  ----- -------  ---
 10.1.1.1        232.1.1.1         2      4       V3       INC    4:16    Yes
 10.1.1.5        232.1.1.1         2      4       V3       INC    4:16    Yes
    *            232.1.1.1         2      4       V3       INC     -      No
 10.10.10.43     235.0.0.1         9      1       V3       INC    2:26    Yes
    *            236.0.0.1         9      1       V3       EXC     -      Yes

RS G8000# show ip igmp mrouter

VLAN      Port       Version   Expires    Max Query Resp. Time  QRV   QQIC
------    -------    --------  --------   --------------------  ---   ----

 1        4           V2       static     -                      -     -
 2        3           V3       4:09       128                    2     125
```

These commands display information about IGMP Groups and Mrouters learned by the switch.

Static Multicast Router

A static multicast router (Mrouter) can be configured for a particular port on a particular VLAN. A static Mrouter does not have to be learned through IGMP Snooping. Any data port can accept a static Mrouter.

When you configure a static Mrouter on a VLAN, it replaces any dynamic Mrouters learned through IGMP Snooping.

Configure a Static Multicast Router

1. For each MRouter, configure a port or (`1-52`), VLAN (`1-4094`) and version (`1-3`).

```
RS G8000 (config)# ip igmp mrouter 5 1 2
```

The IGMP version is set for each VLAN, and cannot be configured separately for each Mrouter.

2. Verify the configuration.

```
RS G8000# show ip igmp mrouter
```

IGMP Relay

The G8000 can act as an IGMP Relay (or IGMP Proxy) device that relays IGMP multicast messages and traffic between an Mrouter and end stations. IGMP Relay allows the G8000 to participate in network multicasts with no configuration of the various multicast routing protocols, so you can deploy it in the network with minimal effort.

To an IGMP host connected to the G8000, IGMP Relay appears to be an IGMP multicast router (Mrouter). IGMP Relay sends Membership Queries to hosts, which respond by sending an IGMP response message. A host can also send an unsolicited Join message to the IGMP Relay.

To a multicast router, IGMP Relay appears as a host. The Mrouter sends IGMP host queries to IGMP Relay, and IGMP Relay responds by forwarding IGMP host reports and unsolicited join messages from its attached hosts.

IGMP Relay also forwards multicast traffic between the Mrouter and end stations, similar to IGMP Snooping.

You can configure up to two Mrouters to use with IGMP Relay. One Mrouter acts as the primary Mrouter, and one is the backup Mrouter. The G8000 uses health checks to select the primary Mrouter.

Configuration Guidelines

Consider the following guidelines when you configure IGMP Relay:

- IGMP Relay and IGMP Snooping are mutually exclusive—if you enable IGMP Relay, you must turn off IGMP Snooping.
- Add the upstream Mrouter VLAN to the IGMP Relay list, using the following command:

```
RS G8000 (config)# ip igmp relay vlan <VLAN number>
```

- If IGMP hosts reside on different VLANs, you must:
  - Disable IGMP flooding.

    ```
    RS G8000 (config)# no ip igmp flood
    ```

  - Enable CPU forwarding to ensure that multicast data is forwarded across the VLANs.

    ```
    RS G8000 (config)# ip igmp cpu
    ```

Configure IGMP Relay

Use the following procedure to configure IGMP Relay.

1. Configure an IP interface and assign VLANs.

```
>> # interface ip 2
>> (config-ip-if)# ip address 10.10.1.1
>> (config-ip-if)# ip netmask 255.255.255.0
>> (config-ip-if)# vlan 2
>> (config-ip-if)# enable
>> (config-ip-if)# exit
>> # interface ip 3
>> (config-ip-if)# ip address 10.10.2.1
>> (config-ip-if)# ip netmask 255.255.255.0
>> (config-ip-if)# vlan 3
>> (config-ip-if)# enable
>> (config-ip-if)# exit
```

2. Turn IGMP on.

```
>> # ip igmp enable
```

3. Enable IGMP Relay and add VLANs to the downstream network.

```
>> # ip igmp relay enable
>> # ip igmp relay vlan 2
>> # ip igmp relay vlan 3
```

4. Configure the upstream Mrouters.

```
>> # ip igmp relay mrouter 1 address 100.0.1.2
>> # ip igmp relay mrouter 1 enable
>> # ip igmp relay mrouter 2 address 100.0.2.4
>> # ip igmp relay mrouter 2 enable
```

IGMP Filtering

With IGMP Filtering, you can allow or deny a port to send and receive multicast traffic to certain multicast groups. Unauthorized users are restricted from streaming multicast traffic across the network.

If access to a multicast group is denied, IGMP Membership Reports from the port are dropped, and the port is not allowed to receive IP multicast traffic from that group. If access to the multicast group is allowed, Membership Reports from the port are forwarded for normal processing.

To configure IGMP Filtering, you must globally enable IGMP filtering, define an IGMP filter, assign the filter to a port, and enable IGMP Filtering on the port. To define an IGMP filter, you must configure a range of IP multicast groups, choose whether the filter will allow or deny multicast traffic for groups within the range, and enable the filter.

Configuring the Range

Each IGMP Filter allows you to set a start and end point that defines the range of IP addresses upon which the filter takes action. Each IP address in the range must be between 224.0.1.0 and 239.255.255.255.

Configuring the Action

Each IGMP filter can allow or deny IP multicasts to the range of IP addresses configured. If you configure the filter to deny IP multicasts, then IGMP Membership Reports from multicast groups within the range are dropped. You can configure a secondary filter to allow IP multicasts to a small range of addresses within a larger range that a primary filter is configured to deny. The two filters work together to allow IP multicasts to a small subset of addresses within the larger range of addresses.

Note – Lower-numbered filters take precedence over higher-number filters. For example, the action defined for IGMP Filter 1 supersedes the action defined for IGMP Filter 2.

Configure IGMP Filtering

1. Enable IGMP Filtering on the switch.

```
>> # ip igmp filtering
```

2. Define an IGMP filter.

```
>> # ip igmp profile 1 range 224.0.1.0 226.0.0.0
>> # ip igmp profile 1 action deny
>> # ip igmp profile 1 enable
```

3. Assign the IGMP filter to a port.

```
>> # interface port 3
>> (config-if)# ip igmp profile 1
>> (config-if)# ip igmp filtering
```

CHAPTER 14
High Availability

RackSwitch G8000s support high-availability network topologies through Layer 2 Failover and an enhanced implementation of the Virtual Router Redundancy Protocol (VRRP).

The following topics are discussed in this chapter:

- "Layer 2 Failover" on page 192. This section discusses trunk failover without using VRRP.
- "VRRP Overview" on page 196. This section discusses VRRP operation and BLADE OS redundancy configurations.
- "Failover Methods" on page 198. This section describes the three modes of high availability.
- "BLADE OS Extensions to VRRP" on page 200. This section describes VRRP enhancements implemented in BLADE OS.
- "Virtual Router Deployment Considerations" on page 201. This section describes issues to consider when deploying virtual routers.
- "High Availability Configurations" on page 202. This section discusses the more useful and easily deployed redundant configurations.
  - "Active-Active Configuration" on page 202

Layer 2 Failover

The primary application for Layer 2 Failover is to support Network Adapter Teaming. With Network Adapter Teaming, all the NICs on each server share the same IP address, and are configured into a team. One NIC is the primary link, and the other is a standby link. For more details, refer to the documentation for your Ethernet adapter.

Note – Only two links per server can be used for Layer 2 Trunk Failover (one primary and one backup). Network Adapter Teaming allows only one backup NIC for each server.

Uplink Failure Detection Migration

The Uplink Failure Detection (UFD) feature found in prior versions of BLADE OS has been replaced by the Layer 2 Failover feature in BLADE OS 5.1. Layer 2 Failover includes all the capabilities of UFD, but expands on several features. While Layer 2 Failover concepts will be familiar to UFD users, their configuration commands are different.

To ease migration issues, legacy UFD commands (entered manually, or using scripts or configuration files) are automatically converted to their Layer 2 Failover equivalent. However, this conversion function may be discontinued in a future release.

The following sections in this guide discuss only Layer 2 Failover. To learn more about implementing Layer 2 Failover as a UFD user, refer to BLADE's *UFD to Failover Transition Guide*.

Monitoring Trunk Links

Layer 2 Failover can be enabled on any trunk group in the G8000, including LACP trunks. Trunks can be added to failover trigger groups. Then, if some specified number of monitor links fail, the switch disables all the control ports in the switch. When the control ports are disabled, it causes the NIC team on the affected servers to failover from the primary to the backup NIC. This process is called a failover event.

When the appropriate number of links in a monitor group return to service, the switch enables the control ports. This causes the NIC team on the affected servers to fail back to the primary switch (unless Auto-Fallback is disabled on the NIC team). The backup switch processes traffic until the primary switch's control links come up, which can take up to five seconds.

Manual Monitor Configuration

Figure 29 is a simple example of Layer 2 Failover. One G8000 is the primary, and the other is used as a backup. In this example, all ports on the primary switch belong to a single trunk group, with Layer 2 Failover enabled, and Failover Limit set to 2. If two or fewer links in trigger 1 remain active, the switch temporarily disables all control ports. This action causes a failover event on Server 1 and Server 2.

Figure 29 Basic Layer 2 Failover

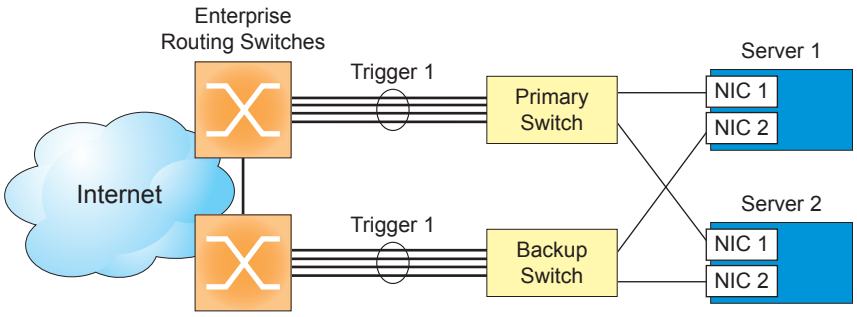

Setting the Failover Limit

The failover limit lets you specify the minimum number of operational links required within each trigger before the trigger initiates a failover event. For example, if the limit is two, a failover event occurs when the number of operational links in the trigger is two or fewer. When you set the limit to zero, the switch triggers a failover event only when no links in the trigger are operational.

Manually Monitoring Port Links

The Manual Monitor allows you to configure a set of ports and/or trunks to monitor for link failures (a monitor list), and another set of ports and/or trunks to disable when the trigger limit is reached (a control list). When the switch detects a link failure on the monitor list, it automatically disables the items in control list. When server ports are disabled, the corresponding server's network adapter can detect the disabled link, and trigger a network-adapter failover to another port or trunk on the switch, or another switch.

The switch automatically enables the control list items when the monitor list items return to service.

Monitor Port State

A monitor port is considered operation as long as the following conditions are true:

- The port must be in the `Link Up` state.
- If STP is enabled, the port must be in the `Forwarding` state.
- If the port is part of an LACP trunk, the port must be in the `Aggregated` state.

If any of the above conditions is false, the monitor port is considered to have failed.

Control Port State

A control port is considered Operational if the monitor trigger is up. As long as the trigger is up, the port is considered operational from a teaming perspective, even if the port itself is actually in the `Down` state, `Blocking` state (if STP is enabled on the port), or `Not Aggregated` state (if part of an LACP trunk).

A control port is considered to have failed on if the monitor trigger is in the `Down` state.

To view the state of any port, use one of the following commands:

```
>> # show interface link                              (View port link status)
>> # show interface port <x> spanning-tree stp <x>    (View port STP status)
>> # show lacp information                            (View port LACP status)
```

L2 Failover with Other Features

L2 Failover works together with Link Aggregation Control Protocol (LACP) and with Spanning Tree Protocol (STP), as described below.

LACP

Link Aggregation Control Protocol allows the switch to form dynamic trunks. You can use the *admin key* to add up to two LACP trunks to a failover trigger using automatic monitoring. When you add an *admin key* to a trigger, any LACP trunk with that *admin key* becomes a member of the trigger.

Spanning Tree Protocol

If Spanning Tree Protocol (STP) is enabled on the ports in a failover trigger, the switch monitors the port STP state rather than the link state. A port failure results when STP is not in a Forwarding state (that is, Listening, Learning, Blocking, or No Link). The switch automatically disables the appropriate control ports.

When the switch determines that ports in the trigger are in STP Forwarding state, then it automatically enables the appropriate control ports. The switch *fails back* to normal operation.

Configuration Guidelines

This section provides important information about configuring Layer 2 Failover.

- Any specific failover trigger can monitor ports only, static trunks only, or LACP trunks only. The different types cannot be combined in the same trigger.
- A maximum of 52 LACP keys can be added per trigger.
- Port membership for different triggers should not overlap. Any specific port should be a member of only one trigger.

Configuring Layer 2 Failover

Use the following procedure to configure basic Layer 2 Failover.

1. Specify the links to monitor.

```
>> # failover trigger 1 mmon monitor member 1-5
```

2. Specify the links to disable when the failover limit is reached.

```
>> # failover trigger 1 mmon control member 6-10
```

3. Configure general Failover parameters.

```
>> # failover enable
>> # failover trigger 1 enable
>> # failover trigger 1 limit 2
```

VRRP Overview

In a high-availability network topology, no device can create a single point-of-failure for the network or force a single point-of-failure to any other part of the network. This means that your network will remain in service despite the failure of any single device. To achieve this usually requires redundancy for all vital network components.

VRRP enables redundant router configurations within a LAN, providing alternate router paths for a host to eliminate single points-of-failure within a network. Each participating VRRP-capable routing device is configured with the same virtual router IP address and ID number. One of the virtual routers is elected as the master, based on a number of priority criteria, and assumes control of the shared virtual router IP address. If the master fails, one of the backup virtual routers will take control of the virtual router IP address and actively process traffic addressed to it.

With VRRP, Virtual Interface Routers (VIR) allow two VRRP routers to share an IP interface across the routers. VIRs provide a single Destination IP (DIP) for upstream routers to reach various servers, and provide a virtual default Gateway for the servers.

VRRP Components

Each physical router running VRRP is known as a *VRRP router*.

Virtual Router

Two or more VRRP routers can be configured to form a *virtual router* (RFC 2338). Each VRRP router may participate in one or more virtual routers. Each virtual router consists of a user-configured *virtual router identifier* (VRID) and an IP address.

Virtual Router MAC Address

The VRID is used to build the *virtual router MAC Address*. The five highest-order octets of the virtual router MAC Address are the standard MAC prefix (00-00-5E-00-01) defined in RFC 2338. The VRID is used to form the lowest-order octet.

Owners and Renters

Only one of the VRRP routers in a virtual router may be configured as the IP address owner. This router has the virtual router's IP address as its real interface address. This router responds to packets addressed to the virtual router's IP address for ICMP pings, TCP connections, and so on.

There is no requirement for any VRRP router to be the IP address owner. Most VRRP installations choose not to implement an IP address owner. For the purposes of this chapter, VRRP routers that are not the IP address owner are called *renters*.

Master and Backup Virtual Router

Within each virtual router, one VRRP router is selected to be the virtual router master. See "Selecting the Master VRRP Router" on page 198 for an explanation of the selection process.

Note – If the IP address owner is available, it will always become the virtual router master.

The virtual router master forwards packets sent to the virtual router. It also responds to Address Resolution Protocol (ARP) requests sent to the virtual router's IP address. Finally, the virtual router master sends out periodic advertisements to let other VRRP routers know it is alive and its priority.

Within a virtual router, the VRRP routers not selected to be the master are known as virtual router backups. Should the virtual router master fail, one of the virtual router backups becomes the master and assumes its responsibilities.

Virtual Interface Router

At Layer 3, a Virtual Interface Router (VIR) allows two VRRP routers to share an IP interface across the routers. VIRs provide a single Destination IP (DIP) for upstream routers to reach various destination networks, and provide a virtual default Gateway.

Note – Every VIR must be assigned to an IP interface, and every IP interface must be assigned to a VLAN. If no port in a VLAN has link up, the IP interface of that VLAN is down, and if the IP interface of a VIR is down, that VIR goes into INIT state.

VRRP Operation

Only the virtual router master responds to ARP requests. Therefore, the upstream routers only forward packets destined to the master. The master also responds to ICMP ping requests. The backup does not forward any traffic, nor does it respond to ARP requests.

If the master is not available, the backup becomes the master and takes over responsibility for packet forwarding and responding to ARP requests.

Selecting the Master VRRP Router

Each VRRP router is configured with a priority between 1–254. A bidding process determines which VRRP router is or becomes the master—the VRRP router with the highest priority.

The master periodically sends advertisements to an IP multicast address. As long as the backups receive these advertisements, they remain in the backup state. If a backup does not receive an advertisement for three advertisement intervals, it initiates a bidding process to determine which VRRP router has the highest priority and takes over as master.

If, at any time, a backup determines that it has higher priority than the current master does, it can preempt the master and become the master itself, unless configured not to do so. In preemption, the backup assumes the role of master and begins to send its own advertisements. The current master sees that the backup has higher priority and will stop functioning as the master.

A backup router can stop receiving advertisements for one of two reasons—the master can be down, or all communications links between the master and the backup can be down. If the master has failed, it is clearly desirable for the backup (or one of the backups, if there is more than one) to become the master.

Note – If the master is healthy but communication between the master and the backup has failed, there will then be two masters within the virtual router. To prevent this from happening, configure redundant links to be used between the switches that form a virtual router.

Failover Methods

With service availability becoming a major concern on the Internet, service providers are increasingly deploying Internet traffic control devices, such as application switches, in redundant configurations. BLADE OS high availability configurations are based on VRRP. The BLADE OS implementation of VRRP includes proprietary extensions.

The BLADE OS implementation of VRRP currently supports the following mode of high availability:

- **Active-Active**—based on proprietary BLADE OS extensions to VRRP

Active-Active Redundancy

In an active-active configuration, shown in Figure 30, two switches provide redundancy for each other, with both active at the same time. Each switch processes traffic on a different subnet. When a failure occurs, the remaining switch can process traffic on all subnets.

For a configuration example, see "Active-Active Configuration" on page 202.

Figure 30 Active-Active Redundancy

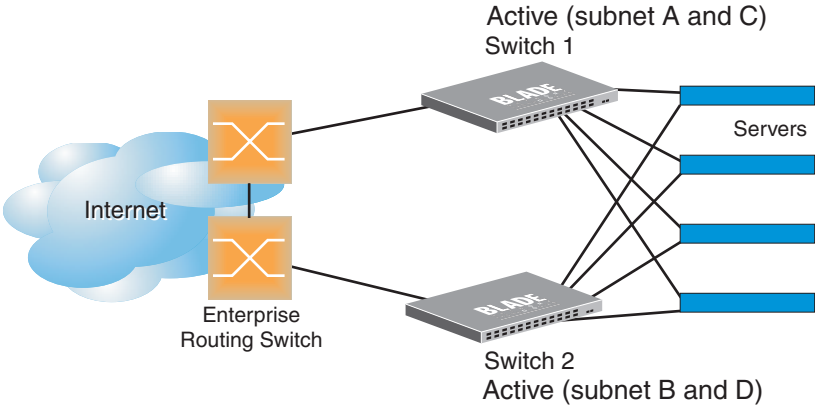

Virtual Router Group

The virtual router group ties all virtual routers on the switch together as a single entity. As members of a group, all virtual routers on the switch (and therefore the switch itself), are in either a master or standby state.

The virtual router group cannot be used for active-active configurations or any other configuration that require shared interfaces.

A VRRP group has the following characteristics:

- When enabled, all virtual routers behave as one entity, and all group settings override any individual virtual router settings.
- All individual virtual routers, once the VRRP group is enabled, assume the group's tracking and priority.
- When one member of a VRRP group fails, the priority of the group decreases, and the state of the entire switch changes from Master to Standby.

Each VRRP advertisement can include up to 128 addresses. All virtual routers are advertised within the same packet, conserving processing and buffering resources.

BLADE OS Extensions to VRRP

This section describes VRRP enhancements that are implemented in BLADE OS.

BLADE OS supports a tracking function that dynamically modifies the priority of a VRRP router, based on its current state. The objective of tracking is to have, whenever possible, the master bidding processes for various virtual routers in a LAN converge on the same switch. Tracking ensures that the selected switch is the one that offers optimal network performance. For tracking to have any effect on virtual router operation, preemption must be enabled.

BLADE OS can track the attributes listed in Table 18 (Router VRRP mode):

Table 18 VRRP Tracking Parameters

Parameter	Description
Number of IP interfaces on the switch that are active ("up") `tracking-priority-increment interfaces`	Helps elect the virtual routers with the most available routes as the master. (An IP interface is considered active when there is at least one active port on the same VLAN.) This parameter influences the VRRP router's priority in virtual interface routers.
Number of active ports on the same VLAN `tracking-priority-increment ports`	Helps elect the virtual routers with the most available ports as the master. This parameter influences the VRRP router's priority in virtual interface routers.
Number of virtual routers in master mode on the switch `tracking-priority-increment virtual-routers`	Useful for ensuring that traffic for any particular client/server pair is handled by the same switch, increasing routing efficiency. This parameter influences the VRRP router's priority in virtual interface routers.

Each tracked parameter has a user-configurable weight associated with it. As the count associated with each tracked item increases (or decreases), so does the VRRP router's priority, subject to the weighting associated with each tracked item. If the priority level of a standby is greater than that of the current master, then the standby can assume the role of the master.

See "Configuring the Switch for Tracking" on page 201 for an example on how to configure the switch for tracking VRRP priority.

Virtual Router Deployment Considerations

Assigning VRRP Virtual Router ID

During the software upgrade process, VRRP virtual router IDs will be automatically assigned if failover is enabled on the switch. When configuring virtual routers at any point after upgrade, virtual router ID numbers must be assigned. Use the following command to configure the virtual router ID:

```
>> # router vrrp
>> (config-vrrp)# virtual-router 1 virtual-router-id <1-255>
```

Configuring the Switch for Tracking

Tracking configuration largely depends on user preferences and network environment. Consider the configuration shown in Figure 30 on page 199. Assume the following behavior on the network:

- Switch 1 is the master router upon initialization.
- If switch 1 is the master and it has one fewer active servers than switch 2, then switch 1 remains the master.

  This behavior is preferred because running one server down is less disruptive than bringing a new master online and severing all active connections in the process.
- If switch 1 is the master and it has two or more active servers fewer than switch 2, then switch 2 becomes the master.
- If switch 2 is the master, it remains the master even if servers are restored on switch 1 such that it has one fewer or an equal number of servers.
- If switch 2 is the master and it has one active server fewer than switch 1, then switch 1 becomes the master.

The user can implement this behavior by configuring the switch for tracking as follows:

1. Set the priority for switch 1 to 101.
2. Leave the priority for switch 2 at the default value of 100.
3. On both switches, enable tracking based on ports, interfaces, or virtual routers. You can choose any combination of tracking parameters, based on your network configuration.

Note – There is no shortcut to setting tracking parameters. The goals must first be set and the outcomes of various configurations and scenarios analyzed to find settings that meet the goals.

High Availability Configurations

G8000s offer flexibility in implementing redundant configurations. This section discusses the more useful and easily deployed configurations:

■ "Active-Active Configuration" on page 202

Active-Active Configuration

Figure 31 shows an example configuration where two G8000s are used as VRRP routers in an active-active configuration. In this configuration, both switches respond to packets.

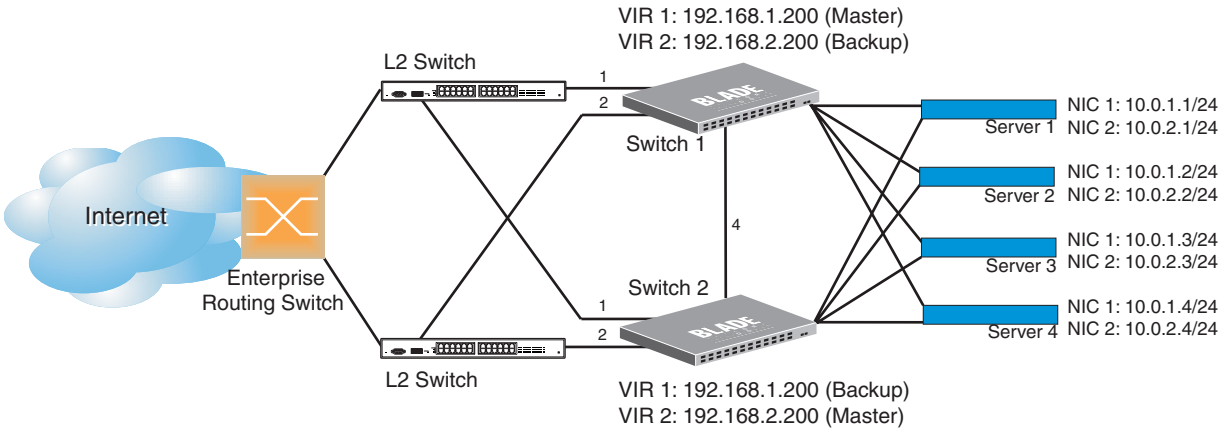

Figure 31 Active-Active High-Availability Configuration

Although this example shows only two switches, there is no limit on the number of switches used in a redundant configuration. It is possible to implement an active-active configuration across all the VRRP-capable switches in a LAN.

Each VRRP-capable switch in an active-active configuration is autonomous. Switches in a virtual router need not be identically configured.

In the scenario illustrated in Figure 31, traffic destined for IP address 10.0.1.1 is forwarded through the Layer 2 switch at the top of the drawing, and ingresses Switch 1 on port 1. Return traffic uses default gateway 1 (192.168.1.1). If the link between Switch 1 and the Layer 2 switch fails, Switch 2 becomes the Master because it has a higher priority. Traffic is forwarded to Switch 2, which forwards it to Switch 1 through port 5. Return traffic uses default gateway 2 (192.168.2.1), and is forwarded through the Layer 2 switch at the bottom of the drawing.

To implement the active-active example, perform the following switch configuration.

Task 1: Configure G8000 1

1. Configure client and server interfaces.

```
>> # interface ip 1
>> (config-ip-if)# ip address 192.168.1.100
>> (config-ip-if)# vlan 10
>> (config-ip-if)# enable
>> (config-ip-if)# exit
>> # interface ip 2
>> (config-ip-if)# ip address 192.168.2.101
>> (config-ip-if)# vlan 20
>> (config-ip-if)# enable
>> (config-ip-if)# exit
>> # interface ip 3
>> (config-ip-if)# ip address 10.0.1.100
>> (config-ip-if)# ip netmask 255.255.255.0
>> (config-ip-if)# enable
>> (config-ip-if)# exit
>> # interface ip 4
>> (config-ip-if)# ip address 10.0.2.101
>> (config-ip-if)# ip netmask 255.255.255.0
>> (config-ip-if)# enable
>> (config-ip-if)# exit
```

2. Configure the default gateways. Each default gateway points to a Layer 3 router.

```
>> # ip gateway 1 address addr 192.168.1.1
>> # ip gateway 1 enable
>> # ip gateway 2 address addr 192.168.2.1
>> # ip gateway 2 enable
```

3. Turn on VRRP and configure two Virtual Interface Routers.

```
>> # router vrrp
>> (config-vrrp)# enable
>> (config-vrrp)# virtual-router 1 virtual-router-id 1
>> (config-vrrp)# virtual-router 1 interface 1
>> (config-vrrp)# virtual-router 1 enable
>> (config-vrrp)# virtual-router 2 interface 2
>> (config-vrrp)# virtual-router 2 enable
```

4. Enable tracking on ports. Set the priority of Virtual Router 1 to 101, so that it becomes the Master.

```
>> (config-vrrp)# virtual-router 1 track ports
>> (config-vrrp)# virtual-router 1 priority 101
>> (config-vrrp)# virtual-router 2 track ports
>> (config-vrrp)# exit
```

5. Configure ports.

```
>> # vlan 10
>> (config-vlan)# enable
>> (config-vlan)# member 1
>> (config-vlan)# exit
>> # vlan 20
>> (config-vlan)# enable
>> (config-vlan)# member 2
>> (config-vlan)# exit
```

6. Turn off Spanning Tree Protocol globally.

```
>> # no spanning-tree stp 1
```

Task 2: Configure G8000 2

1. Configure client and server interfaces.

```
>> # interface ip 1
>> (config-ip-if)# ip address 192.168.1.101
>> (config-ip-if)# vlan 10
>> (config-ip-if)# enable
>> (config-ip-if)# exit
>> # interface ip 2
>> (config-ip-if)# ip address 192.168.2.100
>> (config-ip-if)# vlan 20
>> (config-ip-if)# enable
>> (config-ip-if)# exit
>> # interface ip 3
>> (config-ip-if)# ip address 10.0.1.101
>> (config-ip-if)# ip netmask 255.255.255.0
>> (config-ip-if)# enable
>> (config-ip-if)# exit
>> # interface ip 4
>> (config-ip-if)# ip address 10.0.2.100
>> (config-ip-if)# ip netmask 255.255.255.0
>> (config-ip-if)# enable
>> (config-ip-if)# exit
```

2. Configure the default gateways. Each default gateway points to a Layer 3 router.

```
>> # ip gateway 1 address addr 192.168.2.1
>> # ip gateway 1 enable
>> # ip gateway 2 address addr 192.168.1.1
>> # ip gateway 2 enable
```

3. Turn on VRRP and configure two Virtual Interface Routers.

```
>> # router vrrp
>> (config-vrrp)# enable
>> (config-vrrp)# virtual-router 1 virtual-router-id 1
>> (config-vrrp)# virtual-router 1 interface 1
>> (config-vrrp)# virtual-router 1 enable
>> (config-vrrp)# virtual-router 2 interface 2
>> (config-vrrp)# virtual-router 2 enable
```

4. Enable tracking on ports. Set the priority of Virtual Router 2 to 101, so that it becomes the Master.

```
>> (config-vrrp)# virtual-router 1 track ports
>> (config-vrrp)# virtual-router 2 track ports
>> (config-vrrp)# virtual-router 2 priority 101
>> (config-vrrp)# exit
```

5. Configure ports.

```
>> # vlan 10
>> (config-vlan)# enable
>> (config-vlan)# member 1
>> (config-vlan)# exit
>> # vlan 20
>> (config-vlan)# enable
>> (config-vlan)# member 2
>> (config-vlan)# exit
```

6. Turn off Spanning Tree Protocol globally.

```
>> # no spanning-tree stp 1
```

APPENDIX A

Monitoring Ports

The port mirroring feature in the G8000 allows you to attach a sniffer to a monitoring port that is configured to receive a copy of all packets that are forwarded from the mirrored port. The G8000 enables you to mirror port traffic for all layer 2 and layer 3. Port mirroring can be used as a troubleshooting tool or to enhance the security of your network. For example, an IDS server can be connected to the monitor port to detect intruders attacking the network.

As shown in Figure 32, port 13 is monitoring *ingress* traffic (traffic entering the switch) on port 2 and *egress* traffic (traffic leaving the switch) on port 12. You can attach a device to port 13 to monitor the traffic on ports 2 and port 12.

Figure 32 Monitoring Ports

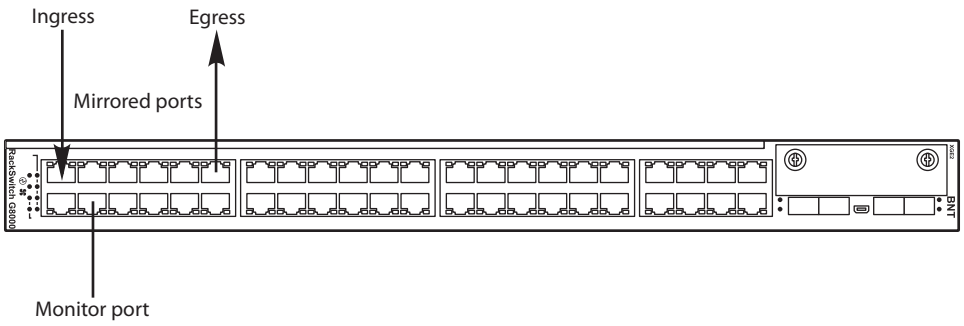

Figure 32 shows two mirrored ports monitored by a single port. Similarly, you can have a single or groups of:

- one mirrored port to one monitored port
- more than two mirrored ports to one monitored port

The G8000 supports four monitor ports. The G8000 does not support a single port being monitored by multiple ports.

Ingress and egress traffic is duplicated and sent to the monitor port after processing.

Port Mirroring Behavior

This section describes the composition of monitored packets in the switch, based on the configuration of the ports.

The following port-mirroring cases apply to the G8000:

- Ingress mirrored packets are not modified.
- Egress mirrored packets are tagged with the PVID of the egress port.

Configuring Port Mirroring

To configure port mirroring for the example shown in Figure 32:

1. Specify the monitoring port, the mirroring port(s), and the port-mirror direction.

```
RS G8000 (config)# port-mirroring monitor-port 3 mirroring-port 2 in
RS G8000 (config)# port-mirroring monitor-port 3
                   mirroring-port 12 out
```

2. Enable port mirroring.

```
RS G8000 (config)# port-mirroring enable
```

3. View the current configuration.

```
RS G8000# show port-mirroring

Port Monitoring : Enabled

Monitoring Ports Mirrored Ports
---------------- ---------------
1 none
2 none
3 (2,IN)(12,OUT)
4 none
5 none
6 none
...
```

Index

Symbols

[ ] 13

Numerics

802.1p 112
802.1Q VLAN tagging 50

A

Access Control List (ACL) 99
accessing the switch
    LDAP 34
    RADIUS authentication 27
    security 27
    TACACS+ authentication 31
    using the Browser-based Interface 19
active-active redundancy 199
administrator account 30
aggregating routes 137
    example 142
anycast address, IPv6 173
application ports 100
authenticating, in OSPF 156
autoconfiguration, IPv6 173
autonomous systems (AS) 149

B

BBI
    See Browser-Based Interface 150
Border Gateway Protocol (BGP) 131
    attributes 138
    failover configuration 140
    route aggregation 137
    route maps 133
    selecting route paths 139
Bridge Protocol Data Unit (BPDU) 74
broadcast domains 47
broadcast storm control 106
broadcast storms 106
Browser-Based Interface 150

C

Cisco EtherChannel 67, 69
CIST 81
Class of Service queue 113
command conventions 13
Command Line Interface 150
Community VLAN 61
configuration rules
    port mirroring 67
    spanning tree 67
    Trunking 67
    VLANs 67
configuring
    BGP failover 140
    IP routing 118
    OSPF 160
    port trunking 69
    spanning tree groups 83

D

default gateway 117
    configuration example 120
default password 30
default route
    OSPF 154
Differentiated Services Code Point (DSCP) 108

E

EAPoL 41
ECMP route hashing 121
ECMP static routes 121
End user access control
    configuring 38

EtherChannel 65
as used with port trunking 67, 69
Extensible Authentication Protocol over LAN (EAPoL) 41
external routing 131, 149

F

Failover 192
failover
overview 198
fault tolerance
port trunking 66
frame tagging. *See* VLANs tagging.

G

gateway. *See* default gateway.

H

high-availability 191
Host routes
OSPF 159
Hot Links 85
HP-OpenView 22

I

IBM Director 22
ICMP 99
IEEE standards
802.1D 73
802.1p 112
802.1Q 50
802.1X 41
IGMP 99, 181
IGMP Relay 186
IGMP Snooping 181
IGMPv3 183
incoming route maps 134
internal routing 131, 149
Internet Group Management Protocol (IGMP) 181
IP address
routing example 118
Telnet 17
IP interfaces
example configuration 118, 120
IP routing
cross-subnet example 115
default gateway configuration 120
IP interface configuration 118, 120
IP subnets 116
network diagram 116
subnet configuration example 117
switch-based topology 117
IP subnets 117
routing 116, 117
VLANs 47
IPv6 171
IPv6 addressing 171
ISL Trunking 65
Isolated VLAN 61

L

LACP 70
LDAP
authentication 34
Link Aggregation Control Protocol 70
Link Layer Discovery Protocol 87
LLDP 87
logical segment. *See* IP subnets.
LSAs 148

M

manual style conventions 13
meter 104
mirroring ports 207
monitoring ports 207
MSTP 81
multi-links between switches
using port trunking 65
multiple spanning tree groups 78

N

Neighbor Discovery, IPv6 175
network management 22

O

OSPF
- area types ... 146
- authentication ... 156
- configuration examples ... 161 to ??
- default route ... 154
- external routes ... 159
- filtering criteria ... 99
- host routes ... 159
- link state database ... 148
- neighbors ... 148
- overview ... 145
- redistributing routes ... 133, 137
- route maps ... 133, 135
- route summarization ... 153
- router ID ... 156
- virtual link ... 155

outgoing route maps ... 134

P

password
- administrator account ... 30
- default ... 30
- user account ... 29

Per Hop Behavior (PHB) ... 109
port mirroring ... 207
- configuration rules ... 67

Port Trunking ... 66
port trunking ... 65
- configuration example ... 68
- description ... 69
- EtherChannel ... 65
- fault tolerance ... 66

ports
- for services ... 100
- monitoring ... 207
- physical. *See* switch ports.

priority value (802.1p) ... 112
Private VLANs ... 61
promiscuous port ... 62
protocol types ... 99
PVID (port VLAN ID) ... 48
PVLAN ... 58

R

RADIUS
- authentication ... 27
- port 1812 and 1645 ... 100
- port 1813 ... 100
- SSH ... 37

redistributing routes ... 133, 137, 142
redundancy
- active-active ... 199

re-mark ... 104
RIP (Routing Information Protocol)
- advertisements ... 126
- distance vector protocol ... 125
- hop count ... 125
- TCP/IP route information ... 125
- version 1 ... 125

route aggregation ... 137, 142
route maps ... 133
- configuring ... 135
- incoming and outgoing ... 134

route paths in BGP ... 139
Router ID
- OSPF ... 156

routers ... 116, 120
- border ... 149
- peer ... 149
- port trunking ... 65
- switch-based routing topology ... 117

routes, advertising ... 149
routing ... 131
- internal and external ... 149

Routing Information Protocol. See RIP
RSA keys ... 37

S

security
- LDAP authentication ... 34
- port mirroring ... 207
- RADIUS authentication ... 27
- TACACS+ authentication ... 31
- VLANs ... 47

segmentation. *See* IP subnets.
segments. *See* IP subnets.
service ports ... 100
SNMP ... 22, 150
- HP-OpenView ... 22

Source-Specific Multicast ... 183
spanning tree
- configuration rules ... 67

Spanning-Tree Protocol
multiple instances 79
SSH
RSA host and server keys 37
SSH/SCP
configuring 36
statistical load distribution..... 65
summarizing routes 153
switch failover 198
switch ports VLANs membership 49

T

TACACS+..... 31
authentication..... 31
tagging. *See* VLANs tagging.
TCP 99
technical terms
port VLAN identifier (PVID) 50
tagged frame 50
tagged member..... 50
untagged frame..... 50
untagged member 50
VLAN identifier (VID)..... 50
text conventions 13
Trunk Hash algorithm..... 69
Trunking
configuration rules 67
typographic conventions 13

U

UDP..... 99
user account..... 29

V

virtual interface router (VIR) 196
virtual link, OSPF..... 155
Virtual Local Area Networks. *See* VLANs.
virtual router
ID numbering..... 201
virtual router group..... 199
VLANs
broadcast domains 47
configuration rules.....67
default PVID.....48
example showing multiple VLANs 55
ID numbers.....48
IP interface configuration 120
multiple spanning trees.....73
multiple VLANs.....50
port members 49
PVID 48
routing 118
security 47
Spanning-Tree Protocol.....73
tagging..... 49 to 56
topologies.....54
VRRP (Virtual Router Redundancy Protocol)
active-active redundancy 199
overview 196
virtual interface router.....196
virtual router ID numbering 201
vrid.....196